

Contents

Acknowledgments	13
Introduction	14
Chapter 1: Preliminary Setup	17
Setting Up the Camera	17
Charging and Inserting the Battery	18
Inserting the Memory Card	20
Introduction to Main Controls	27
Top of Camera	27
Back of Camera	28
Focus Switch	28
Front of Camera	28
Lens Assembly	29
Setting the Language, Date, and Time	29
Chapter 2: Basic Operations	32
Taking Pictures	32
Somewhat Automatic—Program Mode	32
Basic Settings for Taking Still Pictures	36
Focus	37
Manual Focus	40
Exposure	42
Exposure Compensation	43
Flash	45
Motion Picture Recording	48
Viewing Pictures	50
Review While in Shooting Mode	50
Reviewing Images in Playback Mode	50
Playing Movies	51
Chapter 3: The Shooting Modes	53
Program Mode	55
Shutter Priority Mode	57
Time Exposures with the T Setting	62
Aperture Priority Mode	64
Manual Exposure Mode	69
The Bulb Exposure Setting	72

Chapter 4: The Shooting Menu	74
Self-timer	77
ISO	78
Image Size	85
Image Quality	87
Dynamic Range	89
Film Simulation	92
ND Filter	94
White Balance Shift	96
Color	96
Sharpness	97
Highlight Tone	97
Shadow Tone	98
Noise Reduction	99
AF Mode	99
Flash	100
External Flash	101
Select Custom Setting	103
Edit/Save Custom Setting	104
Display Custom Setting	106
Chapter 5: Other Controls	111
Focus Switch	111
Manual Focus	112
Autofocus—Single Shot	114
Autofocus—Continuous	115
Lens Assembly	116
Autofocus Assist/Self-timer Lamp	118
Viewfinder Selector	119
Shutter Speed Dial	122
Shutter Release Button	123
Power Switch	124
Exposure Compensation Dial	124
Function Button	125
Diopter Adjustment Wheel	127
Playback Button	128
AE/zoom-in Button	128
AF/zoom-out Button	130
View Mode Button	131
Command Control	132

AFL/AEL Button	133
Indicator Lamp	134
Command Dial and Buttons	135
Command Dial	135
Menu/OK Button	136
Direction Buttons	136
Up Button: Delete/Drive Mode	137
Still Image	139
Burst Shooting	140
Exposure Bracketing	141
ISO Bracketing	142
Film Simulation Bracketing	142
Dynamic Range Bracketing	142
Motion Panorama	143
Movies	146
Right Button: Flash	146
Down Button: White Balance	147
Left Button: Macro Focus	154
Display/Back Button	155
Display Button	155
Back Button	158
Silent Mode	158
Checking and Updating Firmware	158
RAW Button	159
Chapter 6: Playback	161
Normal Playback	161
Different Playback Screens	162
Histogram	162
Index View and Enlarging Images	164
Focus Point and Information Screens	166
Marking Favorites	167
RAW Conversion	168
Viewing Shots Taken in a Burst	168
The Playback Menu	171
PhotoBook Assist	172
Image Search	175
By Date	176
By Face	177
By Favorites	177

By Type of Data	178
By Upload Mark	179
Erase	179
Mark for Upload To	180
Slide Show	181
RAW Conversion	183
Red Eye Removal	186
Protect	186
Crop	187
Resize	188
Image Rotate	189
Copy	190
Print Order	191
Display Aspect	192
Printing Images	192
Printing Directly from the Camera	193
Chapter 7: The Setup Menu	194
Date and Time	195
Time Difference	196
Language	196
Silent Mode	197
Reset	198
Format	198
Image Display	199
Frame Number	200
Shutter Volume	201
Shutter Sound	201
Playback Volume	201
LCD Brightness	202
Auto Power Off	202
Optical Viewfinder Power Save Mode	203
Quick Start Mode	203
Function Button	204
ISO Auto Control	204
AF Illuminator	205
AE/AF Lock Mode	206
AE/AF Lock Button	207
Focus Check	207
Focus Ring	208

Focus Scale Units	208
Framing Guideline	208
Color Space	210
Long Exposure Noise Reduction	210
Save Original Image	211
Autorotate Playback	211
Background Color	211
Guidance Display	212
Corrected Autofocus Frame	213
Chapter 8: Movies	214
Movie-making Overview	214
Quick Guide to Recording a Movie Clip	215
Other Settings for Movies	216
Still Photo Settings Available for Movies	216
Focus Mode	216
Aperture and Shutter Speed	217
Exposure Compensation	218
White Balance	219
Film Simulation	219
Zoom	220
Settings Not Adjustable for Movies	221
Movie Playback	221
Chapter 9: OTHER TOPICS	223
Macro (Closeup) Shooting	223
Using Flash	225
Flash Modes	225
Flash Exposure Compensation	229
Infrared Photography	229
Street Photography	232
Making 3D Images	235
Digiscoping and Astrophotography	236
Connecting to a Television Set	241
The “Sticky Aperture Blades” Problem	241
APPENDIX A: Accessories	243
Cases	243
Batteries and Chargers	245
Add-on Filters and Lenses	247
External Flash Units	248

Other Add-ons	252
APPENDIX B: Quick Tips	254
APPENDIX C: Resources	260
for Further Information	260
Photography Books	260
Web Sites	260
Digital Photography Review	261
Reviews of and Articles About the X100	261
The Official Fujifilm Site	262
Fujiguys Videos on YouTube	262
Flickr Discussion Group	263
Other X100 Forum	263
Infrared Photography	263
Index	264