

# Index

## A

- AC adapter 306
- Adobe RGB color space 255
- Advanced Anti Blur setting 89, 90, 121
- Advanced mode 83
- AE/AF-Lock Button menu option 160, 249
- AE/AF-Lock Mode menu option 160, 248
- AEL/AFL button
  - controlling behavior of 248
  - controlling function of 249
  - in general 160
  - using for autofocus in manual focus mode 138, 161, 276, 315
  - using to lock exposure or focus 160
  - using to lock focus in AF-C mode 140
- AE/Zoom-in button 190, 241
  - using to select metering method 150
  - using to zoom images in playback mode 151, 193
- AF Illuminator menu option 143, 177, 248
- AF Illuminator/self-timer lamp 143, 248
- AF Mode 125
  - not available with AF-C focus 140
  - selecting for movie recording 37
- AF/Zoom-out button 151, 191, 241
  - using in playback mode 193
  - using to call up index screens in playback mode 152
  - using to shrink images in playback mode 152
  - using to vary size and position of focus frame 151
- AlienBees ABR800 Ringflash 277, 305
- Aperture 64
  - restriction on setting f/11 69
- Aperture Priority mode 64
  - flash modes available 176
  - limitations on settings 69
  - settings 68
- Apple iTunes software 274
- Apple QuickTime software 272
- Area autofocus mode 125

- moving and resizing focus frame 126
- Aspect ratio 103
  - different ones available with X10 105
- Astia setting 113
- Astrophotography 289–293
  - settings for 293
- Audio-video cable 294
- Auto Dynamic Range setting 111
- Autoexposure bracketing 171
  - using for HDR processing 113
- Auto Flash mode 32, 34, 278, 279
- Autofocus-continuous 140
  - limitations on other settings 140
- Autofocus for movies 266
- Autofocus-single-shot 125, 139
- Auto ISO 102
  - availability in Manual exposure mode 102
- Automatic lens cap 310
- Auto mode 29, 45
  - focus options available 45
  - menu settings available 45
  - recommended settings 46
  - using 46
- Auto Power Off menu option 244
- Autorotate Playback menu option 256
- Auto White Balance setting 153
  - limitations of 156

## **B**

- Background Color menu option 257
- Battery 301
  - charging 18
  - Fujifilm NP-50 17
- Battery charger
  - Fujifilm BC-45W 17
- Battery power icon 313
- Beach setting 81
- Best Frame Capture 169
  - limitations 171

- using with self-timer 171, 178
- Blurring background 67, 142
- Bokeh 67, 87, 142
- Bracketing 171–173
  - compatibility with RAW images 166
- Burst shooting 167

## C

- C1 and C2 modes 91
- Cable release 145, 308
- Canon 430EX II flash unit 131
- Cases 298
  - Fujifilm leather case 17
- CCD sensor 51
- CMOS sensor 51
- Color setting 115
- Color Space menu option 255
- Color temperature meter 156
- Color Temperature setting for White Balance 155
- Compression of images 109
- Continuous shooting 78, 311
  - deleting shots 202
  - file names of shots 203
  - high-speed bursts 167
  - image size limitations 168
  - incompatibility with flash 35
  - incompatibility with other settings 167
  - indicator light 24
  - in general 165
  - limit on number of shots in burst 169
  - playback of shots 40, 164, 200
  - rates of speed 168
  - uses of 165
  - using for street photography 285
  - using with self-timer 169
- Controls
  - diagram of main controls 24
  - front of camera 26
  - top of camera 25

- Copy menu option 227
- Crop menu option 224
- Custom display 253
  - not available in EXR Auto mode 52, 135
- Custom Reset menu option 258
- Custom Set menu option 131
- Custom setting for White Balance
  - how to set 155
  - using for creative effects 155
- Custom shooting modes 91, 312
  - how to set up 91
  - saving settings 92

## D

- Date and time menu option
  - setting 26
- Deleting images
  - using up button 164
- Depth of field 64
- Depth of field indicator 134, 137, 253, 315
- Detailed information screens
  - calling up with main command dial 160
- Digiscoping 293
- Diopter adjustment wheel 149
- Direction buttons
  - in general 162
  - specific uses of 164
- Display Aspect menu option 231
- Display/Back button 191
  - in general 180
  - using to turn off LCD display 141
- Display Custom Setting menu option 131
- Display screens 132
  - in playback mode 182, 191
    - for videos 184
  - restrictions on availability 180
  - selecting 180
  - Standard 44
- DPOF (Digital Print Order Format) 229, 233
- Drive mode

- how to select 164
- Drive mode menu 166
- Dual IS Mode. *See* IS Mode menu option
- Dynamic Range
  - setting to highest values 55, 111
- Dynamic Range bracketing 174
- Dynamic Range setting
  - relationship to Image Size setting 108

## E

- Electronic level 133
- Enlarging images in playback mode 40, 196
- Erase Face Recognition menu option 229
- Erase menu option 215
- Exposure bracketing 171
- Exposure compensation
  - not available in Auto mode 50
  - not available in Manual exposure mode 73
  - when to use 145
- Exposure compensation for movies 269
- Exposure compensation scale 146
- Exposure for movies 269
- EXR Auto mode 29, 44, 52, 90, 125
  - basic steps for taking pictures 30
  - manual focus not available 52
  - menu settings available 45
  - recommended settings for 36
  - scene detection 53
  - settings available in 35
- EXR mode 50, 89
  - choosing a sub-mode 54
  - Dynamic Range Priority 55
  - High ISO and Low Noise 55
  - Resolution Priority 54
  - settings available 52
  - using for Dynamic Range processing 113
- EXR-Resolution Priority 54
- EXR sensor 29, 51
  - effect on image size 101, 107
  - special functions of 51

- External Flash menu option 130
- External flash unit
  - using with Fujifilm X10 camera 130
- External flash units 302
- Eye-Fi card 23

## **F**

- Facebook
  - uploading images or videos to 216
- Face Detection
  - in EXR Auto mode 53
  - playback of shots taken with 204
  - relationship to Red Eye Removal 222
- Face Detection in Movie mode 266
- Face Detection menu option 124, 247
- Face Recognition 128
- Favorites
  - marking images as 198
- Favorites display screen 183, 191
- Fill Flash 76, 279
  - using flash exposure compensation with 130
  - using for portraits 34
- Film Simulation bracketing 173
- Film Simulation for movies 269
- Film Simulation setting
  - in general 113
- Filters
  - attaching directly to lens 301
  - attaching to lens 143, 283
- Fine Image Quality setting 109
- Fireworks setting 79
- Firmware
  - updating 185
  - version 1.03 upgrade 186
- Flash
  - built-in unit 33, 35
  - diffusing 314
  - disabled in some shooting modes 174
  - disabled with certain settings 174
  - incompatibility with continuous shooting 35, 167

- optical slave trigger 304
- preventing from firing 35
- radio trigger 305
- studio type 305
- turning off 175
- use of 32, 33
- using in Auto mode 49
- Flash button 35, 174
  - locking function of 278
- Flash exposure compensation 129, 281
- Flash menu option 129, 281
- Flash mode menu 175
- Flash modes 277
  - selecting quickly 315
- Flash Off mode 278
- Flash pop-up switch 35, 174
- Flash units
  - external 302
- Flower setting 82
- Focus Check menu option 138, 252
- Focus Control Dial menu option 137, 162, 252
- Focus distance indicator 134
- Focus frame
  - changing position and size of 152
  - resizing with main command dial 152
- Focus point
  - zooming in on in playback mode 197
- Focus points
  - 49 crosses on display 151
- Focus range 178, 276
- Focus scale 253
- Focus Scale Units menu option 253
- Focus switch 136
  - setting macro focus 275
- Forced Flash 34, 176, 278, 279
- Format menu option 239
  - using for internal memory 240
- Frame Number menu option 241
- Framing guideline 133
- Framing Guideline menu option 253

- Fujifilm EF-20 flash unit 130
- Fujifilm EF-42 flash unit 130
- Fujifilm X10 camera
  - accessories shipping with 17
- Function button 96
  - assigning settings to 147
  - in general 147
- Function Button menu option 187, 245

## **G**

- Gray card
  - using to set white balance 156
- Grid
  - on shooting display 254
- Guidance Display menu option 257

## **H**

- HDMI cable 294
- HDR (High Dynamic Range) photography 70, 110, 171
- HDTV
  - connecting camera to 231
- Highlight Tone setting 116
- Histogram
  - displaying on Custom display screen 134
  - explained 192
- Histogram display screen 184, 191
- Hoya R72 infrared filter 284
- HS movie formats 265

## **I**

- Image Display menu option 40, 190, 238, 240
- Image Quality setting 108
- Image Rotate menu option 226, 257
- Image Search menu option 208
  - By Date 209
  - By Face 211
  - By Favorites 212
  - By Scene 213
  - By Type of Data 213



- By Upload Mark 214
  - Image Size setting 103
    - limitations with high ISO settings 101
    - RAW files 103
    - relationship to Dynamic Range setting 108
    - relationship to ISO setting 107
    - unavailability in some situations 103
  - Image stabilization options 246
  - Index screens 193
    - displaying in playback mode 152
    - significance of gray and green image frames 194
  - Indicator lamp 161
  - Information screens in playback mode 197
  - Infrared photography 282–283
  - Intelligent Digital Zoom 119
    - advantages of 121
    - disadvantages of 121
  - Internal memory 20
    - copying images to and from memory card 228
    - formatting 240
    - storage capacity 20
  - IS Mode menu option 246
  - ISO
    - considerations for choosing 100
    - how to set 101
    - in general 99
    - limitations on image size 101
    - limitation with RAW images 101
    - setting with Fn button or RAW button 102
  - ISO bracketing 173
- J**
- JPEG files 109, 251
- K**
- Kelvin scale for color temperature 153
- L**
- Landscape setting 78

- Language menu option 237
  - setting 28
- LCD Brightness menu option 244
- LCD display
  - adjusting brightness 244
  - turning off 181
- LCD Off display option 181, 238
- Lens
  - focal length 141
  - maximum aperture 142
- Lens adapter 143, 283, 291, 302
- Lens assembly 141
- Lens barrel 26
- Lens cap
  - automatic 310
- Lens hood 143
- Locking control buttons 163, 188, 278

## **M**

- Macro focus 77, 178
  - incompatibility with some settings 179
  - not available for movies 268
- Macro focus mode
  - selecting quickly 315
- Macro photography 275, 313
  - using self-timer or cable release 277
- Main command dial
  - in general 159
  - using as push-button 159
  - using to zoom on focus point 159
- Manual exposure mode 69
  - exposure compensation unavailable 73
  - exposure scale 72
  - flash modes available 176
  - restrictions on settings 73
  - settings 71
  - settings when manual focus is in use 72
  - using for HDR images 70
- Manual focus

- enlarging display for 138, 252
- how to set 137
- in general 137
- macro shots 276
- not available with EXR Auto mode 52
- overridden in some shooting modes 139
- reasons for using 137
- zooming in on image taken with 197
- Manual focus scale 137
- Mark for Upload to menu option 216
- Meade ETX-90/AT telescope 290
- Megapixels 104
- Memory
  - internal 20
- Memory card
  - how to choose 22
  - inserting into camera 24
  - types of 21
- Menu/OK button
  - in general 163
  - using to lock control buttons 163
  - using to return focus frame to center 152
- Metering method
  - selecting Multi, Spot, or Average 150
- Metz 36 AF-4 flash unit 131
- Monochrome setting 113
- Movie mode 36
  - Intelligent Digital Zoom not available in 119
- Movie Mode menu option 264
- Movies
  - adjusting volume 42, 272
  - autofocus options 266
  - available settings 262, 263
  - editing 43, 272
  - exposure compensation 269
  - exposure control 269
  - Film Simulation setting 269
  - high speed recording 265
  - in slide show 214
  - limitations on length 261

- overview of recording 36
- playback 41, 164, 271
- playing on portable devices 274
- quick guide to recording 261
- recording formats 264
- settings that carry over from still shooting 263
- taking still photos while recording 164, 272
- using zoom lens 270
- white balance 268
- Multi autofocus mode 125
- MultiMediaCard
  - not usable in X10 22
- My Studio software 216

## **N**

- Natural & Flash setting 76
  - comparing images in playback mode 194
  - Intelligent Digital Zoom not available with 119
- Natural Light setting 76
- Neck strap
  - attaching to camera 17
- Neutral density filter 302
- Night setting 79
- Night (Tripod) setting 79, 123
- Noise Reduction setting 117
- Normal Image Quality setting 109

## **O**

- Operation Volume menu option 241
- Optical slave unit for flash 304
- Orbs problem 186, 296

## **P**

- Panasonic DMW-FL220 flash unit 131
- Panorama 84, 256
  - playback 203
  - selecting angle 84
  - selecting direction 85
  - shooting technique 85

- tip for getting maximum resolution 87
- Parallax 149
- Party setting 81
- PhotoBook Assist menu option 205
- PhotoBooks 205–207
  - editing or deleting 208
  - selecting images for 211
- Photomatix Pro software 112, 113, 172
- Photometry 135
  - heading for metering method 150
- Photoshop Elements software 231
- Photoshop software 70, 110, 113, 222, 231
- PictBridge printing protocol 232
- Playback
  - basic operations 40, 190
  - continuous images 40, 200
  - movies 41, 271
  - panorama 203
  - reviewing images while in shooting mode 40, 190
- Playback button 149, 191, 200, 204
  - using to turn camera on and off 149, 312
- Playback menu 98, 204
- Playback mode 191
  - display screens 183
- Playback Volume menu option 243
- Portrait Enhancer setting 77, 125
- Portrait setting 77
- Power Management menu option 259
- Power saving 244, 259
- Printer
  - connecting camera to 232
- Printing images from camera 231
- Print Order menu option 229
- Pro Focus setting 87, 256
  - limitations of 89
- Program mode 56
  - shutter speed limitation 58
- Program Shift 56, 162
  - not available in some situations 57
- Pro Low-Light setting 89, 256

- limitations of 90
- Protect menu option 223
  - no protection against Format command 239
- Provia setting 113

## Q

- Quick Start Mode menu option 245

## R

- Radio trigger for flash 305
- RAW button 96, 186, 199
  - assigning settings to 187, 246
  - behavior under firmware version 1.03 187
  - locking function of 163, 189
  - using in playback mode 219
- RAW Conversion menu option 188, 199, 214, 219, 251
  - selecting settings 220, 221
- RAW files
  - different sizes of 103
- RAW format 109, 314
  - compatibility with bracketing 166
  - effect on other settings 251
  - inability to upload to Facebook 217
  - incompatible with some continuous shooting options 167
  - limitation on ISO setting 101
  - selecting with Image Search menu item 219
  - unavailable in Scene Position mode 74
- RAW+JPEG setting 109, 251
- RAW menu option 250
- Red Eye Removal 81, 256
  - and flash modes 175, 279
- Red Eye Removal menu option 222, 247
- Reset menu option 238
  - using to restore default settings 99
- Resize menu option 225
- Resolution 103
- Ring flash
  - using for macro photography 277

## S

- Save Original Image menu option 89, 256
- Scene Position mode 73
  - limitations on settings 74
- SD card 21
  - recommended speed 22
- SDHC card 21
- SDXC card 21
  - capacity of 22
- Sekonic Prodigy color meter 156
- Self-timer 314
  - and continuous shooting 169, 171, 178
  - behavior of lamp 143
  - incompatibility with some settings 178
  - setting and using 176
- Setup menu
  - designated by wrench icon 98
  - in general 234
- Shadow Tone setting 117
- Sharpness setting 83, 115
- Shooting menu
  - in general 96
  - navigating 96
  - unavailability of some items 97
- Shutter Priority mode 58
  - flash modes available 176
  - how to set 61
  - settings when using manual focus 61
  - shutter speeds available 59
- Shutter release button
  - in general 144
- Shutter Sound menu option 243
- Shutter speed
  - chart of fractional equivalents 63
- Shutter speed restrictions 62, 69
- Shutter speed settings
  - colors of numbers on screen 63
- Shutter Volume menu option 242
- Silent Mode 143, 174, 248
  - activating with Display/Back button 35, 185, 238
  - disabling flash with 35, 278

- using for street photography 286
- Silent Mode menu option 237
- Slide show
  - consisting of movies 214
- Slide Show menu option 217
  - options 218
  - selecting images or movies for 218
- Slow-motion movies 265
- Slow Synchro flash mode 79, 176, 278, 280
- SnapR strap 17
- Snow setting 80
- Soft release accessory 145, 309
- Sport setting 79
- sRGB color space 255
- Stereo Photo Maker software 288
- Still Image mode 167
- Street photography 285–286
  - recommended settings 285
  - using Silent Mode with 237
- Sub-command dial
  - in general 162
  - using for manual focus 137, 162
  - using to set aperture or shutter speed 162
- Sunset setting 80, 81
- Super Macro focus 77, 179, 275
- Suppressed Flash 278

## T

- Telescope
  - connecting to camera 291
  - focusing through 138
- Television set
  - connecting camera to 294
  - using as monitor for camera 296
- Text setting 82
- Three-dimensional photography 288
- Thumbs Up support device 309
- Time Difference menu option 236
- Time zones
  - setting different ones 236



Tracking autofocus mode 125, 127  
Two-Frame Display screen 194

## U

Underwater setting 81  
Up button  
  uses of 164  
USB cable  
  using to connect camera to computer 23  
  using to connect camera to printer 232

## V

Velvia setting 113  
Video System menu option 258  
Viewfinder 148  
  parallax error when using 149  
Virtual horizon 133  
Voice Memo 228  
  playing 229  
Volume  
  camera sounds 241  
  movie playback 42, 243, 272  
  shutter sound 242

## W

Waterfall  
  photographing with ND filter 302  
WB button 115  
  non-functional in Auto mode 50  
White Balance  
  how to set 153  
  in general 152  
  preset menu options 154  
White Balance button 152  
White Balance setting for flash 158  
White Balance setting for movies 268  
White Balance Shift menu option 115, 158  
WiFi (wireless) network 23

## **Y**

YouTube

uploading videos to 216

## **Z**

Zone focusing 315

Zooming for movies 270

Zooming on focus point in playback mode 159

Zoom ring

using to turn camera on and off 142