

# Contents

<b>Acknowledgments</b>	<b>12</b>
<b>Introduction</b>	<b>13</b>
<b>Chapter 1: Preliminary Steps</b>	<b>17</b>
Setting Up the Camera	17
Charging and Inserting the Battery	17
Inserting the Memory Card	20
Introduction to Main Controls	24
Top of Camera	25
Back of Camera	25
Front of Camera	26
Setting the Language, Date, and Time	26
<b>Chapter 2: Basic Operations</b>	<b>29</b>
Taking Pictures and Videos	29
Fully Automatic—EXR Auto Mode	29
Flash	33
Other Settings in EXR Auto Mode	35
Overview of Movie Recording	36
Viewing Pictures	40
Review While in Shooting Mode	40
Reviewing Images in Playback Mode	40
Playing Movies	41
<b>Chapter 3: The Shooting Modes</b>	<b>44</b>
Auto Mode	45
Recommended Settings	46
Shooting Menu	46
Setup Menu	47
Flash	49
Drive Mode	49
Self-timer	50
Focus Mode	50
EXR Mode	50
EXR Auto	52
Resolution Priority	54
High ISO and Low Noise	55
D-Range Priority	55
Program Mode	56
Shutter Priority Mode	58
Aperture Priority Mode	64
Manual Exposure Mode	69
Scene Position Mode	73
Natural & Flash	76
Natural Light	76
Portrait	77
Portrait Enhancer	77
Landscape	78
Sport	79
Night	79
Night (Tripod)	79

## PHOTOGRAPHER'S GUIDE TO THE FUJIFILM X10

Fireworks	79
Sunset	80
Snow	80
Beach	81
Underwater	81
Party	81
Flower	82
Text	82
Advanced Mode	83
Panorama	84
Pro Focus	87
Pro Low-Light	89
The Custom Shooting Modes: C1 and C2	91
<b>Chapter 4: The Shooting Menu</b>	<b>96</b>
ISO	99
Image Size	103
Image Quality	108
Dynamic Range	110
Film Simulation	113
White Balance Shift	115
Color	115
Sharpness	115
Highlight Tone	116
Shadow Tone	117
Noise Reduction	117
Intelligent Digital Zoom	119
Advanced Anti Blur	121
Face Detection	124
AF Mode	125
Face Recognition	128
Flash	129
External Flash	130
Custom Set	131
Display Custom Setting	131
<b>Chapter 5: Other Controls</b>	<b>136</b>
Focus Switch	136
Manual Focus	137
Autofocus—Single Shot	139
Autofocus—Continuous	140
Lens Assembly	141
Autofocus Assist/Self-timer Lamp	143
Shutter Release Button	144
Exposure Compensation Dial	145
Function Button	147
Viewfinder Window	148
Diopter Adjustment Wheel	149
Playback Button	149
AE/Zoom-in Button	150
AF/Zoom-out Button	151
White Balance Button	152
Main Command Dial	159

AEL/AFL Button	160
Indicator Lamp	161
Sub-command Dial and Buttons	162
Sub-command Dial	162
Menu/OK Button	163
Direction Buttons	164
Up Button: Delete/Drive Mode	164
Still Image	167
Burst Shooting	167
Best Frame Capture	169
Exposure Bracketing	171
ISO Bracketing	173
Film Simulation Bracketing	173
Dynamic Range Bracketing	174
Right Button: Flash	174
Down Button: Self-timer	176
Left Button: Macro Focus	178
Display/Back Button	180
Display Button	180
Back Button	185
Silent Mode	185
Checking and Updating Firmware	185
RAW Button	186
<b>Chapter 6: Playback and Printing</b>	<b>190</b>
Normal Playback	190
Different Playback Screens	191
Histogram	191
Index View and Enlarging Images	193
Focus Point and Information Screens	197
Marking Favorites	198
RAW Conversion	199
Viewing Shots Taken in a Burst	200
Playback of Panoramas	203
Viewing Shots Taken with Face Detection	204
The Playback Menu	204
PhotoBook Assist	205
Image Search	208
By Date	209
By Face	211
By Favorites	212
By Scene	213
By Type of Data	213
By Upload Mark	214
Erase	215
Mark for Upload To	216
Slide Show	217
RAW Conversion	219
Red Eye Removal	222
Protect	223
Crop	224
Resize	225

## PHOTOGRAPHER'S GUIDE TO THE FUJIFILM X10

Image Rotate	226
Copy	227
Voice Memo	228
Erase Face Recognition	229
Print Order	229
Display Aspect	231
Printing Images	231
Printing Directly from the Camera	232
<b>Chapter 7: The Setup Menu</b>	<b>234</b>
Date and Time	235
Time Difference	236
Language	237
Silent Mode	237
Reset	238
Format	239
Image Display	240
Frame Number	241
Operation Volume	241
Shutter Volume	242
Shutter Sound	243
Playback Volume	243
LCD Brightness	244
Auto Power Off	244
Quick Start Mode	245
Function Button	245
IS Mode	246
Red Eye Removal	247
AF Illuminator	248
AE/AF Lock Mode	248
AE/AF Lock Button	249
RAW	250
Focus Check	252
Focus Control Dial	252
Focus Scale Units	253
Framing Guideline	253
Color Space	255
Save Original Image	256
Autorotate Playback	256
Background Color	257
Guidance Display	257
Video System	258
Custom Reset	258
Power Management	259
<b>Chapter 8: Movies</b>	<b>260</b>
Movie-making Overview	260
Quick Guide to Recording a Movie Clip	261
Other Settings for Movies	262
Movie Mode	264
Face Detection	266
Autofocus Mode	266
White Balance	268

Exposure	269
Film Simulation	269
Zoom	270
Movie Playback	271
Taking Still Photos While Recording a Movie	272
Playing Movies on Portable Devices	274
<b>Chapter 9: OTHER TOPICS</b>	<b>275</b>
Macro (Closeup) Shooting	275
Using Flash	277
Flash Modes	277
Flash Exposure Compensation	281
Infrared Photography	282
Street Photography	285
Making 3D Images	288
Digiscoping and Astrophotography	289
Connecting to a Television Set	294
The “Orbs” Problem	296
<b>APPENDIX A: Accessories</b>	<b>298</b>
Cases	298
Batteries and Chargers	301
Add-on Filters and Lenses	301
External Flash Units	302
AC Adapter	306
Other Add-ons	308
<b>APPENDIX B: Quick Tips</b>	<b>311</b>
<b>APPENDIX C: Resources for Further Information</b>	<b>317</b>
Photography Books	317
Web Sites	317
<b>Index</b>	<b>321</b>