

Contents

Author's Note and Acknowledgments	13
Introduction	14
Chapter 1: Preliminary Setup	17
Charging and Inserting the Battery	18
Choosing and Inserting a Memory Card	21
Introduction to Main Controls	28
Top of Camera	28
Back of Camera	29
Front of Camera	30
Right Side of Camera	30
Bottom of Camera	31
Setting the Language, Date, and Time	31
Chapter 2: Basic Operations	34
Taking Pictures	34
Fully Automatic: Intelligent Auto Mode	34
Basic Variations from Fully Automatic	37
Focus	39
Manual Focus	43
Exposure	46
Exposure Compensation	46
Flash	49
Motion Picture Recording	51
Viewing Pictures	54
Basic Playback	54
Playing Movies	57
Chapter 3: The Recording Modes	61
Preliminary Steps Before Shooting Pictures	62
Intelligent Auto Mode	62
Intelligent Auto Plus	73
Program Mode	78
Aperture Priority Mode	81
Shutter Priority Mode	87
Manual Exposure Mode	92
Scene Mode	94
Portrait	97
Soft Skin	98
Scenery	98
Panorama Shot	99
Sports	103
Night Portrait	103
Night Scenery	104
Handheld Night Shot	105
HDR	105
Food	106
Baby 1 and Baby 2	107
Pet	108

Sunset	109
Glass Through	109
3D	110
Creative Control Mode	113
Expressive	119
Retro	119
High Key	119
Low Key	120
Sepia	120
Dynamic Monochrome	120
Impressive Art	121
High Dynamic	121
Cross Process	122
Toy Camera	123
Miniature	124
Soft Focus	126
Star Filter	126
One Point Color	127
Smooth Defocus	128
Radial Defocus	129
Custom Modes: C1 and C2	129
Chapter 4: The Recording Menu	130
Photo Style	134
Standard	138
Vivid	139
Natural	140
Monochrome	141
Scenery	142
Portrait	143
Custom	144
Picture Size	145
Extended Optical Zoom	146
Digital Zoom	149
Quality	150
ISO (Sensitivity)	152
ISO Limit Set	155
ISO Increments	156
Extended ISO	157
Program Diagram	159
Face Recognition	161
AF (Autofocus) Mode	163
Face Detection	164
AF Tracking	166
23-Area	167
1-Area	169
Quick AF	171
AF/AE Lock	172
Metering Mode	173
Intelligent Dynamic	177
Multiple Exposure	178
Minimum Shutter Speed	182

Intelligent Resolution	183
Intelligent Zoom	184
Digital Zoom	185
Step Zoom	185
Stabilizer	187
Autofocus Assist Lamp	188
Flash	189
Flash Synchro	190
Flash Adjustment	193
Red-eye Removal	194
Optional Viewfinder	196
Aspect Bracket	198
Time Lapse Shot	199
Date Stamp	202
Clock Set	204
Chapter 5: Other Controls	205
Aspect Ratio Switch	205
Aperture Ring	208
Focus Switch	209
Flash Open Switch	210
Mode Dial	210
Shutter Button	211
Zoom Lever	211
Power Switch	212
Movie Button	212
Play Button	213
ND/Focus Lever	214
Rear Dial	217
Exposure Compensation with Rear Dial	217
Program Shift with Rear Dial	219
Quick Menu/Trash Button	220
Quick Menu Function	220
Cancel/Trash Function	222
AF/AE Lock Button	224
Five-Button Array	225
Up Button: ISO	225
Right Button: White Balance	226
Left Button: Function (Fn)	238
Down Button: Continuous Shooting/Self-Timer	241
Burst Shooting	242
Auto Bracket	249
Self-timer	250
Center Button: Menu/Set	253
Display Button	253
Status Indicator	257
Chapter 6: Playback	258
The Playback Menus	259
The Playback Mode Menu	260
Normal Play	260
Slide Show	262
[Play] All	263

[Play] Picture Only/Video Only	265
3D Play	265
Category Selection	265
Favorite	266
Other Playback Modes	267
Filtering Play	267
Calendar	268
The Playback Menu	270
Upload Set	271
Title Edit	272
Text Stamp	273
Video Divide	274
Resize	276
Cropping	278
Leveling	279
Favorite	280
Print Set	281
Protect	282
Face Recognition Edit	283
Copy	283
Auto Retouch and Creative Retouch	285
Playback of Videos and Other Types of Files	288
Chapter 7: The Setup Menu	289
Clock Set	290
World Time	290
Travel Date	292
Beep	292
Volume	293
Custom Set Memory	294
Fn Button Set	298
LCD Display	301
LCD Mode	302
LVF Display Style	303
LCD Display Style	304
Guide Line	304
Histogram	306
Video Recording Area	308
Remaining Display	309
Highlight	310
Exposure Meter	310
Lens Resume	311
Manual Focus (MF) Assist	312
Economy	313
Play on LCD	315
Auto Review	315
Start Mode	316
Number Reset	317
Reset	318
USB Mode	319
Output	319
VIERA Link	320

3D Playback	320
Rotate Display	321
Scene Menu	322
Menu Resume	323
User's Name Recording	324
Version Display	325
Format	325
Language	326
Demo Mode	327
Chapter 8: Motion Pictures	329
Basics of LX7 Videography	329
Choosing the Shooting Mode and Other Settings	330
Creative Video Mode	332
High Speed Video Recording	335
Making Other Settings When Recording Movies	336
The Motion Picture Menu	338
Photo Style	338
Recording Mode	339
Recording Quality	340
ISO Limit Set	341
ISO Increments	342
AF Mode	342
Continuous AF	342
AF/AE Lock	342
Metering Mode	342
Intelligent Dynamic	343
Exposure Mode	343
Intelligent Resolution	343
Intelligent Zoom	343
Digital Zoom	344
Stabilizer	344
AF Assist Lamp	344
Wind Cut	344
Recording Time	345
Shooting Still Images While Recording a Video	346
Recommendations for Recording Video	347
Chapter 9: Other Topics	349
Macro (Closeup) Shooting	349
Using RAW Quality	352
Using Flash	355
Infrared Photography	358
Digiscoping and Astrophotography	361
Street Photography	365
High Dynamic Range (HDR) Photography	368
Connecting to a Television Set	373
Appendix A: ACCESSORIES	376
Cases	376
Batteries	379
AC Adapter	379
Viewfinders	381
Add-on Filters and Lenses	385

PHOTOGRAPHER'S GUIDE TO THE PANASONIC LUMIX LX7

External Flash Units	389
Cable Release Adapter	393
Automatic Lens Cap	395
APPENDIX B: QUICK TIPS	397
Appendix C: RESOURCES FOR FURTHER INFORMATION	402
Photography Books	402
Web Sites	402
LX3 Photography	403
Digital Photography Review	403
The Official Panasonic Site	403
Leica Rumors	403
Cambridge in Colour	403
Infrared Photography	404
Digiscoping	404
Reviews of the LX7	404
Index	405