

# Index

## Symbols

- 1-Area autofocus mode 40
- 1 Shot AF option 46, 238, 297
- 1st-curtain flash 188–190
- 2d-curtain flash 188–191
- 3D image
  - converting for viewing with 3D glasses 111–112
- 3D Playback menu option 317

## A

- AC adapter
  - Panasonic model no. DMW-AC5 377–378
  - using for long video recordings 343
- Adobe Bridge software 321
- Adobe Camera RAW software 351
- Adobe Photoshop software 247, 351
- Adobe Premiere Elements software 331, 351
- Adobe Premiere Pro software 343
- AF/AE Lock button 169–170, 222
  - limitations on using 170
  - using with AF Tracking 163, 222
- AF/AE Lock menu option 169–170
- AF assist lamp
  - behavior with self-timer 250–251
- AF Assist Lamp menu option 186–187
- AF (Autofocus) Mode menu option 161–169
- AF Tracking menu option 70–71, 109, 163–164, 222
  - availability with certain shooting modes 164
- Anabuilder software 112
- Aperture
  - advantages of controlling 81–83
  - relationship to depth of field 82
  - relationship to zoom level 85–86, 87, 93, 206
  - selecting intermediate values 206
  - steps for setting 84–85

- Aperture number on display screen
  - meaning of red number 86, 89
- Aperture Priority shooting mode 81–85
- Aperture ring 84, 206
  - setting to intermediate aperture values 206
  - using in Manual exposure mode 93
- Aspect Bracket menu option 196–197
  - incompatibility with other settings 197
- Aspect ratio 203–205
  - loss of pixels with various settings 142
  - relationship to picture size 142
  - selecting 34, 62
- Aspect ratio switch 203–205
  - using 34
- Astrophotography 357–360
  - settings for 360
- Audio-video cable
  - using to connect camera to TV set 370–371
- Auto Bracket option 247–248
  - incompatibility with certain settings 248
  - using for HDR images 247
- Autofocus
  - forcing use in manual focus mode 238
  - signals upon achieving focus 41
  - tracking moving subjects 70–71
- Autofocus assist lamp 186–187
- Autofocus Macro setting 207, 347
- Autofocus mode
  - 1-Area 40, 166–168
    - changing size of focus frame 167
    - moving the focus frame 166
  - 23-Area 165–167
- AF Tracking 163–164
  - availability with certain shooting modes 164
  - reasons for using 164–165
- Face Detection 161–163
  - availability with various shooting modes 163–164
  - selecting 39
- Auto LCD Off menu option 311
- Auto Power LCD option 299

Auto Retouch option 282–283  
 Auto Review menu option 312–313  
 AVCHD video format 51, 336

## B

Background  
   using aperture setting to blur 83  
 Background defocus feature 72  
 Backlight compensation 64  
 Battery  
   charging 19  
   inserting into camera 20  
   inserting into charger 19  
   Leica BP-DC10-U 376  
   Panasonic DMW-BCJ13 376  
 Beep menu option 289  
   limited choices in Snapshot mode 290  
 Bit rate 337  
 Blank LCD screen  
   with Optional Viewfinder menu option 252  
 Blurred background 83  
 Bokeh effect 72, 84  
 Brightness  
   adjusting in Snapshot Plus mode 75  
 Burst shooting 240–247  
   2 frames per second 243  
   2 frames per second with autofocus 243  
   5 frames per second 243–244  
   5 frames per second with autofocus 244  
   11 frames per second 244  
   40 frames per second 244  
   viewing images 224, 244–245, 285  
   60 frames per second 245–246  
   advantages of 240  
   and RAW quality 240  
   availability with various shooting modes 240  
   during video recording 344  
   icon indicating writing to memory 246–247  
   with flash 246

## C

- C1 and C2 shooting modes 129, 291–295
- Cable release adapter 392–393
  - Hama Cable Release for Digital Cameras 393
  - Kaiser Strap-On Cable Release Adapter 394
- Calendar view of images 56, 259
  - as playback mode 266–267
- Cases 373–374
  - Leica leather 373
  - Lowepro Inverse 100 AW Beltpack 375
  - Lowepro Rezo 60 375
  - Tamrac model no. 5692 374
- Clock Set menu option 202, 287
- Color
  - adjusting in Snapshot Plus mode 75
- Color Mode menu option 66, 134
- Color temperature
  - using to set white balance 227–229
- Compression of images 148
- Continuous AF menu option 334, 339
- Continuous shooting 75, 239–248
- Contrast
  - adjusting with Photo Style menu option 135–136
- Copy menu option 280–281
- Creative Control shooting mode 113–129
  - adjustments using 3 icons on screen 115–116
  - charts with sample images 116–118
  - compared to Photo Style menu option 136–137
  - effect of using RAW quality 114
  - general nature of 113
  - precaution to avoid shooting video with unwanted setting 114
  - settings
    - Cross Process 122
    - Dynamic Monochrome 120
    - Expressive 119
    - High Dynamic 121–122
    - High Key 119–120
    - Impressive Art 121
    - Low Key 120

- Miniature Effect 124–126
- One Point Color 127–128
- Radial Defocus 129
- Retro 119
- Sepia 120
- Smooth Defocus 128
- Soft Focus 126
- Star Filter 126
- Toy Camera 123
  - settings available or unavailable with 115
- Creative Retouch option 284
- Creative Video mode 329–333, 340, 345
  - range of shutter speeds available 330
  - selecting an exposure mode 329
- Cropping menu option 275
- Cursor buttons
  - down button
    - functions of 251
  - left button
    - general functions of 239
  - right button
    - functions of 236
  - up button 223–224
    - using for retouch functions 224
    - using to play movie 223
- Custom Set Memory menu option 129, 291–295, 341
  - table of settings that can be saved 293
- Custom shooting modes 129

## D

- Date and time
  - displaying with Display button 255
  - setting 31, 287
- Date Stamp menu option 200–201
- DC Coupler 343
  - Panasonic model no. DMW-DCC7 377
- Deleting images 220–221
- Demo Mode menu option 324
- Depth of field
  - relationship to aperture 82

- Digiscoping 357
- Digital Zoom 146–147, 183
- Display button 251–255
  - general functions of 254–255
  - using for information about scene types 96, 254
  - using to display date and time 255
  - using to switch character display for text entry 270
- Display screens 251–254
- DOF (Digital Print Order Format) 278–279

## **E**

- Economy menu option 210, 310–311
- Electronic viewfinder
  - Leica EVF3 380
  - Panasonic DMW-LVF2 300, 312, 380
- Enlarging image 56, 259
  - centered on focus point 260
- EV (exposure value) 47
- Exposure compensation 46–47
  - need to reset to zero when done 48
  - scale on display 47
- Exposure Meter menu option 84, 307
- Extended ISO menu option 154–155
- Extended Optical Zoom 143–146
  - relationship to picture size 143–146
- Eye-fi card 25

## **F**

- Face Recognition Edit menu option 280
- Face Recognition menu option 69, 158–160
- Favorite menu option 277–278
- Favorites
  - images marked as 221
  - selecting for slide show 264
- FHD setting 338
- File types
  - .mpo 112
- Filter adapter
  - Panasonic model no. DMW-FA1 355, 358, 384
  - type that attaches by bayonet mechanism 385

- Filters
  - attaching to camera 385
- Firmware
  - upgrading from current version 322
- Fish-eye lens
  - attaching to camera 386
- Five-button array 223–251
- Flash
  - using 49–50
    - in Scene mode 352
  - with burst shooting 246
- Flash Adjustment menu option 191–192
  - using with external flash 192
- Flash, built-in
  - popping up 36, 49, 208
- Flash, external 388–391
  - effect on available flash modes 188
  - Leica model no. CF22 388
  - Metz Mecablitz model no. 36 AF-4 389, 390
  - Olympus model no. FL-36R 389
  - Panasonic model no. DMW-FL220 388
  - Panasonic model no. DMW-FL360 389
  - using wireless trigger 390
- Flash mode 51, 187–188
  - Forced On 352
  - selecting 351–354
  - Slow Sync with Red-eye Reduction 352–354
- Flash open switch 208
- Flash Synchro menu option 188–191
  - availability with various shooting modes 191
- Fluorescent lights
  - setting white balance for 233
- Fn Button Set menu option 295–298
- Focal length of lens 145–146
  - 35mm-equivalent value 145
- Focus
  - locking 42
  - selecting an autofocus mode 39
- Focus Area Set option 237–238, 296
- Focus frame

- moving 40, 167–169, 168, 237–238
- Focus switch 35, 207
- Format menu option 322
- Formatting built-in memory 323
- FSH setting 337
- Function (Fn) button 236–239
  - assigning 1 Shot AF option to 46, 238, 297
  - assigning Focus Area Set option to 168, 237–238, 296
  - assigning Level Gauge option to 238–239
  - default function 236
  - functions that can be assigned to 236–237, 295–298

## **G**

- Guide Line menu option 253, 301

## **H**

- Hand Grip 396
- Happy menu option setting 67
- HDMI cable
  - using to connect camera to TV set 31, 369
- HDMI port 30
- HDR (High Dynamic Range) photography 69, 106, 365–369
  - in general 365
  - using special software 368
- HD setting 338
- HDTV Link menu option 317
- Highlight menu option 307
- High Speed video recording 332
- Histogram 303–305
  - explanation and examples 303–304
  - not available in some shooting modes 253, 303
- Hoodman Hoodloupe 3.0 382

## **I**

- Icon
  - indicating flash mode 49
  - indicating recording to internal memory 26
  - indicating recording to SD card 26
- iHandheld Nite Shot menu option 68



- iHDR menu option 68
- Image
  - enlarging on screen 56
- Image numbers 314
- Indicator light 195, 210, 255
- Infrared photography 354–357
  - problem of hot spots 356
- Intelligent Dynamic setting 175–176
- Intelligent ISO setting 152
- Intelligent Resolution setting 181–182
- Intelligent Zoom 182–183
  - compatibility with other settings 183
  - relationship to Motion Deblur 67
- Interlaced video format 337
- Internal memory 21
  - copying images to or from 280–281
  - formatting 323
- ISO 149–152
  - Auto ISO setting 152
  - availability of setting with various shooting modes 151
  - available numerical values 151
  - effects of setting on images 150
  - high settings
    - effect on image quality 155–156
    - effect on image size 152, 154
    - incompatibility with burst shooting with flash 152, 155
    - incompatibility with RAW quality 152, 155
  - how to set 149, 151–152, 223–224
  - Intelligent ISO setting 152
  - reasons for using numerical values 152
- ISO Increments menu option 153–154
- ISO Limit menu option
  - incompatibility with numerical ISO value 152
- ISO Limit Set menu option 152

## J

- JPEG image format 79, 148–149
  - size of image files 148

## **K**

Kelvins 224–225

## **L**

Language

setting 33

LCD Display menu option 298

LCD display screen

adjusting brightness and colors 298

turning off 195

LCD Display Style menu option 301

LCD Mode menu option 299

Lens cap

automatic 18, 394

error message for failure to remove 313

problem of dangling 18

Lens cap string

attaching to camera 17

Lens Resume menu option 308

Level Gauge option

assigning to Function button 238–239

Leveling menu option 276

Live View Mode menu option 311

LVF Display Style menu option 300

## **M**

Macro focus range 207, 347

Macro photography 346–349

using flash 348

Manual exposure shooting mode 92–93

display of normal exposure 93

reasons for using 92

steps for using 92–94

using for HDR photography 92

Manual focus 43–44

adjusting in autofocus mode 212–213, 222

adjusting with cursor buttons 45, 212

enlarged image to assist with 44, 308

focusing scale 44

- reasons for using 43
  - using for macro shooting 348
- Manual Focus Resume menu option 308
- Megapixels (MP) 142–143
- Memory card
- choosing type to use 21–24
  - inserting into camera 26
  - storage capacities of different sizes 22
  - varieties of 22
  - wireless types 25
- Menu Resume menu option 320
- Menu/Set button
- functions of 251
- Metering Mode menu option 171–175
- availability with various shooting modes 174
  - Center-weighted 171
  - how to set 171
  - Multiple 171
  - Spot 171–172
    - how to use 172–173
    - moving spot around screen 173
- MF Assist menu option 44, 308–309
- moving area to be enlarged 45, 212, 310
- Microphone
- location of 28
- Minimum Shutter Speed menu option 180–181
- always active in Program mode 80
- Mode dial 208–209
- Monochrome setting for Photo Style 136
- Motion Deblur menu option 67
- Motion Picture menu 335–342
- AF/AE Lock 339
  - AF Assist Lamp 341
  - Continuous AF 339
  - Digital Zoom 340
  - Exposure Mode 340
  - Intelligent Dynamic 340
  - Intelligent Resolution 340
  - Intelligent Zoom 340
  - ISO Increments 338

- ISO Limit Set 338
- Metering Mode 339
- Photo Style 335
- Recording Mode 336
- Recording Quality 337–338
- Stabilizer 341
- Wind Cut menu option 341
- Motion picture recording. *See* Video recording
- Motion pictures
  - playback. *See* Videos: playback
- Movie button 52, 210, 326
- MP4 video format 51, 336
- Multiple Exposure menu option 175–178
  - Auto Gain setting 178
  - availability with various shooting modes 179

## N

- ND/Focus lever 212–214
  - using to activate ND filter 158, 213–214
  - using to adjust manual focus 43, 212, 297
  - using to enlarge image at focus point 214, 260
  - using to scroll through images 214
- ND (neutral density) filter 157–158, 213–214
  - compatibility with various shooting modes 214
- Noise reduction
  - adjusting with Photo Style menu option 135–136
- Number Reset menu option 314

## O

- Optional Viewfinder menu option 194–195, 252

## P

- Panorama shots
  - playback 224, 285
- PhotoAcute software 247
- PhotoMatix software 247
- Photo Style menu option 134–144
  - abridged version in Snapshot mode 134
  - compared to Creative Control shooting mode 136–137

- fine-tuning parameters 135–136
- limitations 134
- Photo Style settings
  - Custom 141
  - Monochrome 139
  - Portrait 140
  - Scenery 140
  - Standard 138
  - Vivid 138
- PictBridge 316
- Picture Size menu option 142–147
  - available with RAW + JPEG setting 143
  - in Snapshot mode 65
  - relationship to aspect ratio 142
  - unavailable with RAW quality 143
- Playback menu 268–285
- Playback Mode menu 257–267
- Playback of still images
  - automatic review in shooting mode 312–313
  - burst shots 244–245
  - calendar display 259
  - enlarging images 259
  - Filtering Play option 265–266
  - index views 55, 259–260
  - navigating through images 54, 256
  - Normal Play 258–260
  - overview 54–56
- Play button 211–212
  - using to turn camera on in playback mode 211, 314
- Play on LCD menu option 312
- Power LCD option 299
- Power switch 210
- Print Set menu option 278–279
- Program Diagram menu option 156–158
- Program Shift 217–218
- Program shooting mode 38, 78–79
  - advantages of 79
  - drawbacks of 80
  - limitation on long shutter speeds 181
- Progressive video format 337

- Protected images
  - deleted by Format command 280
- Protect menu option 279
- PSH setting 337

## Q

- Quality menu option 79, 147–149
  - distinguished from Picture Size option 147–148
- Quick AF menu option 169–170
- Quick Menu (Q.Menu) button 218–220

## R

- RAW format 79
  - benefits of using 349
  - drawbacks of using 351
  - relationship to Photo Style setting 136
  - size of image files 148
- RAW + JPEG option 148–149
  - using with Creative Control shooting mode 149
- RAW option for Quality
  - unavailable with 3D setting 149
- Rear dial 215–218
  - switching functions of 89–90
  - using for adjustments in Snapshot Plus mode 74
  - using in Manual exposure mode 93
  - using to change size of focus frame 167
  - using to control exposure compensation 47, 215–216
  - using to set shutter speed 89–90, 215
- Recording menu
  - general attributes 130
  - grayed-out options 132
  - navigating in 131–132
  - using 39
- Red-eye Reduction flash setting 193, 354
- Red-eye Removal menu option 192–193
- Remaining Display menu option 306
- Reset menu option 315
- Resize menu option 274–275
- Retouch options 282–284
- Rotate Display menu option 318

## S

- Saturation
  - adjusting with Photo Style menu option 135–136
- Scene detection 63
- Scene menu 95–97
- Scene Menu menu option 319
- Scene shooting mode 94–112
  - getting information about scene types 97–115
  - limitations on settings with 97
  - selecting a scene type 95–97, 320
- Scene types
  - 3D 110–112
  - Baby 107
  - Glass Through 109
  - HDR 105
  - Night Portrait 352
  - Panorama Shot
    - playback of panoramas 285
  - Pet 108–109
  - Portrait 97–98
  - Scenery 98–99
  - settings available with (table) 112
  - Soft Skin 98
  - Sports 103
  - Sunset 109
- SD card 22
- SDHC card 22
- SDXC card 22
  - incompatibility issues 24
- Sekonic Prodigy meter 228
- Self-timer 76, 248–251
  - icon displayed on screen 250
  - limited options in Snapshot mode 249
  - options 249
  - setting for multiple shots 249
- Setup menu
  - in general 286–287
  - using 32
- Sharpness

- adjusting with Photo Style menu option 135–136
- SH setting 337
  - ability to make long recording in United States 338
- Shutter button 209
  - using to control video recording 209, 332
- Shutter Priority shooting mode 87–90
  - steps for setting 88–89
- Shutter speed
  - availability of 250-second setting 181
  - range of available settings 86, 87, 90, 181
    - 250-second setting in Manual mode 94
    - effect of ISO on available settings 94–96
  - setting with rear dial 89
  - using to create light trails 88–89
  - using to stop action 87–88
- Shutter speed number on display screen
  - distinguishing full seconds from fractions 90
  - meaning of red number 86, 89
  - mixed fractional and decimal values 91
- Single-shooting option 241
- Sleep Mode menu option 210, 311
- Slide Show menu option 260–263
  - category selection 263–264
  - controls 262
  - sound options 262
- Slow-motion video 337
- Slow Sync flash mode 103
- Snapshot Plus mode 73–74
- Snapshot shooting mode 35, 62–68
  - ability to use RAW format with 63
  - icon for 62
  - limitations on settings with 63, 77
  - Recording menu settings available with 65
- Spotting scope
  - Celestron Regal 80F-ED 361
- Stabilizer menu option 185–186
- Starting camera in playback mode 313
- Start Mode menu option 313
- Status indicator (light) 255
- Step Zoom menu option 183–185



- compatibility with other settings 185
- disadvantage of 185
- effect of 1:1 aspect ratio 184
- using with optical viewfinder 380
- Stereo Photo Maker software 111
- Street photography 362–364
  - settings for 362–363

## T

- Telescope
  - Meade ETX-90/AT 358, 358–359
- Television set
  - connecting camera to 369–371
- Text Stamp menu option 270–271
- Thumbnail images
  - for various types of images 267
- Time and date
  - setting 31
- Time Lapse Shot menu option 70, 197–200
  - playback of Time Lapse images 285
- Title Edit menu option 269–270
- Title Edit option
  - displaying characters 254
- Trash button 220–221
  - using to delete images 220–221
- Travel Date menu option 289
- TV Aspect menu option 316

## U

- USB cable
  - using to connect camera to computer or printer 31
- USB Mode menu option 316
- USB port 30
- User's Name Recording menu option 321

## V

- Version Display menu option 322
- Video Divide menu option 272–274
- Video recording

- adjusting exposure compensation 332
- available settings for 333–335
- choosing a shooting mode 327–332
- controlling aperture 330
- controlling aperture and shutter speed 330
- controlling ISO 333
- controlling shutter speed 330
- creating in-camera fades 331
- duration of recordings 338, 342–343
  - making long recordings with SH setting 342–343
- incompatibility with panorama or 3D shooting 329
- limitations on length 23
- Low Light mode 328
- Normal Motion Picture mode 328
- no way to control volume of 53
- overview 51–52
- recommended settings 344–345
- setting focus 333–334
- setting slow shutter speed 331
- shooting still images while recording video 209, 343–344
- using manual focus 334
- using Scene mode 328
- using the ND Filter 335
- zooming while recording 334
- Video Recording Area menu option 305
- Videos
  - editing in camera 272–274
  - editing on computer 59
  - playback 57–59, 285
    - controlling volume 58
  - saving single frame from 59
  - setting playback volume 290
- Viewfinders 378–382
  - Clearviewer 383
  - Hoodman Hoodloupe 3.0 382
  - Leica model no. EVF3 380
  - Panasonic model no. DMW-LVF2 380
  - Panasonic model no. DMW-VF1 379
  - reasons for using 381
  - Voigtlander 28mm 379

Viewing images  
  overview 54–56  
Volume menu option 290

## W

White balance 224–236  
  available settings 225  
  fine-tuning with color axes 230–231  
  in general 224–225  
  lack of setting for fluorescent lights 233  
  making custom setting 226–227  
  setting by color temperature 227–229  
  White Set options 226  
White balance bracketing 233–235  
Wifi network  
  transferring images with 25  
Wireless flash trigger 390  
World Time menu option 287–288  
Wrist strap 18, 374

## Z

Zoom lever 209–210  
  basic use of 37, 209–210  
  using to enlarge images 210, 259  
  using to navigate through menu screens 132, 210  
Zoom Resume menu option 308