

# Contents

<b>Author's Note</b>	<b>13</b>
<b>Introduction</b>	<b>14</b>
<b>Chapter 1: Preliminary Setup</b>	<b>17</b>
Charging and Inserting the Battery	18
Choosing and Inserting a Memory Card	21
Introduction to Main Controls	28
Top of Camera	28
Back of Camera	29
Front of Camera	30
Right Side of Camera	30
Bottom of Camera	31
Setting the Language, Date, and Time	31
<b>Chapter 2: Basic Operations</b>	<b>34</b>
Taking Pictures	34
Fully Automatic: Snapshot Mode	34
Basic Variations from Fully Automatic	37
Focus	39
Manual Focus	43
Exposure	46
Exposure Compensation	46
Flash	49
Motion Picture Recording	51
Viewing Pictures	54
Basic Playback	54
Playing Movies	57
<b>Chapter 3: The Recording Modes</b>	<b>61</b>
Preliminary Steps Before Shooting Pictures	62
Snapshot Mode	62
Snapshot Plus	73
Program Mode	78
Aperture Priority Mode	81
Shutter Priority Mode	87
Manual Exposure Mode	92
Scene Mode	94
Portrait	97
Soft Skin	98
Scenery	98
Panorama Shot	99
Sports	103
Night Portrait	103
Night Scenery	104
Handheld Night Shot	105
HDR	105
Food	106
Baby 1 and Baby 2	107
Pet	108

Sunset	109
Glass Through	109
3D	110
Creative Control Mode	113
Expressive	119
Retro	119
High Key	119
Low Key	120
Sepia	120
Dynamic Monochrome	120
Impressive Art	121
High Dynamic	121
Cross Process	122
Toy Camera	123
Miniature	124
Soft Focus	126
Star Filter	126
One Point Color	127
Smooth Defocus	128
Radial Defocus	129
Custom Modes: C1 and C2	129
<b>Chapter 4: The Recording Menu</b>	<b>130</b>
Photo Style	134
Standard	138
Vivid	138
Natural	139
Monochrome	139
Scenery	140
Portrait	140
Custom	141
Picture Size	142
Extended Optical Zoom	143
Digital Zoom	146
Quality	147
ISO (Sensitivity)	149
ISO Limit Set	152
ISO Increments	153
Extended ISO	154
Program Diagram	156
Face Recognition	158
AF (Autofocus) Mode	161
Face Detection	161
AF Tracking	163
23-Area	165
1-Area	166
Quick AF	169
AF/AE Lock	169
Metering Mode	171
Intelligent Dynamic	175
Multiple Exposure	175
Minimum Shutter Speed	180

Intelligent Resolution	181
Intelligent Zoom	182
Digital Zoom	183
Step Zoom	183
Stabilizer	185
Autofocus Assist Lamp	186
Flash	187
Flash Synchro	188
Flash Adjustment	191
Red-eye Removal	192
Optional Viewfinder	194
Aspect Bracket	196
Time Lapse Shot	197
Date Stamp	200
Clock Set	202
<b>Chapter 5: Other Controls</b>	<b>203</b>
Aspect Ratio Switch	203
Aperture Ring	206
Focus Switch	207
Flash Open Switch	208
Mode Dial	208
Shutter Button	209
Zoom Lever	209
Power Switch	210
Movie Button	210
Play Button	211
ND/Focus Lever	212
Rear Dial	215
Exposure Compensation with Rear Dial	215
Program Shift with Rear Dial	217
Quick Menu/Trash Button	218
Quick Menu Function	218
Cancel/Trash Function	220
AF/AE Lock Button	222
Five-Button Array	223
Up Button: ISO	223
Right Button: White Balance	224
Left Button: Function (Fn)	236
Down Button: Continuous Shooting/Self-Timer	239
Burst Shooting	240
Auto Bracket	247
Self-timer	248
Center Button: Menu/Set	251
Display Button	251
Status Indicator	255
<b>Chapter 6: Playback</b>	<b>256</b>
The Playback Menus	257
The Playback Mode Menu	258
Normal Play	258
Slide Show	260
[Play] All	261

[Play] Picture Only/Video Only	263
3D Play	263
Category Selection	263
Favorite	264
Other Playback Modes	265
Filtering Play	265
Calendar	266
The Playback Menu	268
Title Edit	269
Text Stamp	270
Video Divide	272
Resize	274
Cropping	275
Leveling	276
Favorite	277
Print Set	278
Protect	279
Face Recognition Edit	280
Copy	280
Auto Retouch and Creative Retouch	282
Playback of Videos and Other Types of Files	285
<b>Chapter 7: The Setup Menu</b>	<b>286</b>
Clock Set	287
World Time	287
Travel Date	289
Beep	289
Volume	290
Custom Set Memory	291
Fn Button Set	295
LCD Display	298
LCD Mode	299
EVF Display Style	300
LCD Display Style	301
Guide Line	301
Histogram	303
Video Recording Area	305
Remaining Display	306
Highlight	307
Exposure Meter	307
Lens Resume	308
Manual Focus (MF) Assist	309
Economy	310
Play on LCD	312
Auto Review	312
Start Mode	313
Number Reset	314
Reset	315
USB Mode	316
Output	316
HDTV Link	317
3D Playback	317

Rotate Display	318
Scene Menu	319
Menu Resume	320
User's Name Recording	321
Version Display	322
Format	322
Language	323
Demo Mode	324
<b>Chapter 8: Motion Pictures</b>	<b>326</b>
Basics of D-Lux 6 Videography	326
Choosing the Shooting Mode and Other Settings	327
Creative Video Mode	329
High Speed Video Recording	332
Making Other Settings When Recording Movies	333
The Motion Picture Menu	335
Photo Style	335
Recording Mode	336
Recording Quality	337
ISO Limit Set	338
ISO Increments	338
AF Mode	339
Continuous AF	339
AF/AE Lock	339
Metering Mode	339
Intelligent Dynamic	340
Exposure Mode	340
Intelligent Resolution	340
Intelligent Zoom	340
Digital Zoom	340
Stabilizer	341
AF Assist Lamp	341
Wind Cut	341
Recording Time	342
Shooting Still Images While Recording a Video	343
Recommendations for Recording Video	344
<b>Chapter 9: Other Topics</b>	<b>346</b>
Macro (Closeup) Shooting	346
Using RAW Quality	349
Using Flash	351
Infrared Photography	354
Digiscoping and Astrophotography	357
Street Photography	362
High Dynamic Range (HDR) Photography	365
Connecting to a Television Set	369
<b>Appendix A: Accessories</b>	<b>373</b>
Cases	373
Batteries	376
AC Adapter	377
Viewfinders	378
Add-on Filters and Lenses	384
External Flash Units	388

## PHOTOGRAPHER'S GUIDE TO THE LEICA D-LUX 6

Cable Release Adapter	392
Automatic Lens Cap	394
Hand Grip	396
<b>Appendix B: Quick Tips</b>	<b>397</b>
<b>Appendix C: Resources for Further Information</b>	<b>402</b>
Photography Books	402
Web Sites	402
Digital Photography Review	402
The Official Leica Site	403
Leica Rumors	403
Cambridge in Colour	403
Infrared Photography	403
Digiscoping	403
Reviews of the D-Lux 6	404
<b>Index</b>	<b>405</b>