

Contents

Author's Note	xv
Introduction	1

CHAPTER 1:	
Preliminary Setup	5
Setting Up the Camera	5
Charging and Inserting the Battery	6
Choosing and Inserting a Memory Card	9
Setting the Date, Time, and Language	16

CHAPTER 2:	
Basic Operations	19
Overview of Shooting Still Images	19
Introduction to Main Controls	19
Top of Camera	19
Back of Camera	20
Front of Camera	22
Right Side of Camera	22
Bottom of Camera	23
Fully Automatic: Intelligent Auto Mode	24
Variations from Fully Automatic	28
Photo Creativity Feature	29
Flash	36
Drive Mode: Self-Timer and Continuous Shooting	40
Tracking Focus	42
Overview of Movie Recording	44
Viewing Pictures	47
Review While in Shooting Mode	47
Reviewing Images in Playback Mode	47
Playing Movies	48

CHAPTER 3:

Shooting Modes	50
Intelligent Auto Mode	50
Superior Auto Mode	53
Program Mode	55
Aperture Priority Mode	57
Shutter Priority Mode	62
Manual Exposure Mode	65
Scene Mode	70
Portrait	74
Anti Motion Blur	75
Sports Action	76
Pet	77
Gourmet.	78
Macro	79
Landscape.	80
Sunset.	81
Night Scene	82
Hand-Held Twilight	83
Night Portrait	85
Fireworks	86
High Sensitivity	86
Sweep Panorama Mode	88
Memory Recall Mode	95

CHAPTER 4:

Shooting Menu	99
Image Size	102
Aspect Ratio	106
Quality	109
Panorama Size and Panorama Direction	112
Control with Smartphone.	113
Drive Mode.	114
Single Shooting.	115
Continuous Shooting.	116
Speed Priority Continuous Shooting	117
Self-Timer	119
Self-Portrait Timer.	121
Self-Timer (Continuous)	122
Exposure Bracketing	123

White Balance Bracket	124
Flash Mode	125
Flash Off	126
Autoflash	126
Fill-Flash	126
Slow Sync	128
Rear Sync	129
Focus Mode	131
Single-Shot AF	132
Continuous AF	133
DMF	134
Manual Focus	136
Autofocus Area	140
Multi	141
Center	142
Flexible Spot	142
Soft Skin Effect	143
Smile/Face Detection	145
Face Detection On (Registered Faces)	145
Face Detection On	146
Smile Shutter	147
Auto Object Framing	148
ISO	150
Multi Frame Noise Reduction	154
Metering Mode	156
Flash Compensation	158
White Balance	160
DRO/Auto HDR	170
Creative Style	177
Standard	182
Vivid	182
Portrait	182
Landscape	182
Sunset	182
B/W	182
Picture Effect	183
Off	186
Toy Camera	186
Pop Color	187
Posterization	188
Retro Photo	188
Soft High-Key	189

Partial Color	189
High Contrast Monochrome	191
Soft Focus	191
HDR Painting	192
Rich-Tone Monochrome	194
Miniature	194
Watercolor	196
Illustration.	197
Clear Image Zoom and Digital Zoom.	198
Long Exposure Noise Reduction	204
High ISO Noise Reduction.	204
AF Illuminator	204
SteadyShot.	205
Color Space	205
Shooting Tip List.	206
Write Date	206
Scene Selection	207
Memory Recall	208
Memory	209

CHAPTER 5:

Other Controls

210

Mode Dial	211
Shutter Button	211
Zoom Lever	212
Power Button	212
Built-in Flash	212
AF Illuminator/Self-Timer Lamp.	214
Control Ring	214
Playback Button	216
Movie Button	217
Menu Button.	218
Function Button	218
In-Camera Guide/Delete Button	220
Control Wheel and Its Buttons	223
Control Wheel.	224
Center Button.	225
AEL Toggle	226
AF/MF Control Toggle	228
Focus Magnifier	229
Direction Buttons.	230

Up Button: Display	231
Right Button: Flash Mode	231
Down Button: Photo Creativity/Exposure Compensation	232
Exposure Compensation	232
Left Button: Self-Timer/Drive Mode	235
Tilting LCD Screen	235

CHAPTER 6:

Playback and Printing **238**

Normal Playback	238
Index View and Enlarging Images	239
Different Playback Screens	241
Deleting Images with the Delete Button	244
Rotating Images with the Function Button	245
Playback Menu	246
Send to Smartphone	247
Send to Computer	250
View on TV	251
Still/Movie Select	253
Delete	254
Slide Show	256
Image Index	257
Protect	257
Specify Printing	258
Picture Effect	260
Volume Settings	261
Playback Display	262

CHAPTER 7:

Custom, Setup, and Other Menus **263**

Custom Menu	263
Finder/LCD Setting	264
Red Eye Reduction	265
Grid Line	265
Rule of Thirds Grid	266
Square Grid	267
Diagonal Plus Square Grid	267
Auto Review	268
Display Button	269
Peaking Level	273

Peaking Color	275
Control Ring.	276
Zoom Function on Ring	277
Control Ring Display	280
Function Button	281
Function of Center Button	283
Function of Left Button.	284
Function of Right Button	285
Movie Button	285
MF Assist	286
Focus Magnifier Time	287
Face Priority Tracking	288
Face Registration	289
Memory Card Tool Menu	290
Format.	290
File Number	291
Select REC Folder	292
New Folder	293
Recover Image Database	294
Display Card Space	295
Clock Setup Menu	296
Date/Time Setup	296
Area Setting	297
Setup Menu	298
Menu Start	298
Mode Dial Guide	299
LCD Brightness	300
Viewfinder Brightness	302
Power Save	302
Power Saving Start Time	303
HDMI Resolution	304
CTRL for HDMI	304
Upload Settings.	304
PAL/NTSC Selector	305
USB Connection	306
USB LUN Setting	306
USB Power Supply	307
Audio Signals	307
WPS Push	308
Access Point Settings	309
Edit Device Name.	311
Display MAC Address	312

SSID/PW Reset	312
Airplane Mode	313
Version	314
Language	315
Drop Sensor.	315
Demo Mode.	316
Initialize	317

CHAPTER 8:

Motion Pictures

319

Movie-Making Overview	319
Details of Settings for Shooting Movies	321
Movie Menu.	321
File Format	322
Record Setting	324
60i and 60p Video Formats	324
24p Video Formats	325
MP4 Formats	326
Image Size (Dual Recording)	327
SteadyShot.	328
Audio Recording.	329
Wind Noise Reduction.	330
Movie (Exposure Mode)	330
Program Auto	331
Aperture Priority	332
Shutter Priority	333
Manual Exposure	334
Effects of Mode Dial Position on Recording Movies.	336
Effects of Shooting Menu Settings on Recording Movies.	337
Effects of Physical Controls When Recording Movies	340
Summary of Options for Recording Movies	344
Movie Playback	347
Editing Movies	350

CHAPTER 9:

Other Topics

352

Connections Using Wi-Fi and NFC	352
Sending Images to a Computer	352
Sending Images to a Smartphone	357
Connecting with NFC	360

Using a Smartphone or Tablet as a Remote Control	363
Macro (Closeup) Shooting.	369
Using Raw Quality	372
Low-Light Photography	375
Street Photography	383
Astrophotography and Digiscoping	386
Infrared Photography	390
Connecting to a Television Set	391

APPENDIX A:

Accessories	394
Cases	394
Batteries and Chargers	398
Add-On Filters and Lenses.	400
Grip.	402
Remote Control	403
External Flash	406
Viewfinders.	416
External Microphone	422
Tripod Usage.	423

APPENDIX B:

Quick Tips	426
-------------------	------------

APPENDIX C:

Resources for Further Information	431
Books.	431
Websites and Videos.	432
Digital Photography Review	432
Reviews and Demonstrations of the RX100 II	432
The Official Sony Site	434
Information About Video Settings	434
Equipment Suppliers	435

Abbreviations	436
----------------------	------------

Index	438
--------------	------------