

Contents

Author's Note	xv
Introduction	1

CHAPTER 1: Preliminary Setup **5**

Setting Up the Camera	5
Charging and Inserting the Battery	5
Inserting the Memory Card.	8
Introduction to Main Controls	14
Top of Camera	14
Back of Camera—Right Side.	15
Back of Camera—Left Side.	17
Focus Switch	18
Front of Camera.	18
Bottom of Camera	19
Setting the Language, Date, and Time	20

CHAPTER 2: Basic Operations **24**

Taking Pictures.	24
Somewhat Automatic—Program Mode	24
Basic Settings for Taking Still Pictures.	29
Focus	30
Manual Focus	35
Exposure	37
Exposure Compensation	37
Flash.	39
Motion Picture Recording.	44
Viewing Pictures.	47
Review While in Shooting Mode.	47

Reviewing Images in Playback Mode	48
Playing Movies	49

CHAPTER 3:

The Shooting Modes 51

Program Mode	53
Shutter Priority Mode	59
Time Exposures with the T Setting	64
Aperture Priority Mode	66
Manual Exposure Mode	72
The Bulb Exposure Setting	77

CHAPTER 4:

The Shooting Menu 79

Self-timer	84
ISO	86
Image Size	94
Image Quality	98
Dynamic Range	100
Film Simulation	104
Film Simulation Bracket	107
ND Filter	109
Color	112
Sharpness	113
Highlight Tone	114
Shadow Tone	115
Noise Reduction	117
Long Exposure Noise Reduction	117
Select Custom Setting	118
Edit/Save Custom Setting	119
Function Button	123
Display Custom Setting	127
Framing Guideline	135
Wide Conversion Lens	137
MF Assist	137
Advanced Filter	143
Off	144
Toy Camera	144
Miniature	146
Pop Color	147

High-key	148
Low-key	149
Dynamic Tone	149
Soft Focus	150
Partial Color	150
AF Mode	151
AF Illuminator	155
AE/AF Lock Mode	156
AE/AF Lock Button	157
Corrected AF Frame	158
Flash	159
Red Eye Removal	160
Save Original Image	162

CHAPTER 5:

Physical Controls

163

Focus Switch	163
Manual Focus	164
Autofocus–Single Shot	166
Autofocus–Continuous	167
Lens Assembly	169
AF Illuminator/Self-timer Lamp	171
Viewfinder Selector	172
Shutter Speed Dial	174
Shutter Release Button	175
Power Button	176
Exposure Compensation Dial	177
Function Button	178
Diopter Adjustment Wheel	179
Playback Button	179
AE/Zoom-in Button	180
Zoom-in Button	182
Drive/Zoom-out Button	182
Still Image	184
Burst Shooting	185
Exposure Bracketing	188
ISO Bracketing	189
Film Simulation Bracketing	190
Dynamic Range Bracketing	191
Multiple Exposure	192
Motion Panorama	196

Movies	200
Zoom-out Button	200
View Mode Button	201
Command Control	202
AFL/AEL Button	204
Indicator Lamp	205
Command Dial and Buttons	206
Command Dial	206
Menu/OK Button	207
Direction Buttons	207
Up Button: AF/Delete	208
Right Button: Flash	210
Down Button: White Balance	212
Left Button: Macro Focus	221
Display/Back Button	223
Display Button	223
Back Button	227
Silent Mode	228
Checking and Updating Firmware	229
Q Button	230

CHAPTER 6:

Playback **233**

Normal Playback	233
Different Playback Screens	234
Histogram	237
Index View and Enlarging Images	239
Focus Point and Information Screens	242
RAW Conversion	244
Viewing Shots Taken in a Burst	244
The Playback Menu	247
Raw Conversion	248
Erase	253
Crop	255
Resize	256
Protect	258
Image Rotate	260
Red Eye Removal	260
Slide Show	262
PhotoBook Assist	264
Mark for Upload To	269

Image Search	271
By Date	271
By Face	273
By Favorites	274
By Type of Data	275
By Upload Mark	276
Copy.	276
Print Order (DPOF)	278
Display Aspect	279
Playback Volume	281
Printing Images	282
Printing Directly from the Camera	283
Images Taken with Other Cameras	284

CHAPTER 7:

The Setup Menu 286

Date and Time	288
Time Difference	289
Language	291
Reset	291
Silent Mode	293
Frame Number.	294
Focus Ring	295
Focus Check	296
Focus Scale Units	298
Sound Set-up	299
Operation Volume	299
Shutter Volume	300
Shutter Sound	300
Screen Set-up	301
Image Display.	301
EVF/LCD Brightness.	302
Monitor Sunlight Mode.	303
Autorotate Playback	304
Background Color	305
Power Management.	307
Auto Power Off	307
High Performance	308
Optical Viewfinder Power Save Mode.	308
Shutter Count	309
Color Space	310

Eye-Fi Transfer	311
Format	312

CHAPTER 8:

Movies **314**

Movie-making Overview	314
Quick Guide to Recording a Movie Clip.	315
Other Settings for Movies	316
Special Settings for Movie Recording	316
Movie Mode	317
Microphone Level Adjustment	318
Still Photo Settings Available for Movies.	319
Focus Mode	320
Aperture and Shutter Speed	320
Exposure Compensation	322
White Balance	322
Film Simulation	323
Function Button	323
Settings Not Adjustable for Movies	324
Movie Playback	325

CHAPTER 9:

OTHER TOPICS **328**

Macro (Closeup) Shooting.	328
Using Flash.	331
Flash Modes.	331
Flash Exposure Compensation.	339
Infrared Photography	340
Street Photography	341
Digiscoping and Astrophotography	344
Using Raw Quality	349
Connecting to a Television Set	351

APPENDIX A:

Accessories **353**

Cases	353
Batteries and Chargers	356
Add-on Filters and Lenses.	358
External Flash Units	361

Wide Conversion Lens	367
External Microphones	369
AC Adapter.	371
Other Add-ons.	373
APPENDIX B :	
Quick Tips	376
APPENDIX C:	
Resources for Further Information	382
Photography Books	382
Web Sites.	383
Digital Photography Review	383
Reviews of and Articles About the X100S	383
The Official Fujifilm Site.	384
Fujiguys Videos on YouTube	384
Other X100S Forums	384
Infrared Photography.	385
Index	386