

Index

Symbols

- 4K Still Image Playback menu option 268
- 24p video formats 362
- 60i and 60p video formats 361

A

- AC adapter
 - Sony model AC-PW20 443
- Access lamp
 - behavior with continuous shooting 112
- Access Point Settings menu option 396, 420–421
- Add-on lenses and converters 445
- Adobe Camera Raw software 169, 431
- Adobe Lightroom software 165
- Adobe Photoshop Elements software 431
- Adobe Photoshop software 165, 169, 431
 - using to create HDR images 164
- Adobe Premiere Pro software 391
- Adobe RGB color space 205
- AEL button
 - assigning a function to 314
 - using to enlarge images in playback mode 244, 254
 - using to test flash in Wireless mode 126, 244
- AEL Hold option 317
- AEL Toggle option 318
- AEL w/Shutter menu option 110, 111, 302
- AF Illuminator menu option 136, 226
- AF Illuminator/Self-timer Lamp 226
- AF/MF Control Hold option 319
- AF/MF Control Toggle option 225, 320
- Airplane mode menu option 393, 418
- Anti Motion Blur setting 81
- Aperture

available settings 57, 226
effect on depth of field 55–57
range of settings in Program mode 53
Aperture click switch 58, 227
using to silence aperture ring for movie recording 227, 368, 385
Aperture Priority mode 55–59
limitation on shutter speed settings 59
using to control depth of field 55–57
Aperture ring 226
Area Setting menu option 346
Aspect ratio
relationship to resolution 98
Aspect Ratio menu option 104–108
availability of 104
Astrophotography 434–436
Audio Level Display menu option 280, 375
Audio Out Timing menu option 376
Audio Recording Level menu option 207, 375
Audio Recording menu option 207, 281, 374
Audio Signals menu option 333
Autoexposure lock 317–318
Autoflash menu option 120
availability of 121
Autofocus
switching quickly to and from manual focus 319
Auto ISO setting
setting minimum and maximum values for 139–140
using in Manual exposure mode 66
Auto Mode menu option 50, 52, 204
Auto Object Framing menu option 202–203
Auto Review menu option 43, 251, 281
Auto Slow Shutter menu option 206, 365, 368, 373
Autumn Leaves Creative Style setting 173
AVCHD format 359
locating files on computer 359

B

Battery
generic replacement 442
Sony model NP-FW50 6
charging 6–8
time for full charge 8
Battery charger

for charging batteries outside camera 442
Sony model AC-UB10D 8
Battery compartment door
 flap for AC adapter cord 250
Blurring background 57
Bokeh 57
Bracketing
 incompatibility with Intelligent Auto mode 118
Bracket Order menu option 117, 119, 304
Built-in flash unit 216
BULB setting for shutter speed 66, 447
B/W (Black and White) Creative Style setting 173

C

Cable release 210, 447
 using for BULB exposures 66
Camera controls: illustrations
 back of camera 21, 228
 bottom of camera 26, 250
 front of camera 22, 217
 LCD screen 246
 left side of camera 24, 248
 right side of camera 25, 249
 top of camera 19–20
 top of camera - left side 215
 top of camera - right side 209
Cases
 Lowepro Apex 110 AW 442
 Lowepro Inverse 100 AW waist pack 441
 Lowepro Slingshot 200 AW 441
 Sony LCJ-RXE 440
 Tamrac 514 442
 Tamrac Zuma 4 442
Think Tank Mirrorless Mover 10 442
Center button 240–241
 assigning an item to 322–323
 assigning Standard functions to 322
 using to activate Flexible Spot focus frame for moving 135, 241, 323
 using to activate focus tracking with Lock-on AF option 195–196, 241, 323
 using to magnify image in manual focus mode 192, 223, 240
 using to play a video 241
 using to scroll a panoramic image 242
Center option for Focus Area 131–132

Clear Creative Style setting 172
Clear Image Zoom 295, 296–300
Closeup shooting 74–75
Color Space menu option 205
Color Temperature/Filter option for White Balance 151
Compression of images 104–105
Constant-aperture zoom lens 59
Continuous autofocus mode 32, 219–220
Continuous shooting
 incompatibility with other settings 112
 using in Intelligent Auto mode 39
Continuous Shooting menu option 109–110
 automatic exposure adjustment with 110, 303
 rate of shooting 110
 using autofocus with 110
 using with flash 110
Contrast
 adjusting 166–167
Control dial 244–245
 represented by icon on display 244
 using to activate Program Shift 244
 using to move through movies 245
 using to select Scene mode setting 72, 204, 244
 using to select sub-settings 244
 using to set panorama direction 84, 244
 using to set shutter speed 244
 using to zoom images in playback mode 245, 255
Control wheel 239
 assigning a function to 240, 312–313
Control with Smartphone menu option 408, 418
Creative Style menu option 164–174
 adjusting contrast, saturation, and sharpness 166
 charts with comparison images 170–171
 contrasted with Scene mode settings 174
 descriptions of settings 172–174
 effect of Raw format 168
 incompatibility with other settings 168
 making settings 165
 saving custom settings 168
 seeing effects of settings on display 165
CTRL for HDMI menu option 341
Custom button 211
 assigning an item to 322
Custom Key Settings menu option 135, 240, 311–324

- Center Button sub-option 241
 - Standard setting 241
 - Custom menu
 - in general 273
 - Custom White Balance
 - procedure for setting 152–154
-
- D**

 - Date
 - imprinting on images in shooting mode 307
 - Date and time
 - setting 16, 345
 - Date Imprint option 272
 - Date/Time Setup menu option 16, 345
 - Daylight Saving Time
 - adjusting for 17, 346
 - Deactivate Monitor option 321
 - Deep Creative Style setting 172
 - Delete Confirmation menu option 336
 - Delete menu option 260–261
 - Deleting images
 - using Delete menu option 260–261
 - using Trash button 258
 - Demo Mode menu option 340
 - Depth of field
 - controlling with aperture setting 55–57
 - Dial/Wheel Lock menu option 236, 328–329
 - Diffraction effect 53, 59, 63
 - Digiscoping 436
 - Digital Zoom 295, 296–300
 - Diopter adjustment wheel 245
 - Direction buttons
 - in general 242
 - Display button 243
 - using to cycle through display screens 287
 - Display Button menu option 282–287
 - Display MAC Address menu option 423
 - Display Media Info menu option 353
 - Display panel 214
 - Display panel illumination button 214
 - Display Quality menu option 337
 - Display Rotation menu option 264
 - Display screens

playback mode 255–258
shooting mode 282–287
 selecting with Display Button menu option 286
video recording 388
DMF (direct manual focus) 33, 221
 using with MF Assist option 276
Dotted frame on screen
 meaning of 300
Down button
 assigning an item to 324
 using to open movie control panel 242
 using to open movie volume control 242
DPOF (Digital Print Order Format) option 270–271
Drive Mode menu option 108–119
 using in Intelligent Auto mode 39
DRO/Auto HDR menu option 157–164
 incompatibility with other settings 164
DRO Bracket menu option 119
Dynamic range 157
 optimizing using Raw format 164

E

Edit Device Name menu option 422
Enlarge Image menu option 268
Exposure Bracketing - Continuous menu option 115–116
 order of exposures 117
 using exposure compensation with 117
 using flash with 117
 using for HDR photography 116
Exposure Bracketing - Single menu option 117
Exposure compensation 212–214
 controlling behavior as to flash and ambient light 214, 303
 seeing effect on display 213
 unavailability in some shooting modes 214
 using for panoramas 85
 using in Manual exposure mode 214
Exposure compensation dial 212–214
Exposure Compensation Setting menu option 214, 303
Exposure Settings Guide menu option 61, 289
External flash units
 Canon 430EX II 451
 Fujifilm EF-20 451
 Sony HVL-F20M 126, 448, 453

Sony HVL-F43M 126, 449, 453
Sony HVL-F60M 127, 450
using with Sony flash shoe adapter 450
Yongnuo YN560 III 451
Zeikos Digital Slave Flash 451
External LCD monitor
 Sony model CLM-V55 454
Eye AF option 320
Eye-Fi card
 menu option for enabling use 333
 using in RX10 camera 12–13
Eye sensor 245

F

Face detection 34
 registered faces 198, 305
Face Registration menu option 198, 305
File Format menu option 358–359
File Number menu option 349
Fill-flash menu option 121
 availability of 122
Filters
 Hoya R72 infrared 437
 using with RX10 444
Finder Color Temperature menu option 332
Finder/Monitor menu option 246, 301, 322
Firmware
 upgrades 354
 viewing current version 354
Flash
 general options for using 35–38
 incompatibility with other settings 37, 54
 using for continuous shooting 110
Flash Compensation menu option 128
 incompatibility with other settings 129
 using with Fill-flash 128
Flashing aperture value
 indication that good exposure not possible 62
Flashing shutter speed
 indication that good exposure not possible 59
Flash Mode menu option 36, 119–127
Flash Off menu option 120
Flash pop-up button 36, 211

Flexible Spot option for Focus Area 133–136
 changing size of frame 133
 moving frame around display 134
 returning frame quickly to center of display 135
Focal length of lens of RX10 227
Focus Area menu option 130–136, 218
 disabled when lens zoomed beyond optical zoom range 300
Focus distance of lens 75, 427
Focus frame
 contrasted with Spot metering circle 147
 dotted frame when lens zoomed past optical zoom range 300
Focus lock 219
Focus Magnification Time menu option 224, 277
Focus Magnifier menu option 191–192, 222
 assigning to control button 193
Focus options
 in general 31–33
Focus switch 32, 217
Focus tracking 323
 using Lock-on AF menu option 195–197
Folder
 selecting for image and video storage 349
Folder Name menu option 351
Format command 15, 347
Format menu option 347
For Viewfinder display screen 233, 286
Function button 230–236
 using to display Function menu 308
 using to display Quick Navi screen 286
 using to lock controls 236, 328–329
 using to send images to smartphone 236, 402
Function menu 230–233
 assigning items to 308–311
 making selections 231–232
 using during movie recording 383
 using to select Scene mode setting 71
Function Menu Settings menu option 52, 308–311

G

Grid Line menu option 278–279

H

Hand-held Twilight setting 78–79

compared to Anti Motion Blur setting 81
HDMI Information Display menu option 341
HDMI port 249
HDMI Resolution menu option 341
HDR (high dynamic range) photography 67, 157
 using HDR software 163
 using in-camera HDR option 160–162
HDR Painting Picture Effect setting 185–186
Headphones port 249
Help screens
 displaying for menu options 237–238
High Contrast Monochrome Picture Effect setting 184
High ISO Noise Reduction menu option 195
 incompatibility with Raw format 195
Histogram
 playback mode 256–258
 not available for movies 388
 shooting mode 258, 284
 using to check exposure 214

Illustration Picture Effect setting 190
Image Data Converter software 164, 165, 169, 431
 installing 5
 using to process Raw files 105
Image Index menu option 263
Image Size menu option 97–100
 unavailability with Raw format 100
 using with Raw & JPEG Quality option 100
In-Camera Guide/Delete Button 237–239
Infrared photography 437
Intelligent Auto mode 46–49
 limitations on settings in 48
 scene recognition feature 48–49
 steps and settings for basic photography 26–30
IRE units 275
ISO 136–142
 available range for movie recording 380
 base value 142
 effect on image quality 137–138
 in general 136–138
 limitations on settings 142
 procedure for setting 138–140

setting value to 25600 140

iTunes

converting movies with 460

J

JPEG files

in general 104

L

Landscape Creative Style setting 173

Landscape setting 76

Language

setting 17, 344

Language menu option 344

LCD screen

ability to tilt up and down 246–247

adjusting brightness 330–331

turning off 321

Left button

assigning an item to 324

Level

displaying in shooting mode 285

Light Creative Style setting 172

Limiter for audio recording 376

Live View Display menu option 62, 65, 165, 213, 290–293

unavailability with some shooting modes 293, 388

using with flash in Manual exposure mode 291, 451

Locking exposure 317–318

Locking images against deletion 269

Lock-on AF menu option 195–197, 323

Start w/Shutter setting 195

Long Exposure Noise Reduction menu option 194

incompatibility with other settings 194

M

MAC address 423

Macro photography 424–427

Macro setting 74–75, 425

Manual exposure mode 63–68

limitations on shutter speed settings 65

procedure for making settings 63–66

range of available aperture settings 65

- using to take images for HDR photography 67, 164
- Manual focus 33, 226–230
 - situations for using 222
 - switching quickly to and from autofocus 319
 - using for closeup photography 75
- Manual Shift 67
- Memory card
 - capacity for storing images and video 11, 99–100
 - display of current capacity 353
 - considerations for selecting 10–11
 - formatting for first use 14–15, 347
 - inserting into camera 13
 - need to use for storing images 8
 - speed of 11
 - types of 9–13
- Memory menu option 90–91, 207
- Memory Recall mode 92–95, 207
 - settings that can be stored 92
 - settings that cannot be stored 92
- Memory Stick card 10
 - compatibility with card readers 13
- Menu button 230
 - using to wake up camera 230, 338
- Menu system
 - navigating in 94–96
- Metering Mode menu option 145–147
 - limitations on settings 147
- MF Assist menu option 223, 276
 - compared to Focus Magnifier menu option 192
 - not available for movie recording 388
 - using with DMF 221, 276
- Microphone
 - built into camera 216
 - external
 - Rode VideoMic Pro 458
 - Sony ECM-XYST1M 456
 - Sony model ECM-CG50 458
 - Sony XLR-K1M adapter kit 456–457
- Microphone port 249
- Micro-SD card 9
- Miniature Picture Effect setting 188–189
- M.M. (metered manual) indicator
 - does not function when ISO set to Auto 317
- Mode dial 215

Mode Dial Guide menu option 335
Monitor Brightness menu option 330–331
Movie button 229
 limiting operation to Movie mode 229, 327–328
Movie Button menu option 215, 229, 327–328
Movie exposure modes
 Aperture Priority 366–367
 in general 364
 Manual Exposure 369–370
 Program Auto 365–366
 Shutter Priority 368–369
Movie menu option 204, 364–371
Movie mode
 inability to take still images in 215
Movie recording
 adjusting audio input level 375
 available focus modes 382
 day for night effect 371
 effects of mode dial position 378
 effects of physical controls 382–385
 effects of Shooting menu settings 379–381
 fadeout in camera 367, 369, 370
 fade to white in camera 370
 file formats 358–359
 general overview 356
 general procedure in Intelligent Auto mode 40–42
 list of available functions for control buttons 384
 range of available shutter speeds 365, 368, 370
 time limits for recordings 42, 363
 using slow shutter speed 368, 374
Movies
 changing playback volume 45
 editing on computer 45
 locating files on computer 392
 playback procedures 44–45, 389–391
 fast-forward and fast-reverse 240, 245
MP4 file format 360, 362
Multi Frame Noise Reduction option 140–142
Multi Interface Shoe 216
 using microphone with 456
 using with Sony flash shoe adapter ADP-MAA 450
Multi port 249

N

- ND Filter menu option 142–144
 - reasons for using 143
- Neutral Creative Style setting 172
- New Folder menu option 350
- NFC active area on camera 250, 404
- NFC (near field communication) 250, 403–406
 - turning off with Airplane Mode option 418
- Night Portrait setting 80
- Night Scene Creative Style setting 173
- Night Scene setting 78
- NO CARD error message 8
- NTSC video system 26, 339, 360

O

- Optical zoom 294

P

- PAL/NTSC Selector menu option 339, 361
- PAL video system 26, 339, 360
- Panorama
 - creating larger size than usual 85
 - resolution of images 84
- Panorama direction
 - setting with Control dial 84
- Panoramas
 - playing in camera 87
 - suggested settings for 85
 - using exposure compensation with 85
- Partial Color Picture Effect setting 183
 - adjusting color tolerance 183
- Peaking Color menu option 225, 289, 435
- Peaking Level menu option 221, 224, 287–288, 435
 - using with DMF 221, 289
- Photomatix Pro software
 - using to create HDR images 164
- PictBridge printing protocol 272
- Picture Effect menu option 174–191
 - charts of comparison images 177–178
 - compatibility with movie recording 191
 - incompatibility with other settings 175, 191
 - making settings 175

turning off 179
Playback button 228, 251
using to wake up camera 228, 338
Playback menu
in general 259
Playback of images and movies
adjusting volume 333
calendar display 253
connecting to HDTV with HDMI cable 438
display screens in playback mode 255–258
enlarging images on display 254, 268
general procedures 42–44, 251
panoramas 87, 242
rapid review of images 252
viewing by image or video type 254, 262–263
viewing index screens 252–253, 263
PlayMemories Home software 391, 394, 416
installing 5
PlayMemories Mobile app 400, 402, 403, 406, 407, 410
Pole aerial photography 413
Pop Color Picture Effect setting 180
Portrait Creative Style setting 172
Portrait setting 73
Posterization Picture Effect setting 181
Power Save Start Time menu option 338
Power switch 211
Pre-AF menu option 220, 293
Printing images directly from camera 270–271
Program mode 52–55
limitation on aperture settings 53
limitation on shutter speed settings 53
Program Shift 53–55
Protect menu option 269

Q

Quality menu option 104–106
Quick Navi system 233–236, 286

R

Radio trigger for external flash 451
Raw format
adjusting settings in software 155, 428–429
advantages and disadvantages 105–106, 428–429

considerations for using 105–106
effect on Creative Style settings 168
incompatibility with other settings 79, 82, 106, 164, 175
in general 428–430
Raw & JPEG setting for Quality 106
Raynox 0.3x Semi-Fisheye lens 445
Rear Sync menu option 123–125
 availability of 125
Record Setting menu option 360–362
Recover Image Database menu option 352
Red Eye Reduction menu option 129
Registered faces
 changing order of 306
 deleting 306
Remote control
 Sony model RM-VPR1 446
 using for BULB exposures 66
Reset Network Settings menu option 424
Resetting menu options 355
Resolution
 importance of 97
Retro Photo Picture Effect setting 182
Rich-tone Monochrome Picture Effect setting 187
Right button
 assigning an item to 324
Rotate menu option 267
Rotating images 264, 267

S

Saturation
 adjusting 166–167
Scene mode 68–82
 limitations on menu settings 69
 procedure for selecting a scene setting 70–72, 204
Scene recognition
 in Intelligent Auto mode 48–49
Scene Selection menu option 204
SD card 9
SDHC card 9
 compatibility with computers 12
SDXC card 9
 compatibility with computers 12
Sekonic Prodigy color meter 151

Select REC Folder menu option 349
Self-time menu option 113–114
Self-timer
 incompatibility with continuous autofocus 114
 taking multiple shots with 114
 using for macro photography 427
 using in Intelligent Auto mode 39
Self-timer (Continuous) menu option 114
Send to Computer menu option 398, 416
Send to Smartphone menu option 400, 416
Sensor plane indicator 217
Sepia Creative Style setting 174
Setting Reset menu option 355
Setup menu
 in general 329
Sharpness
 adjusting 166–167
Shooting menu
 in general 93–96
 options that affect video recording 358–378
Shooting modes
 list of 46
Shoot Mode option
 assigning to Function menu 204, 205
Shutter button 210
 using to wake up camera 338
Shutter Priority mode 60–63
 limitation on aperture settings 63
 range of shutter speed settings available 60
Shutter speed
 BULB setting 66
 procedure for setting 61–62
 settings available in Aperture Priority mode 59
 settings available in Manual exposure mode 65
 settings available in Program mode 53
 settings available in Shutter Priority mode 60
 using to affect appearance of images 60–61
Silhouette
 procedure for making 68
Single shooting menu option 109
Single-shot autofocus mode 32, 218
Slide Show menu option 266–267
Slow Sync flash mode 80
Slow Sync menu option 122–123

Smart Teleconverter option 321
Smart Zoom 295, 298
Smile/Face Detection menu option 197–200
Smile Shutter option 199
Softbox for flash 452
Soft Focus Picture Effect setting 184
Soft High-key Picture Effect setting 182
Soft Skin Effect menu option 200
Sony Cyber-shot DSC-RX10
 items included with 5
 positive features of 1–2
 weaknesses of 2
Sounds of camera
 silencing 333
Specify Printing menu option 270–271
Speed Priority Continuous Shooting option 111–112
 automatic exposure adjustment with 111
 effect of Quality setting on speed 111
 lack of autofocus adjustment 111
 rate of shooting 111–112
Sports Action setting 73
 continuous shooting with 113
Spot AEL Hold option 318
Spot AEL Toggle option 319
Spot metering
 identification of metering circle on screen 146
sRGB color space 205
SSID/PW Reset menu option 423
SSID (service set identifier) 420
Standard Creative Style setting 172
SteadyShot (Movies) menu option 205, 371–372
 cropping of movie frame with Active setting 372
SteadyShot (Still Images) menu option 205
Step zoom 325–326
 not available with Clear Image or Digital Zoom 326
 unavailable when recording movies 325, 388
Street photography 431–433
Sunset Creative Style setting 173
Sunset setting (Scene mode) 76–77
Superior Auto mode 50–52, 204
Sweep Panorama mode 82–88
 limitations on menu options 83

T

Tables

- images that fit on 8 GB memory card 99
- Shooting menu items that affect movies 380
- suggested control assignments for video recording 386
- suggested setting for movies in Intelligent Auto mode 41
- suggested settings for Intelligent Auto mode 33
- suggested settings for movie recording 387
- suggested settings for panoramas 85
- zoom ranges at various image sizes 299

Telescope

- connecting to camera 434
- Tile Menu option 94, 334
- Time-lapse photography 414
- Toy Camera Picture Effect setting 179
- Trash button 237–239
 - using to delete images 238, 258, 336
 - using to return Flexible Spot frame to center of display 135, 239

Tripod socket 250

Tv
indicator used to stand for shutter speed 62**U**

- Upload Settings menu option 333
- USB cable
 - using to charge battery 6
- USB Connection menu option 343
- USB LUN Settings menu option 344

V

- Version menu option 354
- VGA format for video recording 363
- VGA setting for Image Size
 - requirement of 4:3 aspect ratio 99, 102
- Video light
 - Sony model HVL-LE1 453
- Video recording. *See* Movie recording
- Viewfinder
 - adjusting brightness 332
 - adjusting color temperature 332
 - switching to and from LCD screen 246, 301
- Viewfinder Brightness menu option 332

VIEW icon on screen
when Setting Effect Off is selected 292
View Mode menu option 254, 262–263
View on TV menu option 416
Vivid Creative Style setting 172
Volume Settings menu option 333

W

Watercolor Picture Effect setting 189
White Balance
adjusting with color axes 154–155
adjusting with Raw processing software 155
chart of images showing settings 156
using “incorrect” settings purposely 155
White Balance Bracket menu option 118
White Balance menu option 148–156
in general 148
limitations on settings 155
making settings 149–153
Wide option for Focus Area 130
Wi-Fi features of RX10
connecting with NFC 403–407, 412
disabling with Airplane Mode menu option 393, 418
sending images to computer 393–399
sending images to smartphone 399–403
using smartphone as remote control 407–414, 445
Wi-Fi menu
in general 415
Wind Noise Reduction menu option 377
Wireless Auto Import software 394, 416
Wireless (flash) menu option 125–127
WPS button on router 395, 419
WPS Push menu option 395, 419
Write Date menu option 307

Z

Zebra menu option 274–275
Zone focusing 319
Zoom/focus ring 227
limited to focusing in DMF and manual focus modes 222, 226, 228
using for step zoom 325
using to zoom lens 228
Zoom Function on Ring menu option 324–325

Zoom lever 210

using to enlarge images and display index screens 210, 254

using to zoom the lens 210

Zoom Setting menu option 294–300