

Index

A

- AC adapter
 - effect of use on power saving mode 289
 - Nikon EH-67A 160, 379–380
- Active D-Lighting menu option 178–181
 - conflict with contrast adjustment 135
 - conflict with Metering menu option 150, 309
- Adobe Premiere Elements software 160, 328
- Adobe Premiere Pro software 328
- Aerial photography
 - using Interval Timer for 160
- AF Area Mode menu option 29, 169–175
 - Manual (Spot) setting 85
 - using Manual setting with Matrix metering option 148
- AF Assist menu option 220, 281
- AF Assist/Self-timer lamp 219–220, 281
- Aperture
 - limitations on available settings 62, 67
 - procedure for setting 62, 65, 295–296
 - using to control depth of field 58–61
- Aperture Priority mode 57–61
- Aspect ratio 126–130
- Assign Side Zoom Control menu option 286–287
- Auth./Encrypt menu option 343
- Auto Flash mode 361
- Autofocus frame
 - moving around display 170–172
- Autofocus Mode menu option (Movies) 43, 322–325
- Autofocus Mode menu option (Stills) 175–176
 - incompatibility with other settings 176
- Auto ISO 163
 - inability to use with Manual exposure mode 66, 166
- Auto mode 49–50

- basic procedure for using 23–26
 - limitations on available settings 51
- Auto Off menu option 289
- Auto with Red-eye Reduction flash mode 361

B

- Backlighting setting 91–95, 181
- Battery
- generic replacement 378
 - Nikon EN-EL23 377
 - charging with connection to computer 7
 - procedure for charging 5–7
 - time required for charging 7
- Battery charger
- Anker 40-watt desktop USB charger 378
 - for external charging 378
- Beach setting 82
- Bird-watching setting 102–104
- Black and White Copy setting 89–90
- Blink Warning menu option 296–297
- Bokeh 61, 350
- Brightness menu option 272

C

- Cases
- Eagle Creek Tailfeather waistpack 376
 - Lowepro Inverse 100 AW beltpack 376
 - Lowepro Rezo 110 AW 375–376
- Center-weighted metering option 148–149, 150
- Channel menu option 343–344
- Charge by Computer menu option 7, 293–294
 - need to turn off when connecting camera to printer 262
- Choose Key Picture menu option 261–262
- Close-up setting 85–86, 358
- CN-160 LED light 386
- Command dial 206–207
 - icon representing 207
 - using to adjust values of menu options 123
- Connect to Smart Device menu option 334–335, 341
- Continuous menu option 151–161
 - Best Shot Selector 157, 353–354
 - Continuous H: 60 fps 157
 - Continuous H: 120 fps 156–157

- continuous high-speed shooting 155
- continuous low-speed shooting 155
- incompatibility with other settings 153, 166
- Interval Timer 158–159
- Multi-shot 16 157
- Pre-shooting Cache 155–156
- single shooting 155
- using self-timer with 153–154
- Continuous shooting
 - in general 151–152, 388
- Contrast
 - adjusting 134–135
 - inability to adjust when Active D-Lighting in use 135
- Controlling camera with smartphone or tablet 338–340
- Controls on back of camera
 - illustration showing 15, 201
- Controls on front and sides of camera
 - illustrations showing 17–18
- Controls on left side of camera
 - illustration showing 198
- Controls on top of camera
 - illustration showing 15, 192
- Coolpix logo
 - displaying on start-up screen 268
- Copy menu option 258–260
- Cropping image in camera 229
- Cross Process setting 114–115
- Current Settings option on Wi-Fi menu 344
- Custom Picture Control menu option 138–139

D

- Date and time
 - setting 19–20, 269–270
- Date Format
 - setting 270
- Delete button. *See* Trash button
- Deleting images 208–210, 226
- Digital Zoom menu option 282–286
 - incompatibility with other settings 286
- Diopter adjustment dial 202
- Direction buttons
 - in general 212–213
- Display button 203–205

- Display screens
 - playback mode 205, 233–237
 - shooting mode 203–204
- DJI Phantom drone 160
- D-Lighting menu option 239–240
- DPOF (Digital Print Order Format) 248–251, 264
- Dusk/Dawn setting 84
- Dynamic Fine Zoom 284

E

- Easy Panorama setting 95–98
- Enlarging view of image 228–229
 - restoring to original size with OK button 229
- Exposure bracketing 167–168, 181
 - order of exposures 168
 - using for HDR photography 167
- Exposure compensation 34–36, 214–215
 - using to display histogram 274–275
- Eye-Fi card 11, 298
- Eye-Fi Upload menu option 297–298

F

- Face Priority autofocus mode 169–170
- Fast-motion movie recording 321–322
- Fill Flash setting 362
- Filter adapter 367, 381–382
- Filter Effects menu option 241–248, 392
 - combining with Special Effects mode 392
 - Cross Screen 243–244
 - Fisheye Effect 244
 - Miniature Effect 245
 - Painting 245–246
 - Photo Illustration 247
 - Portrait (Color + B&W) 247–248
 - Selective Color 242–243
 - Soft Portrait 241–242
 - Vignette 246–247
- Filters
 - attaching to Coolpix P600 380–382
- Final Cut Express software 328
- Final Cut software 328
- Fireworks Show setting 89
- Firmware

- upgrading 300–301
- Firmware Version menu option 300–301
- Flash
 - diffusing 390
 - general procedure for using 38–40
 - incompatibility with other settings 168, 216, 360
 - using external units with Coolpix P600 383–386
 - Canon HF-DC2 385
 - Yongnuo YN560 III 384
 - Zeikos Digital Slave Flash 385
- FlashAir Wireless SD Card 13
- Flash/charge lamp 206
- Flash Exposure Compensation menu option 176–177, 362, 365
- Flash mode menu 213–214
- Flash pop-up button 199, 359
- Flexible Program 52, 295, 352
- Focus
 - basic procedures 27–33
- Focus lock 31
- Focus mode menu 27–28, 215–216
- Focus range 356–358
- Folders of images
 - limit of 200 images per folder 296
 - names and numbers of 295–296
- Food setting 86–88, 358
- Format menu option 290–291
 - formatting internal memory 291
- Frame Rate menu option 41, 315–316
 - relationship to Movie Options menu option 315–316
- Function button 195–198
 - assigning an option to 197
 - inability to use during movie recording 313
 - options that can be assigned to 196

G

- GPS capability
 - lack of in Coolpix P600 344
- Grid
 - displaying on screen 204, 272–274

H

- HDMI cable 373
- HDMI Device Control menu option 293

- HDMI menu option 293
- HDMI port 221
- HDR (high dynamic range) photography 91–95
- HDR setting 91–95
- High-contrast Monochrome 108
- High ISO Monochrome setting 113, 163–164, 166
- High Key setting 110
- Histogram 36, 204, 205, 230–233, 274–275
- Hoya R72 infrared filter 368
- HS (High Speed) Movie Options 319–322, 392
 - incompatibility with other settings 320
 - limitations of 322

I

- Image Quality menu option 125–126
- Image Review menu option 45, 225, 271
- Image sharpening
 - adjusting 134–135
- Image Size menu option 126–130
- iMovie software 48, 160, 328
- Indicator for number of remaining images
 - blinking when camera is writing data 14
- Infinity focus mode
 - incompatibility with other settings 176, 216
- Infrared photography 366–369
- Internal memory 8
 - copying images to or from 258–260
 - formatting 291
- ISO
 - in general 161–162
- ISO Sensitivity menu option 161–166
 - Fixed Range Auto setting 163
 - using with Manual exposure mode 166
 - range of available values 163
- Items on bottom of camera
 - illustration showing 19
- iTunes and Apple devices
 - playing P600 movies with 389

J

- JPEG images 126

K

Kelvin ratings of light sources 140

L

Landscape mode 69–71

Language

changing 22, 291–292

Language menu option 291–292

LCD screen

adjusting brightness 272

switching to viewfinder view 224

tilting and swiveling features 221–224

Lens cap

attaching to neck strap 4

Lightroom software 370

Location data

adding to images 344–345

Low Key setting 111, 246

M

Macro focus mode 356–358

Macro photography 355–359

using manual focus for 358

Manual exposure mode 63–67

exposure value scale 65

Manual Exposure Preview menu option 189–191, 275

Manual focus 32–33

adjusting with side zoom control 200, 287

forcing use of autofocus with 34

magnification of screen 33, 219

Manual setting for AF Area Mode 170–172

indication that focus frame is centered 172

Matrix metering option 147–148, 150

using with AF Area Mode set to Manual 148

Memory

internal 8

Memory card

factors for selecting 10

image capacity 10

in general 9–12

inserting into camera 13

Menu button 208

- Menu system 121–122
- Metering menu option 147–149
 - unavailability when Active D-Lighting in use 150, 309
- Micro-SD card 10
- Minimum Shutter Speed setting 165–166
- Mode dial 194
- Monitor button 202
- Monitor Settings menu option 45, 191, 204, 225, 271–275
- Monochrome Picture Control setting 134
 - Filter Effects and Toning adjustments 137–138
- Moon setting 100–101
- Motion Detection menu option 279–281, 354
 - limited availability of 280
- Movie button 205
 - using to start movie recording 44
- Movie menu 314–325
- Movie Options menu option 315–316, 317–322, 392
- Movies
 - editing in camera 328–332
 - incompatibility with some movie formats 328, 329
 - not possible when battery power is low 328
 - editing with software 48
 - effects of still photo settings 305–311
 - Digital Zoom 310
 - exposure compensation 307
 - focus mode 306–307
 - Metering 309–310
 - Picture Control menu option 308–309
 - self-timer 308
 - shooting mode 305
 - Vibration Reduction 310
 - White Balance 309
 - zoom settings 310–311
 - exposure control 308
 - exposure lock 307–308
 - focus settings 322–325
 - forcing autofocus during recording 219, 324–325
 - general procedure for recording 41–45, 302–303
 - limitation on recording length 315
 - pausing recording with OK button 312–313
 - incompatibility with some settings 313
 - playback 46–47, 326–328
 - quick guide to recording 303–305
 - saving single frame as image 331–332

- settings not adjustable for movie recording 313
- taking still images during movie recording 194, 311–312
 - incompatibility with other settings 312
- Multiple Exposure menu option 182–184
- Multi selector dial 210–211
- Museum setting 88, 157

N

- Neutral density filter 390
- Neutral Picture Control setting 132
- Night Landscape mode 74–75
- Night Portrait mode 72–73
- Nikon Coolpix P600 camera
 - general features of 1
 - items shipped with 4
 - official reference manual download site 4
 - shortcomings of 2
- Nikon Movie Editor software 329
- Nikon ViewNX 2 software 4, 230
- Nikon Wireless Mobile Utility app 333–334, 336–338, 338–340, 344–345
- Noise caused by high ISO settings 161–162
- Noise Reduction Filter menu option 177–178
- Nostalgic Sepia setting 108
- NTSC video system 41, 315–316

O

- OK button 211–212
- Options menu option on Wi-Fi menu 341–344

P

- Painting setting 109
- PAL video system 41, 315–316
- Panoramas
 - playback by pressing OK button 212
 - procedure for shooting 95–98
 - shooting at larger size 392
- Party/Indoor setting 81–82
- Password menu option 343
- Peaking feature for manual focus 34, 298–299
- Pet Portrait Auto Release 99, 219
- Pet Portrait setting 99
- PhotoAcute software 92

- Photomatix Pro software 92, 94
- Photoshop Elements software 178
- Photoshop software 92, 178, 276, 361, 370
- PictBridge printing protocol 262–263
- Picture Control menu option 131–138
 - adjustments to settings 134–137
 - grid showing current adjustments 137, 195
- Playback
 - calendar screen 227–228
 - cropping image in camera 229
 - displaying information about tone levels 232–233
 - enlarging view of image 228–229
 - flashing display screen 232–233
 - general procedure 45, 225–226
 - group of continuous shots 45, 154, 233–236
 - index screens 195, 226–228
 - movies 46–47
 - review while in shooting mode 45
- Playback button 201, 225
- Playback menu 236–262
- Portrait setting 79
- Power saving option 289
 - setting time interval before power off 289
- Power switch 193
- Print Date menu option 276
- Printing images directly from camera 248–251, 262–265
- Print Order menu option 248–251
- Program mode 53–54
- Protect menu option 252–253

Q

- Quick Adjust option for Picture Control settings 135
- Quick Retouch menu option 237–239
- QuickTime software 48

R

- Raw format
 - not available with Coolpix P600 126
- Rear-curtain Sync flash mode 364–365
- Red-eye effect
 - correcting 361
- Reset All menu option 125, 299–300
- Reset File Numbering menu option 295–296

- Reset User Settings menu option 185–186, 300
- Resolution 126, 128
- Restore Default Settings option on Wi-Fi menu 344
- Rotate Image menu option 254–255
- Rule of Thirds 273

S

- Saturation
 - adjusting 134–135
- Save User Settings menu option 117, 184
- Saving image at smaller size 255–256
- Scene Auto Selector 78–79
- Scene mode menu 76–77
- Scene modes
 - in general 68
- Scene mode settings
 - information screen for 77
 - information screens for 195
 - list of 68
- SCENE setting on mode dial 76–78
 - unavailability of other settings 77
- SD card
 - image capacity 11
 - in general 9–12
 - inserting into camera 13
 - speed of 11
- SDHC card 9
- SDXC card 9
 - compatibility issues with 11
- Sekonic Prodigy color meter 144
- Selective Color setting 112–113
- Self-timer 216–218, 390
 - using with continuous shooting options 153–154, 217
 - using with movie recording 218, 308
- Sequence Display Options menu option 236, 260–261
- Setup menu
 - in general 266–267
- Sharpening. *See* Image sharpening
- Shooting menu
 - in general 119–125
 - navigating 122–124, 391
 - unavailable selections shown as dimmed 124
- Shooting modes

- list of 26
- Shutter Priority mode 53–56
- Shutter release button 193–194
 - using to take still image during movie recording 194, 311–312
 - incompatibility with other settings 312
- Shutter speed
 - blinking value on display 56
 - procedure for setting 55, 65, 295–296
 - range of settings available 54, 67
- Side zoom control 199–201, 286–287, 354
 - assigning an option to 200, 287
 - not affected by Zoom Memory menu option 189, 199
 - using for manual focus 200, 287
 - using for zoom when Zoom Memory in effect 287
- Silhouette
 - creating using Manual exposure mode 64
- Skin Softening menu option 240
- Slide Show menu option 251–252
- Slow-motion movie recording 320–321
- Slow Sync flash mode 363–364
- Small Picture menu option 255–256
- Smile Timer
 - incompatibility with other settings 176, 216
 - procedure for using 218–219
- Snap-back zoom 200–201, 287, 354–355
- Snow setting 83
- Soft setting 107
- Sound Settings menu option 288
- Special Effects mode 105–114
 - combining with Filter Effects menu option 392
 - incompatibility with other settings 116
 - unavailability of other settings 106
 - using for movie recording 390
- Sports setting 80–81
 - requirement to use continuous shooting 81
- Spot metering option 149–150
- SSID menu option 341–343
- Standard Flash setting 362
- Standard Picture Control setting 132
- Standby mode 289
- Start-up image
 - selecting 268–269
- Startup Zoom Position menu option 187–188, 195
- Street photography 369–373, 370–372

- Subject Tracking setting for AF Area Mode 172–173
- Sunset setting 83
- Superzoom lens
 - avoiding image blur from camera movement 351–354
 - haze and compression effects 347–349
 - shallow depth of field 350
 - using 345–355
 - using to isolate subject 349

T

- Target Finding AF setting for AF Area Mode 173–175
- Television set
 - connecting camera to 373–374
- Time-lapse photography 158–159, 322
- Time zone
 - setting 270–271
- Time Zone and Date menu option 269–271
- Toggle Av/Tv Selection menu option 210, 294–295
- Transcend SD card 13
- Transferring images to smartphone or tablet 333–338
- Trash button
 - using to delete images 208–210
- Tripod
 - Manfrotto BeFree 387
- TV Settings menu option 292–293

U

- USB port 220–221
- User Settings mode 116–118, 184, 354, 388

V

- Vibration Reduction menu option 277–278, 351
- Viewfinder
 - switching to LCD view 224
- View/Hide Framing Grid menu option 272–274
- View/Hide Histograms menu option 191, 274–275
- Vivid Picture Control setting 133
- Voice Memo menu option 257–258
- Volume
 - control of for movie playback 48
 - control of for movie recording 44

W

- Welcome Screen menu option 268–269
- White balance
 - comparison chart of settings 145–147
 - custom setting (Preset Manual) 143–144
 - setting by color temperature 144–145
 - using incorrect value purposely for effect 144
- White Balance menu option 140–150
 - Choose Color Temperature option 144–145
- Wi-Fi capability of Coolpix P600 camera 13, 333–345
- Wi-Fi Options menu 340–344
- Windows Movie Maker software 328

Z

- Zone focusing 391
- Zoom lever 194–195
- Zoom Memory menu option 186–189, 195, 199
 - not applicable to side zoom control 189, 199
- Zoom scale
 - appearance with different types of zoom 283–286
 - for macro focus range 356–357