

Contents

Introduction	1
CHAPTER 1: PRELIMINARY SETUP	4
Setting Up the Camera	4
Charging and Inserting the Battery	5
Inserting the Memory Card.	8
Introduction to Main Controls	14
Top of Camera	15
Back of Camera	15
Front and Sides of Camera	17
Bottom of Camera	19
Setting the Language, Date, and Time	19
CHAPTER 2: BASIC OPERATIONS	23
Taking Still Pictures	23
Fully Automatic—Auto Mode	23
Basic Variations from Fully Automatic	26
Focus	27
Manual Focus	32
Exposure	34
Exposure Compensation	34
Flash.	38
Motion Picture Recording.	41
Viewing Pictures and Movies	45
Review While in Shooting Mode	45
Reviewing Images in Playback Mode	45
Playing Movies	46

CHAPTER 3: THE SHOOTING MODES 49

Auto Mode	49
Program Mode	51
Shutter Priority Mode	53
Manual Exposure Mode	63
Scene Modes	68
Landscape	69
Night Portrait	72
Night Landscape	74
The SCENE Setting on the Mode Dial	76
Scene Auto Selector	78
Portrait	79
Sports	80
Party/Indoor	81
Beach	82
Snow	83
Sunset	83
Dusk/Dawn	84
Close-up	85
Food	86
Museum	88
Fireworks Show	89
Black and White Copy	89
Backlighting/HDR	91
Easy Panorama	95
Pet Portrait	99
Moon	100
Bird-watching	102
Special Effects Mode	105
Soft	107
Nostalgic Sepia	108
High-contrast Monochrome	108
Painting	109
High Key	110
Low Key	111
Selective Color	112
High ISO Monochrome	113
Cross Process	114
User Settings Mode	116

CHAPTER 4: THE SHOOTING MENU 119

Image Quality	125
Image Size	126
Picture Control	131
Standard	132
Neutral	132
Vivid	133
Monochrome	134
Adjustments to Picture Control Settings	134
Custom Picture Control	138
White Balance	140
Metering	147
Continuous shooting	151
ISO Sensitivity	161
Minimum Shutter Speed	165
Exposure Bracketing	167
AF Area Mode	169
Face Priority	169
Manual (Spot, Normal or Wide)	170
Subject Tracking	172
Target Finding AF	173
Autofocus Mode	175
Flash Exposure Compensation	176
Noise Reduction Filter	177
Active D-Lighting	178
Multiple Exposure	182
Save User Settings	184
Reset User Settings	185
Zoom Memory and Startup Zoom Position	186
Manual Exposure Preview	189

CHAPTER 5: PHYSICAL CONTROLS 192

Power Switch	193
Shutter Release Button	193
Mode Dial	194
Zoom Lever	194
Function Button	195
Flash Pop-up Button	199
Side Zoom Control	199
Playback Button	201

Diopter Adjustment Dial	202
Monitor Button	202
Display Button	203
Movie Button	205
Flash/Charge Lamp	206
Command Dial.	206
Menu Button.	208
Trash Button	208
Multi Selector and its Buttons and Dial	210
Multi Selector Dial	210
OK Button	211
Direction Buttons	212
Up Button: Flash Settings	213
Right Button: Exposure Compensation	214
Down Button: Focus Mode	215
Left Button: Self-timer; Smile Timer; Pet Portrait Release.	216
AF Assist/Self-timer Lamp	219
USB and HDMI Ports	220
Tilting and Swiveling LCD Screen	221

CHAPTER 6: PLAYBACK

225

Normal Playback.	225
Index Views, Calendar View, and Enlarging Images	226
Different Playback Screens	229
Viewing Shots Taken in a Sequence	233
The Playback Menu	236
Quick Retouch	237
D-Lighting.	239
Skin Softening	240
Filter Effects	241
Print Order	248
Slide Show	251
Protect.	252
Rotate Image	254
Small Picture	255
Voice Memo.	257
Copy.	258
Sequence Display Options	260
Choose Key Picture	261
Printing Images	262
Printing Directly from the Camera	262

CHAPTER 7: THE SETUP MENU 266

Welcome Screen	268
Time Zone and Date	269
Monitor Settings	271
Print Date	276
Vibration Reduction	277
Motion Detection	279
AF Assist	281
Digital Zoom	282
Assign Side Zoom Control	286
Sound Settings	288
Auto Off	289
Format Card/Format Memory	290
Language	291
TV Settings	292
Charge by Computer	293
Toggle Av/Tv Selection	294
Reset File Numbering	295
Blink Warning	296
Eye-Fi Upload	297
Peaking	298
Reset All	299
Firmware Version	300

CHAPTER 8: MOTION PICTURES 302

Movie-making Overview	302
Quick Guide to Recording a Movie Clip	303
Other Settings for Movies	305
Still Photo Settings Available for Movies	305
Focus Mode	306
Exposure Compensation and Exposure Lock	307
Self-timer	308
Picture Control	308
White Balance	309
Metering	309
Vibration Reduction	310
Zoom	310
Using the Shutter Release Button for Taking Still Images	311
Pausing Recording with the OK Button	312
Fn Button: Does Not Operate During Video Recording	313

- Settings That Are Not Adjustable for Video Recording 313
- The Movie Menu. 314
 - Frame Rate 315
 - Movie Options 317
 - HS (High Speed) Movie Options 319
 - Autofocus Mode 322
- Movie Playback and Editing. 325
 - Playback. 326

CHAPTER 9: WI-FI, SUPERZOOM LENS, AND OTHER TOPICS 333

- Wi-Fi Features 333
 - Transferring Images to Smartphone or Tablet. 333
 - Controlling the Camera Using a Smartphone or Tablet. 338
 - Wi-Fi Options Menu. 340
 - Connect to Smart Device 341
 - Options. 341
 - Current Settings 344
 - Restore Default Settings. 344
 - Adding Location Data to Images. 344
 - Using the Superzoom Lens 345
 - Macro (Close-up) Photography 355
 - Using Flash. 359
 - Infrared Photography 366
 - Street Photography 369
 - Connecting to a Television Set 373

APPENDIX A: ACCESSORIES 375

- Cases 375
- Batteries and Chargers 377
- AC Adapter. 379
- Add-on Filters and Lenses. 380
- External Flash 383
- Tripods 387

APPENDIX B: QUICK TIPS 388

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 393

Photography Books	393
Web Sites.	394
Digital Photography Review	394
Reviews of the Coolpix P600	394
The Official Nikon Site	395
Infrared Photography.	395
Cambridge in Colour	395
Index	396