

Contents

Introduction	1
CHAPTER 1: PRELIMINARY SETUP	3
Setting Up the Camera	3
Charging and Inserting the Battery	3
Inserting the Memory Card.	4
Introduction to Main Controls	6
Top of Camera	6
Back of Camera	6
Front and Sides of Camera	7
Bottom of Camera	8
Setting the Date, Time, and Language	9
CHAPTER 2: BASIC OPERATIONS	11
Fully Automatic—Auto Mode	11
Other Settings in Auto Mode	12
Focus	13
Autofocus Options.	13
Manual Focus	13
Exposure Compensation	13
Flash.	14
Motion Picture Recording.	15
Viewing Pictures and Movies	16
Review While in Shooting Mode	17
Reviewing Images in Playback Mode	17
Playing Movies	17
CHAPTER 3: THE SHOOTING MODES	19
Auto Mode	19
Program Mode	20
Shutter Priority Mode	20
Aperture Priority Mode	22
Manual Exposure Mode	24

Scene Modes	26
Moon Mode	27
Bird-watching Mode	28
The SCENE Setting on the Mode Dial	29
Portrait	30
Landscape	30
Sports	30
Night Portrait	31
Party/Indoor	31
Beach	31
Snow	31
Sunset	32
Dusk/Dawn	32
Night Landscape	32
Close-up	33
Food	33
Fireworks Show	34
Backlighting/HDR	34
Easy Panorama	36
Pet Portrait	37
Selective Color	37
Multiple Exposure Lighten	38
Time-lapse Movie	38
Creative Mode	39
User Settings Mode	41

CHAPTER 4: THE SHOOTING MENU

43

Image Quality	45
Image Size	47
Picture Control	49
Standard	49
Neutral	49
Vivid	50
Monochrome	50
Adjustments to Picture Control Settings	50
Custom Picture Control	51
White Balance	52
Metering	54
Continuous	56
ISO Sensitivity	59
Minimum Shutter Speed	61
Exposure Bracketing	62
AF Area Mode	63
Face Priority	63
Manual (Spot, Normal or Wide)	63
Subject Tracking	64
Target Finding AF	64
Autofocus Mode	65
Flash Exposure Compensation	65
Noise Reduction Filter	66
Long Exposure NR	66
Active D-Lighting	66
Multiple Exposure	68
Save User Settings	69
Reset User Settings	69
Zoom Memory and Startup Zoom Position	69

Manual Exposure Preview 71

CHAPTER 5: PHYSICAL CONTROLS 72

Power Switch. 72

Shutter Release Button 72

Mode Dial 73

Zoom Lever 73

Function Button 73

Microphone and Speaker 74

Flash Pop-up Button. 74

Side Zoom Control. 75

Snap-back Zoom Button 75

Side Dial 75

External Microphone Jack. 75

Accessory Terminal 76

Viewfinder, Eye Sensor, and Monitor Button 76

Diopter Adjustment Wheel 76

AE-L/AF-L Button 76

Focus Mode Selector 76

 Autofocus 76

 Manual Focus 77

Movie Button 78

Playback Button 78

Display Button 78

Command Dial. 79

Menu Button. 79

Delete/Trash Button 80

Multi Selector and its Buttons and Dial 80

 Multi Selector Dial 80

 OK Button 81

 Direction Buttons. 81

 Up Button: Flash Mode 82

 Right Button: Exposure Compensation. 85

 Down Button: Focus Mode 85

 Left Button: Self-timer; Smile Timer; Pet Portrait Release. 86

Self-timer/AF Assist/Red-eye Reduction Lamp 87

USB Port and HDMI Port. 88

Tilting and Swiveling LCD Screen 88

CHAPTER 6: PLAYBACK 90

Normal Playback. 90

 Index Views, Calendar View, and Enlarging Images 90

 Various Playback Screens. 91

 Viewing Shots Taken in a Sequence 93

The Playback Menu 94

 Mark for Upload. 95

 Quick Retouch 95

 D-Lighting. 96

 Skin Softening 96

 Filter Effects 96

 Slide Show 99

 Protect. 99

 Rotate Image 100

 Small Picture 100

 Sequence Display. 101

Key Picture Selection	101
---------------------------------	-----

CHAPTER 7: THE SETUP MENU 102

Time Zone and Date	102
Slot Empty Release Lock	103
Monitor Settings	104
EVF Auto Toggle	105
Date Stamp	106
Self-timer: After Release	106
Vibration Reduction	106
AF Assist	108
Digital Zoom	108
Assign Side Zoom Control	110
Snap-back Zoom	110
Assign Side Dial	110
AE/AF Lock Button	111
Sound Settings	111
Auto Off	112
Format Card	112
Language	112
HDMI	113
Charge by Computer	113
Image Comment	114
Copyright Information	114
Location Data	114
Toggle Av/Tv Selection	115
Reset File Numbering	115
Peaking	116
Reset All	116
Conformity Marking	116
Firmware Version	117

CHAPTER 8: MOTION PICTURES 118

Movie-making Overview	118
Quick Guide to Recording a Movie Clip	118
Other Settings for Movies	119
White Balance, Picture Control, and Creative and Scene Mode Options	119
Focus and Focus Lock	119
Exposure, Exposure Compensation, and Exposure Lock	120
Self-timer	120
Vibration Reduction	120
Zoom	121
Taking Still Images During Movie Recording	121
Pausing Recording with the OK Button	122
Fn Button: Does Not Operate During Video Recording	122
Limits on Length of Video Recording	122
The Movie Menu	123
Frame Rate	123
Movie Options	124
HS (High-Speed) Movie Options	124
Autofocus Mode	126
Electronic VR (Vibration Reduction)	127
Wind Noise Reduction	127
Zoom Microphone	127
Frame Rate	128

External Microphone Sensitivity	128
Movie Manual Mode.	128
Movie Manual Menu	128
Exposure Mode	129
Picture Control and Custom Picture Control	129
White Balance	130
ISO Sensitivity	130
Other Items on Movie Manual Menu	130
Recording to an External Video Recorder.	130
Movie Playback and Editing.	131
Playback.	131
Editing.	131

CHAPTER 9: WIRELESS FEATURES, SUPERZOOM LENS, AND OTHER TOPICS

134

SnapBridge App	134
Initial Connection and Transferring Images from Camera to Smart Device	134
Remote Control of Camera Using SnapBridge App.	138
Adding Location Data to Images.	138
Summary of Options for Transferring Images and Movies to a Smart Device Wirelessly	139
Network Menu.	140
Airplane Mode	140
Choose Connection	140
Connect to Smart Device.	140
Connection to Remote	140
Send While Shooting	141
Wi-Fi	141
Bluetooth	141
Restore Default Settings	142
Using the Superzoom Lens	142
Macro (Close-up) Photography	145
Infrared Photography	147
Street Photography	148
Connecting to a Television Set	149

APPENDIX A: ACCESSORIES

150

Cases	150
Batteries and Chargers	150
AC Adapter.	151
Remote Controls.	152
Dot Sight	153
External Flash	154
External Microphones	154
Filters.	155
Lens Hood	156

APPENDIX B: QUICK TIPS

157

APPENDIX C: RESOURCES FOR FURTHER INFORMATION

160

Photography Books	160
Digital Photography Review	160
Reviews of the Coolpix P950	160

The Official Nikon Site	160
Videos	161
Photography Information	161

Index