

Index

Symbols

4K Still Image Playback menu option 277
50i or 60i version of camera 352

A

AC adapter
 Sony AC-UD11 458
Access lamp 22–23, 119, 258
Access Point Settings menu option 418–419, 439, 440
Adobe Camera Raw software 110–111, 183
Adobe Photoshop software 183
 using for HDR processing 178
Adobe Premiere Elements software 45
Adobe Premiere Pro software 45, 404, 413
AEL Hold option 330–331
AEL Toggle option 331–332
AEL w/Shutter menu option 116, 315–316
AF Illuminator menu option 151
AF Illuminator/Self-timer Lamp 151, 228
AF/MF Control Hold option 332–333
AF/MF Control Toggle option 143, 333
Airplane Mode menu option 415, 438
Aperture
 adjusting during movie recording 385–386
 limitations on available settings 57, 66
 procedure for setting 56–57, 62
 relationship to depth of field 54
Aperture Priority Mode 54–57
Apple Final Cut Express software 45
Apple Final Cut Pro software 45, 404
Apple QuickTime software 376
Application Management app 444

- Application menu 428, 442–445
- Applications (apps) 442–445
 - Application Management 444
 - Bracket Pro 444
 - Motion Shot 412, 444
 - My Best Portrait 444
 - Photo Retouch 444
 - Picture Effect+ 203–204, 444
 - Smart Remote Control 428, 432
 - Smart Remote Embedded 428–429, 432, 438, 443, 445
 - Star Trail 444
 - Time-lapse 443, 444
- Area Setting menu option 361–362
- Aspect Ratio menu option 105–108
 - limitations on availability 108
- Aspect ratio of movie
 - how determined 108
- Astrophotography 446–447
- Audio recorders
 - Shure VP83F 404, 468
 - Tascam DR-40 404, 468
 - Tascam DR-100mkII 404, 468
 - Zoom H1 404, 468
 - Zoom H6 404, 468
- Audio Recording menu option 394
- Audio Signals menu option 346–347
- Autoflash setting 127
- Auto ISO setting
 - using in Manual exposure mode 65–66, 157, 469
 - using with Manual Exposure mode for movie recording 389
- Auto Object Framing menu option 214–216
- Auto Review menu option 259, 292–293
- Auto Slow Shutter menu option 218, 384, 385, 386, 393–394
 - limitations of setting 393–394
- AVCHD video format 376
 - Record Setting options 378–380

B

- Basic steps for taking still pictures 23–27
- Battery
 - charging with computer through USB port 357–358
 - generic replacement 457
 - Sony NP-BX1 457

- charging procedure 6
- inserting into camera 5
- Battery charger
 - Anker 40-watt desktop USB charger 4
 - generic external charger 457
 - inability to power camera with 4
 - Sony AC-UB10 6, 458
 - Sony BC-TRX external charger 457
- Beauty Effect menu option 283–284
- Bit rate of video recording 378, 379
- Blackmagic Intensity Pro video capture device
 - using to save image captured without memory card 7
- Blinking highlights in playback mode
 - meaning of 266
- Blurred background
 - using aperture to produce 54
- Bokeh 56
- Bounce flash 224
- Bracketing of exposure, white balance, or DRO
 - incompatibility with other settings 124
- Bracket Order menu option 123, 317–318
- Bracket Pro app 444
- BULB setting for shutter speed 66–67

C

- Calendar display screen 261–262
- Cases
 - Camson brown leather 454
 - Lowepro Inverse 100 AW waist pack 456
 - Sony LCJ-RXF 454
 - Sony LCM-CSVH 455
- Celestron Regal 80F-ED spotting scope 448–449
- Center button 245–246
 - assigning an option to 335–336
 - functions controlled by with Standard option 245–246, 336
 - using to activate Center Lock-on AF option 209, 246
 - using to activate Flexible Spot focus frame for moving 149–150, 246
 - using to change magnification for manual focus 141, 205–206, 336
- Center Button menu option 149–150
 - Standard setting for 149–150
- Center Lock-on AF menu option 208–209, 246, 336
 - compared to Lock-on AF setting for Focus Area 208–209
 - using with movie recording 399

- Center setting for Focus Area 145–147
- Clear Image Zoom 308
- Closeup shots 75–76
 - lighting for 76
- Color Space menu option 217–218
- Continuous AF menu option 136–138
- Continuous Exposure Bracketing menu option 122–123
 - order of exposures 123
 - using with exposure compensation 123
 - using with flash 123
- Continuous shooting 469
 - with autofocus 116
 - with exposure adjustment 116–117, 316
 - with flash 117
- Continuous Shooting setting 115–117
 - rate of shooting 117
- Contrast
 - adjusting 180–182
- Control ring 228–230
 - assigning an option to 325–327
 - items that can be controlled by 229–230, 325
 - options assigned with Standard setting 327
 - using to adjust manual focus 139, 228, 230, 288
 - using to select panorama direction 89
 - using to select scene type 71–72, 216
 - using to zoom the lens 223, 337–338
- Control Ring menu option 228–230
- Controls on back of camera 231–255
 - illustration showing 17–18
- Controls on bottom of camera 22–23, 258
- Controls on front of camera 19, 227–230
- Controls on left side of camera 21–22, 257–258
- Controls on right side of camera 20–21, 256–257
- Controls on top of camera 221–227
 - illustration showing 16–17
- Control wheel 243–245
 - locking operation of 239–240, 340–342
 - settings controlled by 245
 - using to change size of Flexible Spot focus frame 148
 - using to select panorama direction 89
 - using to select scene type 72
- Control wheel icon on display 62, 243–244
- Creative Style menu option 179–188
 - adjusting contrast, saturation, and sharpness 180–182, 470

- compared to Scene mode settings 188
- comparison charts for settings 184–185
- descriptions of individual settings 186–188
- incompatibility with other settings 183, 184
- list of settings 179
- saving custom settings 182–183
- CTRL for HDMI menu option 356
- Custom/Delete button 240–243
 - assigning an option to 327–335
 - list of options that can be assigned to 328–329
 - using to delete images and videos 242, 266–267
 - using to reset Photo Creativity settings 242
- Custom Key Settings menu option 149, 228, 324–337
- Custom menu 285–342
- Custom white balance
 - procedure for setting and using 167–169

D

- Date and time
 - setting 14, 359–361
- Date Format menu option 14, 361
- Date/Time Setup menu option 14, 359–361
- Day for night movie recording 389
- Daylight Savings Time adjustment option 14, 361
- Deactivate Monitor option 334–335
- Delete Confirmation menu option 349–350
- Delete menu option 268–269
- Deleting images and videos
 - with Custom/Delete button 266–267
 - with Delete menu option 268–269
- Demo Mode menu option 353–354
- Depth of field
 - relationship to aperture 54
- Digiscoping 448–449
- Digital zoom 307–308
- Diopter adjustment lever 225–226
- Display button 247, 263, 300
- Display Button menu option 226, 236–237, 247, 294–300
- Display MAC Address menu option 441
- Display Media Information menu option 368
- Display Quality menu option 351
- Display Rotation menu option 273–274
- DLNA server 436–437

- DMF (direct manual focus) 138, 472
 - using with Manual Assist option
 - need to press shutter button halfway 138, 472
 - using with Peaking Level option 138
- Down button
 - using to adjust exposure compensation 248
 - using to adjust movie volume 251
- DPOF (Digital Print Order Format) 280
- Drive Mode menu option 114–126
- Drive Mode menu options
 - introduction to 37–38
- DRO/Auto HDR menu option 172–178
 - DRO setting 172–174
 - HDR setting 175–178
 - incompatibility with other settings 178
- DRO Bracketing menu option 125–126
- Dual-system audio recording 403–405
- Dual Video Recording menu option 114, 381

E

- Edit Device Name menu option 440
- Electronic viewfinder
 - adjusting brightness 226, 345
 - procedure for using 224–227
 - switching between viewfinder and LCD 226, 314–315
- Enlarge Image menu option 277
- Enlarging image in playback mode 263
- Exposure bracketing 122–124
- Exposure compensation 151–152, 248–252
 - assigning to Control ring 251
 - setting in Manual exposure mode 65, 151–152, 248
 - using during movie recording 400
 - using with panoramas 90
- Exposure compensation icon on display 64–65
- Exposure Compensation menu option 151–152
- Exposure Settings Guide menu option 302–303
- External flash
 - LumoPro LP180 464
 - using with DSC-RX100 III camera 464–467
 - Yongnuo YN560 III 465–466
- Eye AF option 333–334
- Eye-Fi card 11, 347, 416

F

- Face detection 211
- Face Detection of registered faces 210–211, 318
- Face Registration menu option 318–320
- Fadeout for movie recording 386, 387, 388–389
- File Format menu option 113, 375–381
- File Number menu option 363–364
- Fill-flash setting 127–128
- Filter adapter
 - Lensmate 446, 461
 - Magfilter system 461
 - Sony VFA-49R1 446, 459–460
- Finder Color Temperature menu option 345
- Finder/Monitor menu option 226, 314–315
- Finder switch 224, 257
- Firmware
 - displaying version installed in camera 369
 - updating 369–370
- Flash
 - diffusing 471
 - general procedure for using 37–39, 224
 - incompatibility with other settings 36
 - preventing from firing 37
- Flash button 247–248
- Flash Compensation menu option 131–132
- Flash Mode menu option 126–131, 224, 247–248
- Flash Off setting 127
- Flash pop-up switch 224, 248
- Flexible Spot option for Focus Area 147–150, 336
 - activating focus frame to move again 149–150, 469
 - moving and resizing focus frame 148–150
 - using Control wheel to change size of focus frame 148
- Focus Area menu option 143
 - comparison of focus frame to Spot metering circle 161–162
- Focus frame
 - large dotted frame
 - meaning of 313–314
- Focus lock 136
- Focus Magnification Time menu option 140, 289–290
- Focus Magnifier menu option 140–141, 204–206, 289
 - assigning to a control button 140, 206
 - compared to MF Assist menu option 205–206
 - different magnification factor for movies 206

- using for movie recording 408
- Focus Mode menu option 134–143
- Folder for storing images on memory card
 - creating 365–366
 - naming system 366–367
 - selecting 364
- Folder Name menu option 366–367
- Format menu option 13, 362–363
- For Viewfinder display screen 236–237, 298–299
 - not available for movie recording 407
 - not available for viewing in viewfinder 295
- Function button 233–240
 - assigning options to 233
 - using to activate Send to Smartphone menu option 240
 - using to lock operation of Control wheel 239–240, 341–342
- Function menu 233–235
 - assigning options to 322–324, 470
 - list of options that can be assigned to 323
 - using during movie recording 400–401
 - using to adjust settings 233–235
- Function Menu Settings menu option 321–324

G

- Grid Line menu option 290–292
- Grip for camera body
 - Richard Franiec model 461–462
 - Sony AG-R2 462

H

- HDMI cable
 - for connecting camera to HDTV 451
- HDMI Information Display menu option 355–356, 452
- HDMI port 257
 - using to connect camera to HDTV 451–452
 - using to output shooting information 451–452
- HDMI Resolution menu option 354
- HDMI Settings menu option 354–356
- HDR (high dynamic range) processing 175
- Help screens 470
 - displaying 240–242
- High ISO Noise Reduction menu option 208
 - incompatibility with other settings 208
- Histogram

- playback mode 264–266
- shooting mode
 - displaying 297–298
- Hoya R72 infrared filter 450

I

- Image Index menu option 272–273
- Image Size menu option 101–105
 - relationship to Aspect Ratio setting 103
 - unavailability when Quality set to Raw 105
- iMovie software for Macintosh 376, 378, 413
- In-Camera Guide function 240–242
- Information display screens
 - playback mode 263–265
 - for movies 408
 - selecting with Display button 247
 - shooting mode
 - during movie recording 407
 - selecting 294–300
- Infrared photography 449–450
- Intelligent Auto Mode 46–49
- Interlaced video recording options 377, 379
- Internal memory
 - lack of in Sony DSC-RX100 III camera 7
- ISO 152–157
 - Auto ISO setting 153–154
 - ISO Auto Minimum and Maximum 153–154
 - applicability to Multi Frame Noise Reduction setting 156
 - Multi Frame Noise Reduction Setting 154–156
 - incompatibility with other settings 156
 - non-native settings 157
 - procedure for setting 152–154
- ISO setting of 25600 153, 155
 - how to set 86

J

- JPEG images 109
 - size of files 111

K

- Kelvin measurements of white balance 163

L

Language menu option 15, 358

LCD screen

- adjusting brightness of 343–345
- switching between LCD and viewfinder 226, 314–315
- tilting capability of 253–256
- turning off 334–335

Left button

- assigning an option to 336–337
- using to activate Drive Mode menu option 252–253

Lens

- range of focal lengths 223, 307

Level

- displaying 298

Live View Display menu option 303–306

- effect on view of Creative Style settings 180
- forced to Setting Effect On for movie recording 387, 408
- using with Manual exposure mode 304–305, 466–467

Lock-on AF setting for Focus Area 150–151, 208

- compared to Center Lock-on AF menu option 208

Long Exposure Noise Reduction menu option 207–208

- incompatibility with other settings 207–208

M

Manfrotto BeFree tripod 456

Manual exposure mode 61–68

- using for HDR processing 178

Manual focus 138–143

- using for soft focus effect 139

Manual Shift 67–68, 331

Meade ETX-90/AT telescope 446–447

Memory card

- capacity for storing images and video files 9, 373
- choosing 7–10
- formatting 12, 362–363
- inserting into camera 12
- special requirements for recording XAVC S video 9, 373
- speed of 9
- types of 8–10

Memory menu option 94, 220

Memory Recall menu option 219–220

Memory Recall mode 93–96, 219–220, 470

- Memory Stick cards 8
- Memory Stick XC-HG Duo card 373
- Menu button 232
 - using to return enlarged image to normal size 232
- Menu systems
 - list of 99
 - meaning of dimmed items 100
 - moving between 99
- Metering Mode menu option 160–163
 - Center setting 161–162
 - limitations on settings 162
 - Multi setting 160–161
 - Spot setting 161–163
- MF Assist menu option 139–141, 205–206, 230, 288–289
 - not available for movie recording 408
 - using to photograph moon 447
 - using with DMF 138, 230–231, 288
- Micref Level menu option 394–395
- Microphones
 - external
 - using for movie recording 403–405
- Micro-SD card 8
- M.M. icon for Metered Manual 63–64
- Mode dial 222
 - effects of position on recording movies 395–396
- Mode Dial Guide menu option 217, 348–349, 383
- Monitor Brightness menu option 343–345
- Motion Interval Adjustment menu option 279–280, 412
- Motion Shot app 412, 444
- Motion Shot feature 411–412
 - incompatibility with XAVC S video format 411
- Movie button 231–232
 - preventing accidental operation of 231–232, 339–340
- Movie Button menu option 231–232, 339–340
- Movie menu option 217, 382–389
 - Aperture Priority setting 385–386
 - Manual Exposure setting 388
 - using Auto ISO with 389
 - Program Auto setting 384–385
 - Shutter Priority setting 386–387
- Movie recording
 - effects of physical controls 400–403
 - limitations on recording length 373, 381
 - overview 39–42, 372, 405–407

Movies

- adjusting volume 44, 345
 - editing with computer 413–414
 - locating files on memory card 413–414
 - playing on computer 45
 - playing with iTunes, iPads, iPhones, and iPods 471
- MP4 video files
- location of 366
- MP4 video format 376
- Record Setting options 380–381
- Multi Frame Noise Reduction setting. *See* ISO
- Multi port 257
- My Best Portrait app 444

N

- ND Filter menu option 157–159
- assigning to control button 159
- New Folder menu option 365–366
- NFC active area 258, 426–427, 438
- NFC (near field communication) 258
- using to connect camera to Android device 425–428, 432–433, 438
- NO CARD error message 7

O

- One-touch NFC menu option 432, 438
- Optical slave flash units
- using with DSC-RX100 III camera 464–465
- Optical zoom 307

P

- PAL/NTSC menu option 352–353
- Panorama Direction menu option 89
- Panoramas
- playback procedure 91, 246
 - shooting 86–92
- Panorama Size menu option 88–89
- Peaking Color menu option 142, 302
- Peaking Level menu option 141–142, 289, 300–302
- using for photography of moon 447
- Photo Creativity feature 28–34
- background defocus setting 30–31
 - brightness setting 31

- color setting 32
- combining multiple settings 34
- picture effect setting 33–34
- resetting default values 34, 242
- using with movie recording 403
- vividness setting 33
- Photomatrix Pro software
 - using for HDR processing 177–178
- Photo Retouch app 444
- PictBridge printing protocol 282
- Picture Effect+ app 203–204, 444
- Picture Effect menu option 188–204
 - comparison charts for settings 189–191
 - HDR Painting setting 198
 - High Contrast Monochrome setting 197–198
 - Illustration setting 202–203
 - Miniature Effect setting 200–201
 - Partial Color setting 196–197
 - Picture Effect+ app 203
 - Pop Color setting 193–194
 - Posterization setting 194–195
 - Retro Photo setting 195
 - Rich-tone Monochrome setting 199–200
 - Soft Focus setting 198
 - Soft High-key setting 195–196
 - Toy Camera setting 192
 - Watercolor setting 201–202
- Playback
 - information display screens 263–265
 - movies 408–412
 - general procedures 43–45
 - panoramas 91
 - still images
 - enlarging image 263
 - general procedures 42–43, 259–260
 - index screens 223, 260–262
- Playback button 231, 259, 268
 - using to turn on camera 231, 268
- Playback menu 267–284
- PlayMemories Camera Apps 444
- PlayMemories Camera Apps app 444
- Plural Eyes software 404
- Pole aerial photography 433–434
- Power button 223

Power Save Start Time menu option 351–352
Pre-AF menu option 135, 306
Program Auto Mode 51–54
Program Shift 52–53
 not available for movie recording 403
Progressive video recording options 377, 379
Protect menu option 278–279

Q

Quality menu option 108–112
Quick Navi system 236–239, 299

R

Raw format for images
 considerations for using 109–112
 correcting exposure and white balance with post-processing 110–111, 170
 incompatibility with other settings 111, 112, 178, 183, 282, 313
 size of files 111
 using for HDR processing 178
Raw & JPEG setting for Quality 111–112
Rear Sync setting 130–131
Record Setting menu option 114–115, 376–381
Recover Image Database menu option 367
Red Eye Reduction menu option 133
Remote control
 Sony RM-VPR1 wired remote 462–464
 connecting to Multi port 257
 using smartphone or tablet for 428–434
Reset Network Settings menu option 442
Resetting camera to default settings 370–371
Resolution 102
Right button
 assigning an option to 337
Rotate menu option 276
Rule of Thirds 291

S

Saturation
 adjustments to 180–182
Scene mode 69–86
 Anti Motion Blur setting 81–83
 Fireworks setting 84–85

- Gourmet setting 84
- Hand-held Twilight setting 79
- High Sensitivity setting 85–86, 156
- incompatibility with other settings 69, 178
- information screen for scene type 71
- Landscape setting 76–77
- Macro setting 75
- Night Portrait setting 80–81
- Night Scene setting 78
- Pet setting 83
- Portrait setting 73
- procedure for selecting a scene type 69–72
- Sports Action setting 74
- Sunset setting 77
- Scene recognition 47–49
- Scene Selection menu option 70–71, 216–217
- Sekonic Prodigy color meter 165–166
- Select REC Folder menu option 364
- Self-portrait timer menu option 254–255, 316–317
- Self-timer 119–121, 472
 - taking multiple shots with. *See* Self-timer (Continuous)
- Self-timer (Continuous) 121
 - incompatibility with other settings 121
- Send to Computer menu option 415–421, 435, 439
- Send to Smartphone menu option 240, 424–427, 435
- Setting Reset menu option 370–371
- Setup menu 13, 342–371
- Sharpness
 - adjustments to 180–182
- Shooting menu
 - effects of non-movie-related items on recording movies 396–399
 - in general 101–105
 - movie-related menu options 374–395
 - navigating in 98–101, 470
- Shooting modes
 - list of 46
- Shoot Mode
 - option for Function menu 383
- Shutter button 222–223
- Shutter Priority Mode 58–61
- Shutter speed
 - BULB setting 66–67
 - procedure for setting 60–61, 62
 - range of available settings 58, 66

- range of settings for movie recording 384, 385, 386–387, 388
- Silhouette
 - creating with Manual exposure mode 68
- Single Exposure Bracketing menu option 123–124
- Single Shooting setting 115
- Single-shot AF menu option 135–136
- Slide Show menu option 274–276
- Slow-motion video
 - options for creating 377–378
- Slow Sync setting 128–130
- Smart Remote Control app 428, 432
- Smart Remote Embedded app 428–429, 432, 438, 443, 445
- Smart Zoom 308
- Smile/Face Detection menu option 209–212
- Smile Shutter option 211–212
- Softbox
 - Photoflex Lite-Dome XS 467
- Soft Skin Effect menu option 212–214
 - effects of with movie recording 399
 - incompatibility with other settings 213–214
- Sony DSC-RX100 III camera
 - features of 1
 - weaknesses of 1
- Sony Image Data Converter software 183
 - where to obtain 3
- Sony PlayMemories Home software 45, 413, 416
 - where to obtain 3
- Sony PlayMemories Mobile app 421, 423–424, 425, 428, 430–431, 433
- Sounds of camera controls
 - controlling 346
- Specify Printing menu option 280–282
 - incompatibility with Raw images 282
- Speed Priority Continuous Shooting setting 117–119
 - rate of shooting 118
- Spot AEL Hold option 332
- Spot AEL Toggle option 332
- SSID/PW Reset menu option 441–442
- Star Trail app 444
- SteadyShot (Movies) menu option 217, 389–392
 - cropping of frame with 391–392
- SteadyShot (Still Images) menu option 217
- Step Zoom option 223, 337–339
 - limitations of 338
 - not available for movie recording 407

Street photography 93, 115, 187, 197, 254, 333, 347

Superior Auto Mode 49–51

Sweep Panorama mode 86–92

incompatibility with other settings 87–88

T

Tables

Functions assigned to Control Ring with Standard setting 230, 327

number of images that fit on 8 GB card 104

Shooting menu items that affect movie recording 397

suggested control assignments for movie recording 406

suggested menu settings for movies in Intelligent Auto mode 40

suggested settings for Intelligent Auto mode 25

suggested settings for panoramas 89

suggested Shooting menu settings for recording movies 406–407

zoom range at various image sizes 313

Tile Menu menu option 348

Time-lapse app 443, 444, 472

Time zone

changing 361–362

Tripod icon

meaning of 48

Tripod socket 258

Tv notation on screen 60

U

Upload Settings menu option 347

USB Connection menu option 356–357

USB LUN Setting menu option 357

USB Power Supply menu option 357–358

V

Version menu option 369

VGA setting for Image Size 103

availability only when Aspect Ratio is 4:3 103

VGA setting for video recording 380–381

Video standard label: 60i or 50i 22

Viewfinder. *See* Electronic viewfinder

Viewfinder Brightness menu option 226, 345

View Mode menu option 262, 270–272, 408

View on TV menu option 435–437, 452

Volume Settings menu option 345

W

- WD TV Live media player 435–436
- Wheel Lock menu option 239–240, 340–342
- White balance
 - correcting using Raw processing software 170
- White Balance Bracketing menu option 124–125
- White Balance menu option 163–171
 - adjustments using color axes 169–170, 470
 - Auto White Balance setting 163
 - Color Temperature/Filter option 165–167
 - Custom White Balance setting 167–169
 - limitations on settings 170
 - procedure for setting white balance 163–170
- White Balance settings comparison chart 170–171
- Wide setting for Focus Area 144–145
- Wi-Fi menu 434–442
- Wind Noise Reduction menu option 395
- Windows Media Player software 436
- Windows Movie Maker software 45, 376, 378, 413
- Wireless Auto Import software for Macintosh 416
- WPS Push menu option 417, 439–440
- Wrist strap
 - attaching to camera 3
- Write Date menu option 320–321

X

- XAVC S video format 375–376
 - editing on computer 45
 - Record Setting options 377–378
 - requirement of special memory card for 9, 373, 376

Z

- Zebra menu option 286–288
- Zoom Function on Ring menu option 223, 337–339
- Zoom lever 223
- Zoom scale on display
 - differences for different zoom settings 309–312
- Zoom Setting menu option 307–314
 - incompatibility with other settings 313