

Contents

Introduction	1
CHAPTER 1: PRELIMINARY SETUP	3
Setting Up the Camera	3
Charging and Inserting the Battery	3
Inserting the Memory Card.	5
Introduction to Main Controls	7
Top of Camera	7
Back of Camera	8
Front and Sides of Camera	9
Bottom of Camera	10
Setting the Date, Time, and Language	10
CHAPTER 2: BASIC OPERATIONS	13
Fully Automatic—Auto Mode	13
Basic Variations from Fully Automatic.	15
Focus	15
Manual Focus	18
Exposure	20
Exposure Compensation	20
Flash.	21
Motion Picture Recording.	23
Viewing Pictures and Movies	26
Review While in Shooting Mode.	26
Reviewing Images in Playback Mode	26
Playing Movies	26
CHAPTER 3: THE SHOOTING MODES	28
Auto Mode	28
Program Mode.	29
Shutter Priority Mode	30
Aperture Priority Mode	33
Manual Exposure Mode	35

Scene Modes	38
Landscape	39
Night Portrait	40
Night Landscape	41
The SCENE Setting on the Mode Dial	43
Scene Auto Selector	43
Portrait	45
Sports	45
Party/Indoor	46
Beach	46
Snow	47
Sunset	47
Dusk/Dawn	47
Close-up	48
Food	49
Museum	49
Fireworks Show	50
Black and White Copy	50
Backlighting/HDR	51
Easy Panorama	53
Pet Portrait	55
Moon	55
Bird-watching	56
Time-lapse Movie	58
Special Effects Mode	60
Soft	61
Nostalgic Sepia	61
High-contrast Monochrome	62
High Key	62
Low Key	63
Selective Color	63
High ISO Monochrome	64
Cross Process	64
User Settings Mode	65

CHAPTER 4: THE SHOOTING MENU

67

Image Quality	70
Image Size	70
Picture Control	73
Standard	74
Neutral	74

Vivid 74

Monochrome 75

Adjustments to Picture Control Settings 75

Custom Picture Control 77

White Balance 78

Metering 82

Continuous shooting 84

ISO Sensitivity 90

 Minimum Shutter Speed 92

Exposure Bracketing 93

AF Area Mode 94

 Face Priority 94

 Manual (Spot, Normal or Wide). 95

 Subject Tracking 96

 Target Finding AF. 96

Autofocus Mode 97

Flash Exposure Compensation 98

Noise Reduction Filter 99

Active D-Lighting 99

Multiple Exposure 101

Save User Settings 102

Reset User Settings 103

Zoom Memory and Startup Zoom Position 103

Manual Exposure Preview 105

CHAPTER 5: PHYSICAL CONTROLS

Power Switch. 107

Shutter Release Button 107

Mode Dial 108

Zoom Lever 108

Function Button 109

Flash Pop-up Button. 110

Side Zoom Control. 111

Snap-back Zoom Button 111

Playback Button 112

Wi-Fi Button 112

Diopter Adjustment Dial 113

Monitor Button and Eye Sensor. 113

Display Button 113

Movie Button 115

Command Dial. 115

Menu Button	116
Delete/Trash Button	116
Multi Selector and its Buttons and Dial	117
Multi Selector Dial	117
OK Button	117
Direction Buttons	118
Up Button: Flash Settings.	119
Right Button: Exposure Compensation	119
Down Button: Focus Mode	120
Left Button: Self-timer; Smile Timer; Pet Portrait Release	120
AF Assist/Red-eye Reduction/Self-timer Lamp	122
Items on Right Side of Camera	123
Tilting and Swiveling LCD Screen	124

CHAPTER 6: PLAYBACK

126

Normal Playback.	126
Index Views, Calendar View, and Enlarging Images	126
Various Playback Screens.	128
Viewing Shots Taken in a Sequence	130
The Playback Menu	132
Mark for Wi-Fi Upload.	133
Quick Retouch	133
D-Lighting.	134
Skin Softening	135
Filter Effects	135
Slide Show	139
Protect.	140
Rotate Image	141
Small Picture	142
Sequence Display Options	142
Choose Key Picture	143
Printing Images	144
Printing Directly from the Camera	144

CHAPTER 7: THE SETUP MENU AND THE LOCATION DATA OPTIONS MENU

146

The Setup Menu	146
Time Zone and Date	147
Slot Empty Release Lock	148

Monitor Settings	148
EVF Auto Toggle	151
Date Stamp	151
Vibration Reduction	152
AF Assist.	154
Digital Zoom	154
Assign Side Zoom Control	156
Sound Settings	157
Auto Off	157
Format Card.	158
Language	159
Charge by Computer	159
Toggle Av/Tv Selection	160
Reset File Numbering.	160
Peaking	161
Reset All.	161
Firmware Version	161
The Location Data Options Menu.	162
Location Data Options	163
Record Location Data	163
Update A-GPS File	165
Points of Interest (POI)	165
Create Log.	168
View Log	169
Set Clock from Satellite.	170

CHAPTER 8: MOTION PICTURES

172

Movie-making Overview	172
Quick Guide to Recording a Movie Clip.	172
Other Settings for Movies	173
Still Photo Settings Available for Movies.	174
Focus Mode	174
Exposure, Exposure Compensation, and Exposure Lock.	175
Self-timer.	176
Picture Control.	176
White Balance	176
Metering	176
Vibration Reduction	177
Zoom.	177
Taking Still Images During Movie Recording	177
Pausing Recording with the OK Button	178

Fn Button: Does Not Operate During Video Recording	178
Settings That Are Not Adjustable for Video Recording	179
The Movie Menu	179
Frame Rate	180
Movie Options	181
HS (High Speed) Movie Options	182
Autofocus Mode	184
Electronic VR (Vibration Reduction)	186
Wind Noise Reduction	186
Zoom Microphone	186
Movie Playback and Editing	187
Playback	187
Editing	188

CHAPTER 9: WI-FI FEATURES, SUPERZOOM LENS, AND OTHER TOPICS 191

Wi-Fi Features	191
Transferring Images to Smartphone or Tablet	191
Controlling the Camera Using a Smartphone or Tablet	195
Making a Connection Using NFC	196
Wi-Fi Options Menu	196
Connect to Smart Device	197
Upload from Camera	197
Disable Wi-Fi	197
Options	197
Current Settings	199
Restore Default Settings	199
Using the Superzoom Lens	199
Macro (Close-up) Photography	204
Using Flash	207
Infrared Photography	211
Street Photography	212
Connecting to a Television Set	214

APPENDIX A: ACCESSORIES 216

Cases	216
Batteries and Chargers	217
AC Adapter	218
External Flash	219
Tripods	222
Pole Attachment	222

APPENDIX B: QUICK TIPS 223

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 226

Photography Books 226
Digital Photography Review 226
Reviews of the Coolpix P610 226
The Official Nikon Site 227
Photography Information 227

INDEX 228