

# Index

## Symbols

- 4K Output Select menu item 221, 258
- 4K video
  - in general 234
  - using as a type of continuous shooting 298
- 5-minute recording limit for high-quality video
  - avoiding by recording to external recorder 221, 233, 235, 296
- 24p, 30p, 60p, and 120p video frame rates 235–238
- 24p/60p Output menu item 218
- 35mm-equivalent zoom range 185

## A

- AC adapter
  - Sony AC-UB10C 289
- Access lamp 13, 156
- Access Point Settings menu item 267, 279
- Adobe Bridge software 226
- Adobe Camera Raw software 64, 108
- Adobe Lightroom software 285
- Adobe Photoshop software 105, 106
- Adobe Premiere Pro software 258, 265, 298
- AEL Hold option 200–201
- AEL Toggle option 200
- AEL w/Shutter menu item 190–191
  - using with continuous shooting 68
- AF Illuminator menu item 89, 139
- AF Illuminator/Self-timer Lamp 138
- AF/MF Control Hold option 201
- AF/MF Control Toggle option 84, 147, 201
- Airplane Mode menu item 266, 278
- Anker 40-watt desktop USB charger 290
- Anti Motion Blur scene type setting 47–48
  - compared to Hand-held Twilight setting 48–49
- Aperture
  - range of available settings 33, 39
  - effect of focal length on 34–35
- Aperture Priority exposure mode for movies 240–241
- Aperture Priority mode 32–34
- Apple Computer devices and software
  - playing movies with 299
- Application List menu item 281
  - assigning to a control button 283
- Application Management app 282
- Application menu 281–283
- Area Setting menu item 225
- Aspect Ratio menu item 60–61
  - relationship to Image Size menu item 59
- Astrophotography 283–284
- Atomos Shogun video recorder 221, 235, 296–297
  - controlling from RX100 IV camera 220
  - recording video to 256–258
- Audio Recording menu item 133, 246
- Audio Signals menu item 210
- Auto Dual Recording menu item 129–130, 239, 259
- Autoflash setting 75
- Autofocus
  - using while in manual focus mode 201
- Autofocus point
  - zooming in on in playback mode 25, 159
- Auto ISO setting
  - setting minimum and maximum values for 90–91
  - setting minimum shutter speed for use with 92–93
  - using with Manual exposure mode 38–39
- Auto Mode 27–28
- Auto Mode menu item 27, 131
- Auto Object Framing menu item 130–131
  - incompatibility with other settings 130
- Auto Review menu item 177
  - deleting an image in Auto Review 177
- Auto Slow Shutter menu item 133, 245–246
  - works only when Auto ISO is in effect 246
- AVCHD format for movies 235

**B**

- Back focus feature 201
- Background defocus setting for Photo Creativity 18
- Battery
  - charging 2–4
    - indicator light 4
    - time for full charge 4
    - when camera connected to computer 224
  - generic replacement 289
  - Sony NP-BX1 2, 289
- Battery charger
  - generic external charger 289
  - Sony AC-UB10C 3
  - Sony BC-TRX external charger 289
  - using as external power source 3
- Battery/memory card compartment 156
- Beauty Effect menu item 170
- Bit rates of video formats 237
- Black Gamma 123
- Black Level 123
- Blurred background
  - how to achieve 32–33
- Bokeh 33
- Bounce flash 137
- Bracket Order menu item 74
- Bracket Settings menu item 74, 300
- Bright Monitoring menu item 203
- Brightness setting for Photo Creativity 18
- BULB setting for shutter speed 39–40

**C**

- Calendar display of images 158
- Camera apps 281–283
- Capture One Express software 2, 108
- Capturing still frames from 4K video sequence 259
- Cases for RX100 IV camera
  - Camson leather case 288
  - Sony LCJ-RXF 287
  - Sony LCM-CSVH 288
- Center button 148–149
  - assigning a function to 203
  - using to activate focus tracking 149, 203
  - using to adjust location of Flexible Spot focus frame 87, 149, 203
  - using to determine reason for setting conflict 299
  - using to magnify focus area 125–126, 149, 204
  - using to play a panorama at larger size 149
  - using to play a video 149
  - using to return enlarged image to normal size 141, 149
- Center Button menu item
  - using Standard setting 87, 203, 298
- Center Lock-on AF menu item 127
  - compared with Lock-on AF setting for Focus Area 127
  - incompatibility with other settings 127
- Center option for Focus Area 85–86
  - distinguishing focus frame from Spot metering circle 96
- Center option for Metering Mode 95, 96
- Clean HDMI signal output 219–220, 286
- Clear Image Zoom 185–189
- Clipping of highlights 152, 160, 172, 180
- Clipping of shadow areas 160, 179
- Closeup (macro) photography
  - focusing distance of lens 44
- Color Depth 124
- Color Mode 124
- Color Phase 124
- Color setting for Photo Creativity 19
- Color Space menu item 133
- Color temperature
  - using to set white balance 98–99
- Continuous AF setting 80–81
- Continuous shooting option 67–68
  - using autoexposure with 68, 191
  - using autofocus with 68
- Contrast
  - adjusting 107–108
- Control ring 139–140
  - assigning functions to 139–140, 196–198
  - speeding up zoom operation 204
  - Standard option for settings 139, 197–198
  - using to adjust exposure compensation 152
  - using to adjust manual focus 82, 140
  - using to select panorama direction 51, 66

- using to select scene type setting 42, 132
- using to set aperture 33, 36
- using to set shutter speed 35
- Control Ring option of Custom Key Settings menu item 139–140
- Control wheel 147–148
  - icon on display screen 147–148
  - locking operation of 145, 206–207
  - using to control both aperture and shutter speed 36, 148, 150
  - using to select scene setting 132, 148
  - using to set aperture 33, 148
  - using to set panorama direction 51–52, 148
  - using to set shutter speed 35–36, 148
- Copyright Info menu item 225
- Counter option for movie recording 215
- Creative Style comparison charts 109
- Creative Style menu item 106–111
  - adjusting contrast, saturation, and sharpness 107–108
  - comparison of settings to Scene mode settings 111
  - incompatibility with other settings 108
  - using with Raw images 108
- CTRL for HDMI menu item 220
- Custom/Delete button
  - assigning function to 198–205
  - using for In-Camera Guide option 146
  - using to delete images or videos 147, 161
  - using to reset Photo Creativity settings 146
  - using to return movable focus frame to center 86
- Custom Key Settings menu item 196–204
- Custom menu 171–207
- Custom white balance
  - how to set 99–100

## D

- Date and Time
  - setting with Setup menu 8, 224–225
- Date/Time Setup menu item 224–225
- DaVinci Resolve software 300
- Day for night movie recording 243
- Deactivate Monitor menu item 203

- Delete Confirmation menu item 211
- Delete menu item 162–163
- Deleting images or videos 147, 159, 161, 177
- Demo Mode menu item 214–215
- Depth of field
  - relationship to aperture setting 32–33
- Detail (Picture Profile parameter) 124
- Digiscoping 284
- Digital Zoom 185–189
- Diopter adjustment lever 137
- Display button 150
- Display Button menu item 138, 144, 178–181
- Display MAC Address menu item 280
- Display Media Information menu item 230
- Display Quality menu item 212–213
- Display Rotation menu item 165
- DLNA streaming media server 277
- DMF (Direct Manual Focus) 81
  - requirement to hold shutter button down halfway with MF Assist 81, 140, 172
- Down button
  - inability to be reassigned to other functions 152
  - using to adjust exposure compensation 150
  - using to adjust volume for movies 152
  - using to switch functions of Control wheel 36, 150
- DPOF (Digital Print Order Format) printing 169
- Drive Mode
  - basic procedure for using 22–23
- Drive Mode menu item 67–74
- DRO/Auto HDR menu item 102–106
  - incompatibility with other settings 106
- DRO bracketing 74–75
  - order not affected by Bracket Order menu setting 74
- DRO (dynamic range optimizer) setting 102–103
  - effect on Raw images 105
- Dual Video Recording menu item 66, 238

## E

- Edit Device Name menu item 279–280
- Electronic shutter 34, 191–192
  - fastest setting available when using flash 33, 34, 39, 78

- Electronic viewfinder 137–138
  - adjusting brightness of 209
  - adjusting color temperature 209
  - setting camera to power off when EVF closed 138, 155, 213
  - setting information display screens for 138
  - switching between EVF and LCD screen 138, 189
  - turning on camera by popping up EVF 136, 137
- Enlarge Image menu item 167
- Enlarging images with zoom lever 136, 159
- Expand Flexible Spot setting for Focus Area 87–88
- Exposure bracketing
  - continuous 71–72
  - incompatibility with other settings 73
  - order of bracketed exposures 72
    - changing 74
  - single 73
  - using exposure compensation with 72
  - using flash with 72
  - using self-timer with 74, 300
- Exposure compensation 150–152
  - limited adjustment range for movies 89, 250
  - using with Manual exposure mode 38, 89
  - using with Sweep Panorama mode 52
- Exposure Compensation menu item 89
- Exposure Settings Guide menu item 182
- External audio recorder 297
  - Tascam DR-100MkII 297
- External flash
  - LumoPro LP180 294–295
  - using with RX100 IV camera 294
  - Yongnuo YN560 III 295
- Eye AF option 147, 202–203
  - not available for movie recording 202
- Eye-Fi card
  - setting upload options for 210
- Eye sensor 189
- F**
- Face Detection On menu item 128
- Face Detection On (Registered Faces) menu item 128
- Face Registration menu item 193
- Fadeout
  - in-camera effect for movies 241, 242–243
- Fade to white
  - in-camera effect for movies 243
- File Format menu option 65–66, 234–235
  - incompatibility with other settings 221
- File Number menu item 227
- Fill-flash setting 76–77
- Filter adapter
  - Lensmate 52mm version 290–291
  - Sony VFA-49R1 49mm version 291
- Final Cut Pro software 298
- Finder Color Temperature menu item 209
- Finder/Monitor menu item 138, 189
- Finder switch 137, 155
- Fireworks scene type setting 49
- Firmware
  - checking for updates 231
  - displaying version 230
- Flash
  - basic procedure for using 20–22
- Flash Compensation menu item 78
- Flash Mode menu option 75–78
- Flash Off setting 75
- Flash pop-up switch 136
- Flash synchronization speed 78, 191
- Flash unit 136–137
  - cannot be used until manually popped up 150
  - moving for bounce flash 137
- Flexible Spot option for Focus Area 86–87
- Focus Area menu item 84–89
  - incompatibility with other settings 189
- Focus frame
  - changing size and location of 86–87, 298
  - quickest ways to make changes 87
- Focusing on off-center subject 85
- Focus Magnification Time menu item 82, 173
- Focus Magnifier menu item 82–83, 124–126
  - assigning to a control button 126
  - compared to MF Assist option 125–126, 173
  - using for recording movies 126
- Focus Mode menu item 79–83

Focus tracking. See Lock-on AF setting for Focus Area

Folder Name menu item 229

Format item on Setup menu 7–8, 226–227

For Viewfinder display screen 143–144, 180  
not available for video recording or in Movie mode 180, 261

Function button 141–145  
using to activate Send to Smartphone option 145  
using with Wheel Lock menu item 145

Function for VF Close menu item 138, 213

Function menu 141–143  
assigning options to 141–142, 194–196  
using during video recording 252  
using to adjust settings 142–143

Function Menu Settings menu item 194–196

## G

Gamma 123

G-Cord 1000 mAh Boutique Mobile Power Supply 290

Gourmet scene type setting 49

Grid Line menu item 174–175

Grip, accessory  
Richard Franiec version 291–292  
Sony AG-R2 292

## H

Hand-held Twilight scene type setting 46  
compared to Anti Motion Blur setting 46

HDMI Audio Output menu item 220

HDMI cable 286

HDMI Information Display menu item 219–220

HDMI Only menu items 221

HDMI port 155

HDMI Resolution menu item 218

HDMI Settings menu item 218–221

HDR (high dynamic range) photography 103–105

HDR setting in camera 104–105  
incompatibility with Raw format 105

Help system. See In-Camera Guide option

HFR Settings menu item 66, 239, 254–256

High Frame Rate menu item 132, 239, 254

High Frame Rate recording 254–257  
range of available shutter speeds 254

High ISO Noise Reduction menu item 126–127  
incompatibility with other settings 127

High Sensitivity scene type setting 49–50  
compared to Anti Motion Blur and Hand-held Twilight settings 49

Histogram 159–161  
activating in shooting mode 161, 179

## I

Illustrations  
controls on back of camera 11, 140  
controls on top of camera 10, 135  
electronic viewfinder 137  
items on bottom of camera 13, 156  
items on front of camera 11, 138  
items on left side of camera 12  
ports on right side of camera 12, 155

Image Data Converter software 2, 108  
using to process Raw files 64, 285

Image Index menu item 164–165

Image sensor  
resolution of 58

Image size  
relationship to aspect ratio 59

Image Size (Dual Recording) menu item 65, 259

Image Size menu item 58–60

iMovie software 236, 265

In-Camera Guide option 146, 200

Index screen of images 136, 157–158

Information display screens  
playback mode 159–161  
selecting ones to be available 178–181

Intelligent Auto Mode 28

Interlaced video formats 236, 237

ISO 89–92  
basic procedure for setting 37  
MFNR setting 91–92  
native settings 92  
range of available settings 90

- range of available settings for movies 250
- setting minimum and maximum values for Auto ISO 90–91
- ISO Auto Minimum and Maximum settings 90–91
- ISO Auto Minimum Shutter Speed menu item 92–93
- ISO setting of 25600
  - availability of 50, 90, 91

**J**

- JPEG images 63–64

**K**

- Kelvin units of color temperature 97
- Knee 123

**L**

- Landscape scene type setting 45
- Language
  - selecting on Setup menu 8, 224
- Large focus frame
  - indicating focusing difficulty or non-optical zoom 85, 189
- LCD screen
  - ability to tilt up, down, or 180 degrees forward 153–154
  - adjusting brightness of 208–209
  - in general 153
  - setting information display screens for 138
  - switching between LCD screen and EVF 138
  - turning off with control button 203
  - using when lighting is dim 203
- Left button
  - assigning a function to 204
  - using to activate Drive Mode 153
- Lens
  - focal length range of 12
  - focusing distance for closeup shots 44
- Level display screen 180
  - using for panorama shooting 52
- Live View Display menu item 182–184
  - forced to Setting Effect On in some shooting modes 184, 242
- Locations of still images and videos on memory card 228, 256, 264

- Locking exposure 190–191, 200–201
- Lock-on AF setting for Focus Area 88–89
- Long Exposure Noise Reduction menu item 126
  - incompatibility with other settings 126
- Lowepro Inverse 100 AW Waist Pack 288

**M**

- Macro scene type setting 44–45
- Manfrotto BeFree tripod 289, 297
- Manual exposure mode 36–40
- Manual Exposure mode for movies 242–243
- Manual focus 82–84
  - focusing aids 82–83
- Manual Shift feature 40, 200
- Marker Display menu item 175
- Marker Settings menu item 175–177
- Mechanical shutter 34, 191–192
- Memory Card + HDMI menu item 221
- Memory cards
  - capacity for storing images and videos 6, 230, 233
  - Eye-Fi cards 6
  - formatting in camera 7
  - inserting into camera 7
  - micro-SD cards 4
  - operating camera without card 4, 189–190, 258, 296
  - SanDisk Extreme 256 GB SDXC card 233
  - SD, SDHC, and SDXC cards 4
  - Sony Memory Stick cards 5
  - special requirements for XAVC S video formats 5, 232–233, 234
  - types of 4–5
- Memory menu item 54, 134
- Memory Recall menu item 55, 133–134
- Memory Recall mode 53–55, 133–134
- Menu button 141
  - using to return enlarged image to normal size 141
- Menu items
  - dimmed because of conflicting settings 58
  - preceded by icons: Stills, Movies, HFR 58
- Metering Mode menu item 95–97
  - incompatibility with other settings 96, 189

MF Assist menu item 82, 172–173, 284  
 compared to Focus Magnifier option 125–126  
 not available for movies 261

MFNR (Multi Frame Noise Reduction) setting 91–92

Micref Level menu item 133, 246

Minimum shutter speed  
 setting for use with Auto ISO 92

M.M. icon for metered manual value 37

Mode dial 135

Mode Dial Guide menu option 27, 211

Monitor Brightness menu item 208–209  
 lower setting when Wi-Fi in use 209

Motion Interval Adjustment menu item 168

Motion Shot camera app 264

Motion Shot feature for movie playback 263

Movie button 141  
 limiting operation to Movie and HFR modes 141, 206–207

Movie Button menu item 141, 206–207

Movie (exposure mode selection) menu item 132, 239–243

Movie Maker for Windows software 237

Movie position on Mode dial  
 reasons for using 247–248

Movies  
 adjusting playback volume 209  
 editing 264  
 recording  
 basic procedure 23–24  
 functions that work from control buttons during video  
 recording 253  
 time limits 233, 234  
 to external video recorder 256–258  
 using external audio recorder 258–259

MP4 format for movies 235

Multi option for Metering Mode 95, 96

Multi port 155  
 uses of 12

## N

ND Filter menu item 94–95

Neutral density filter. See ND Filter menu item

New Folder menu item 228

NFC area on left side of camera 155, 272, 278

NFC (near field communication) protocol 155–156, 278  
 using to connect camera to Android device 271–272, 278

Night Portrait scene type setting 47

Night Scene scene type setting 46

NO CARD warning message 189–190

NTSC/PAL Selector menu item 213

## O

One-touch NFC menu item 278

Optical slave flash 294

Optical zoom 185

Overheating of camera 233, 234

Overlay icon  
 indicator of burst of shots in Superior Auto mode 30

## P

Panorama Direction menu item 51, 66

Panorama Size menu item 51, 66

Panoramas, playback 52

Panoramas, shooting. See Sweep Panorama mode

Peaking Color menu item 84, 182, 284

Peaking Level menu item 83–84, 181–182, 284

Pearstone 4.2-inch articulating arm 296

Pet scene type setting 48

Photo Creativity feature 16–20  
 not available with Raw format 17

Photomatix software 105

PictBridge printer 169

Picture Effect comparison charts 112–113

Picture Effect menu item 111–119  
 HDR Painting setting 117  
 High Contrast Monochrome setting 116  
 Illustration setting 119  
 incompatibility with other settings 119  
 incompatibility with Raw format 111  
 Miniature Effect setting 118  
 Off setting 113  
 Partial Color setting 115–116  
 adjusting range of colors recognized 115  
 Pop Color setting 114

- Posterization setting 114
- Retro Photo setting 115
- Rich-tone Monochrome setting 117
- Soft Focus setting 116
- Soft High-key setting 115
- Toy Camera setting 113
- Watercolor setting 118
- Picture Effect setting for Photo Creativity feature 20
- Picture Profile menu item 120–124, 239, 300
  - adjusting parameters for a Picture Profile 122–124
  - assigning to a control button 239
  - characteristics of 7 preset options 121
  - effect of setting on Raw images 124
  - incompatibility with other settings 124
- Picture Profiles comparison chart 122
- Playback
  - movies
    - basic procedure 25–26, 262–264
    - selecting still images or videos to view 163–164
    - still images
      - basic procedures 25, 157
- Playback button 140–141
  - using to turn on camera 136, 140, 300
- Playback menu 161–170
- PlayMemories Home software 2, 265, 266
- PlayMemories Mobile app 269, 271, 273, 274, 275
- Pole aerial photography 275–276
- Portrait scene type setting 43
- Power button 136
  - indicator light 136
- Power Save Start Time menu item 212
- Pre-AF menu item 184
- Printing images directly to printer 169
- Program Auto exposure mode for Movies 240
- Program mode 30–32
- Program Shift feature 31
  - not available for movie recording 253
- Progressive video formats 236, 237
- Protect menu item 167

## Q

- Quality (Dual Recording) menu option 65, 259
- Quality menu item 62–64
- Quick Navi system 143–145

## R

- Raw format
  - correcting images taken with bad camera settings 63–64, 100
  - incompatibility with other settings 17, 46, 48, 60, 64–65, 105, 111, 127, 130
  - in general 63–64
- Raw & JPEG option for Quality setting 64
- Rear Sync flash setting 77
- Rec Control menu item 220
- Record Setting menu item 66, 235–238
  - incompatibility with other settings 221
- Recover Image Database menu item 229
- Red Eye Reduction menu item 79
- Release Without Card menu item 189–190
- Remote Camera Control software 1, 2, 222–223
- Remote control
  - Sony RM-SPR1 wired remote 294
  - Sony RMT-VP1K infrared remote 293–294
  - Sony RM-VPR1 wired remote 292–293
    - using smartphone to control camera 273–276
- Reset Network Settings menu item 281
- Resetting camera settings 231
- Right button
  - assigning a function to 204
  - using to activate Flash Mode menu 150
- Rotate menu item 167

## S

- Saturation
  - adjusting 107–108
- Saturation (Picture Profile parameter) 124
- Scene mode 40–50
  - incompatibility with other settings 41
  - methods of selecting a scene type 42–43
- Scene recognition feature 28
  - requires face detection to be on to recognize faces 28



- Scene Selection menu item 41–42, 132
- Sekonic Prodigy color meter 98
- Select REC Folder menu item 228
- Self-portrait Timer menu item 154, 192
- Self-timer 70–71
  - basic procedure for using 23
  - not available for movies or panoramas 71
  - using for closeup photography 44
  - using with exposure bracketing 74, 300
- Self-timer (Continuous)
  - incompatibility with other settings 71
  - using to take multiple shots 71
- Self-timer During Bracket menu option 74
- Send to Computer menu item 268–269, 277
- Send to Smartphone menu item 145, 270, 276
- Setting Reset menu item 231
- Setup menu 207–230
- Sharpness
  - adjusting 107–108
- Shooting menu
  - in general 56–57
- Shooting modes
  - list of 27
- Shooting still images during movie recording 259–260
- Shutter button 135–136
- Shutter Priority exposure mode for movies 241–242
- Shutter Priority mode 34–36
- Shutter speed
  - range of available settings 33, 34, 39–40
  - range of available settings for HFR videos 254
  - range of available settings for movies 240, 242
- Shutter Type menu option 34, 191–192
- Silhouettes
  - using Manual exposure mode for 40
- Single shooting setting for Drive Mode 67
- Single-shot AF setting 80
- Slide Show menu option 166
- S-Log2 gamma curve 121, 239
  - minimum ISO setting of 1600 when using 121
- Slow Sync flash setting 76
- Smart Remote Control app 273
- Smart Remote Embedded app 273
- Smart Zoom 186–189
- Smile/Face Detection menu item 127–129
- Smile Shutter menu item 128–129
- Softbox for external flash 295
- Soft Skin Effect menu item 130
  - requirement to have Face Detection turned on 130
- Sony Bravia TV 277
- Sony RX100 IV camera
  - features of 1
  - items supplied with in box 2
- Specify Printing menu item 169
- Speed Priority Continuous Shooting menu option 69–70
  - unavailability of continuous focus adjustments with 69
  - using autoexposure with 69
- Sports Action scene type setting 43
- Spot AEL Hold option 201
- Spot AEL Toggle option 201
- Spot option for Metering Mode 95, 96
- Spotting scope, connecting camera to 284
- SSID/PW Reset menu item 280
- SteadyShot (Movies) menu item 133, 243–244
  - cropping of video image with 244
  - incompatibility of Active and Intelligent Active settings with 4K video format 243
- SteadyShot (Still Images) menu item 132
- Step-by-step guides
  - connecting with NFC 271–272
  - high frame rate video recording 254
  - sending images to a computer 266–269
  - sending images to a smartphone 269–270
  - taking pictures in Auto mode 13
  - using external audio recorder for movie recording 258–259
  - using smartphone as remote control for RX100 IV 273
- Step Zoom option 136, 204–205
  - not available for movies 261
- Street photography 285–286
  - extracting still frames from 4K video for 285–286
  - using tilting LCD screen for 154
- Sunset scene type setting 45
- Superior Auto mode 29–30
- Sweep Panorama mode 50–53
  - incompatibility with other settings 51, 62

**T**

## Tables

- behavior of RX100 IV for video recording in various modes 249
  - functions assigned to Control ring with Standard setting 140, 197–198
  - images that fit on 64 GB memory card 60
  - maximum zoom range at various image sizes 188
  - Picture Profile settings 121
  - recommended settings for recording to Shogun recorder 257
  - Shooting menu items that affect movie recording 250
  - suggested control assignments for movie recording 260
  - suggested settings for Auto Mode still images 15
  - suggested settings for movies in Intelligent Auto mode 24
  - suggested settings for panoramas 52
  - suggested Shooting menu settings for movies 261
- TC Format menu item 217
- TC Make menu item 218
- TC Output menu item 220
- TC Preset menu item 217
  - using to reset time code 294
- TC Run menu item 217
- TC/UB Display Setting menu item 215
- TC/UB Settings menu item 215–218
- Telescope, connecting camera to 283
- Television set, playing images and videos on 277, 286
- Tethered shooting 1, 222–223, 298
- Tile Menu menu option 210
- Time code
  - options for displaying and recording 215–218
  - procedure for resetting 294
  - setting for output through HDMI port 220
- Time-lapse photography 223, 300
- Time zone
  - selecting 225
- Touch Shutter option for remote control app 275
- Tripod socket 156
- Tv notation for shutter speed 35

**U**

- UB Preset menu item 217
- UB Time Record menu item 218
- Upload Settings menu item 210
- USB Connection menu item 221–222
  - PC Remote option for controlling camera from computer 222–223
  - using MTP option for downloading camera apps 222
- USB LUN Setting menu item 223
- USB Power Supply menu item 224
- User Bit option for movie recording 216–217
  - setting to display current time 218
- using to zoom the lens 136

**V**

- Version menu item 230–231
- VGA setting for Image Size
  - available only with 4:3 aspect ratio 59
- Viewfinder Brightness menu item 209
- VIEW icon on screen to indicate Setting Effect Off 106, 184
- View Mode menu item 163–164, 262
- View on TV menu item 277, 286
- Vividness setting for Photo Creativity feature 19
- Volume Settings menu item 209

**W**

- WD TV Live media player 277
- Wheel Lock menu item 145, 206–207
- White balance bracketing 73
- White balance comparison chart 101
- White Balance menu item 97–101
  - adjusting setting with color axes 100–101
- Wide option for Focus Area 84
- Wi-Fi menu 276–281
- Wind Noise Reduction menu item 133, 246–247
- Wireless Auto Import software 266
- WPS Push menu item 267, 279
- Write Date menu item 193–194

**X**

- XAVC S 4K format for movies 234–235
- XAVC S HD format for movies 235

- incompatibility with other settings 237
- XAVC S video formats
  - special memory card requirements for 5

## **Z**

- Zebra menu item 171–172
- Zone focusing 201
- Zoom Function on Ring menu item 204–205
- Zoom lever 136
  - using to display index screen 136
  - using to enlarge images 136
- Zoom Setting menu item 185–189
- Zoom Speed menu item 136, 185