

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Choosing and Inserting a Memory Card	5
Setting the Date, Time, and Language	8
CHAPTER 2: INTRODUCTION TO CONTROLS AND BASIC OPERATIONS	10
Introduction to Main Controls	10
Top of Camera	10
Back of Camera	11
Front of Camera	11
Left Side of Camera	12
Right Side of Camera	12
Bottom of Camera	13
Taking Pictures in Intelligent Auto Mode	13
Variations from Fully Automatic	15
Focus	15
Focus Modes	15
Other Settings	16
Drive Mode: Self-Timer and Continuous Shooting	16
Overview of Movie Recording	17
Viewing Pictures and Movies	18
Review While in Shooting Mode	18
Reviewing Images in Playback Mode	18
Playing Movies	18
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	20
Auto Mode (Intelligent or Superior)	20
Superior Auto Mode	21
Program Mode	22
Aperture Priority Mode	23
Shutter Priority Mode	25
Manual Exposure Mode	26
Scene Mode	29
Portrait	31
Sports Action	32
Landscape	32
Sunset	32
Night Scene	33
Hand-Held Twilight	33
Night Portrait	33
Anti Motion Blur	34
Sweep Panorama Mode	34
Memory Recall Mode	36

CHAPTER 4: THE SHOOTING MENU

- Image Size 41
- Aspect Ratio 42
- Quality 44
- Raw File Type. 45
- Panorama Size and Panorama Direction 46
- File Format 46
- Record Setting 46
- Dual Video Recording 46
- Drive Mode. 47
 - Single Shooting. 47
 - Continuous Shooting. 47
 - Speed Priority Continuous Shooting 48
 - Self-Timer 49
 - Self-Timer (Continuous) 50
 - Continuous Exposure Bracketing 50
 - Single Exposure Bracketing 51
 - White Balance Bracketing 51
 - DRO Bracketing. 52
 - LPF Bracketing 52
- Bracket Settings 52
- Flash Mode. 53
 - Flash Off. 54
 - Autoflash 54
 - Fill-Flash 54
 - Slow Sync 54
 - Rear Sync 55
 - Wireless 56
- Flash Compensation. 57
- Red Eye Reduction. 58
- Focus Area 58
 - Wide. 58
 - Center 59
 - Flexible Spot 59
 - Expand Flexible Spot 60
 - Lock-on AF 60
- AF Illuminator 61
- Exposure Compensation 61
- ISO 62
 - Multi Frame Noise Reduction 63
- ISO Auto Minimum Shutter Speed 64
- Metering Mode 65
- White Balance 67
- DRO/Auto HDR 70
- Creative Style 73
 - Adjusting Contrast, Saturation, and Sharpness 74
 - Standard 76
 - Vivid 76
 - Neutral 76
 - Clear. 76
 - Deep. 76
 - Light. 76
 - Portrait 76
 - Landscape. 76
 - Sunset. 77
 - Night Scene 77

Autumn Leaves	77
B/W	77
Sepia	77
Picture Effect	77
Off	78
Toy Camera	78
Pop Color	79
Posterization	79
Retro Photo	80
Soft High-Key	80
Partial Color	80
High Contrast Monochrome	81
Soft Focus	81
HDR Painting	81
Rich-Tone Monochrome	82
Miniature Effect	82
Watercolor	83
Illustration	83
Zoom	83
Focus Magnifier	84
Long Exposure Noise Reduction	86
High ISO Noise Reduction	86
LPF Effect	87
Center Lock-on AF	88
Smile/Face Detection	88
Face Detection On (Registered Faces)	88
Face Detection On	89
Smile Shutter	89
Soft Skin Effect	89
Auto Object Framing	90
Auto Mode	91
Scene Selection	91
Movie	91
SteadyShot (Movies)	91
Color Space	91
Auto Slow Shutter	92
Audio Recording	92
Audio Recording Level	92
Wind Noise Reduction	92
Memory	92

CHAPTER 5: PHYSICAL CONTROLS

93

Shutter Button	93
Power Switch	93
Custom Button 1	93
Exposure Compensation Dial	93
Mode Dial	95
Multi Interface Shoe	95
Microphone	95
Sensor Plane Indicator	96
Aperture Ring	96
Focus Ring	96
Macro Switching Ring	96
Focus Switch	96
Single-Shot AF	97
Continuous AF	97

- Direct Manual Focus 98
- Manual Focus 98
- AF Illuminator/Self-Timer Lamp 100
- Playback Button 100
- Movie Button 101
- Menu Button 101
- Function Button 101
 - Function Menu 101
 - Quick Navi System 102
 - Dial/Wheel Lock 104
 - Zoom-out/Index Screen 104
- Custom 2/Delete Button 104
- Control Wheel and Its Buttons 105
 - Control Wheel 105
 - Center Button 105
 - Direction Buttons 106
 - Up Button: Display 106
 - Left Button 106
 - Right Button 106
 - Down Button 107
- AEL Button 107
- Control Dial 107
- Finder Switch, Viewfinder, and Diopter Adjustment Lever 107
- Eye Sensor 108
- Tilting LCD Screen 108
- Ports on Left Side of Camera 109
- Right Side of Camera 109
- Bottom of Camera 110

CHAPTER 6: PLAYBACK AND PRINTING 111

- Normal Playback 111
- Enlarging Images and Index View 111
- Playback Display Screens 113
- Deleting Images with the Delete Button 114
- Playback Menu 114
 - Delete 115
 - View Mode 115
 - Image Index 116
 - Display Rotation 117
 - Slide Show 117
 - Rotate 118
 - Enlarge Image 118
 - 4K Still Image Playback 118
 - Protect 119
 - Specify Printing 119

CHAPTER 7: THE CUSTOM AND SETUP MENUS 121

- Custom Menu 121
 - Zebra 121
 - MF Assist 122
 - Focus Magnification Time 122
 - Grid Line 123
 - Rule of Thirds Grid 123
 - Square Grid 123
 - Diagonal Plus Square Grid 124

Marker Display	124
Marker Settings	124
Audio Level Display	125
Auto Review	125
Display Button	126
Peaking Level	128
Peaking Color	129
Exposure Settings Guide	129
Live View Display	130
Display Continuous AF Area	131
Phase Detection Area	131
Pre-AF	132
Zoom Setting	132
Finder/Monitor	135
Release without Card	135
Priority Set in AF-S	136
Priority Set in AF-C	136
AEL with Shutter	136
Exposure Compensation Setting	137
Reset EV Compensation	137
Face Registration	138
Write Date	139
Lens Compensation	139
Shading Compensation	139
Chromatic Aberration Compensation	139
Distortion Compensation	139
Function Menu Settings	140
Custom Key (Shooting)	141
Control Wheel	141
Custom Button 1	142
In-Camera Guide	144
AEL Hold	144
AEL Toggle	145
Spot AEL Hold	145
Spot AEL Toggle	145
AF/MF Control Hold	145
AF/MF Control Toggle	145
Eye AF	146
Bright Monitoring	146
Smart Teleconverter	146
Zoom	147
Deactivate Monitor	147
MOVIE	147
Finder/Monitor Selection	147
Download Application	147
Not Set	148
Custom Button 2	148
Center Button	148
Left Button	148
Right Button	148
Down Button	148
AEL Button	149
Custom Key (Playback)	149
Movie Button	149
Dial/Wheel Lock	150
Setup Menu	150
Monitor Brightness	151

Viewfinder Brightness	152
Finder Color Temperature	152
Volume Settings	152
Audio Signals	152
Upload Settings.	152
Tile Menu	153
Mode Dial Guide	153
Delete Confirmation	153
Display Quality	154
Power Save Start Time	154
NTSC/PAL Selector	154
Demo Mode.	155
HDMI Settings.	156
HDMI Resolution.	156
24p/60p Output	156
HDMI Information Display.	156
CTRL for HDMI	157
USB Connection	157
USB LUN Setting	158
USB Power Supply	159
Language	159
Date/Time Setup	159
Area Setting.	160
Copyright Info	160
Format.	161
File Number.	161
Select REC Folder	162
New Folder	162
Folder Name	162
Recover Image Database.	163
Display Media Info	163
Version	164
Setting Reset	164

CHAPTER 8: MOTION PICTURES

165

Movie-Making Overview	165
Details of Settings for Shooting Movies	166
Movie-Related Shooting Menu Options.	166
File Format	166
XAVC S HD.	166
AVCHD.	166
MP4	166
Record Setting	167
XAVC S HD.	167
AVCHD.	168
60i and 60p Video Formats.	168
24p Video Formats	168
MP4	168
Dual Video Recording	169
Movie (Exposure Mode)	169
Program Auto	170
Aperture Priority	170
Shutter Priority	170
Manual Exposure	171
SteadyShot (Movies).	172
Auto Slow Shutter	173

Audio Recording	173
Audio Recording Level	173
Wind Noise Reduction	174
Effects of Mode Dial Position on Recording Movies	174
Effects of Other Shooting Menu Settings on Recording Movies	176
Effects of Physical Controls When Recording Movies	177
Recording to an External Video Recorder	179
Summary of Options for Recording Movies	180
Other Settings and Controls for Movies	181
Movie Playback	181
Editing Movies	182

CHAPTER 9: USING WI-FI AND OTHER TOPICS

184

Sending Images to a Computer	184
Sending Images to a Smartphone	186
Connecting with NFC	188
Using a Smartphone or Tablet as a Remote Control	189
Wi-Fi Menu	192
Send to Smartphone	192
Send to Computer	192
View on TV	192
One-touch (NFC)	193
Airplane Mode	193
WPS Push	193
Access Point Settings	194
Edit Device Name	194
Display MAC Address	194
SSID/PW Reset	195
Reset Network Settings	195
Applications and Application Menu	195
Other Topics	197
Astrophotography and Digiscoping	197
Street Photography	198
Connecting to a Television Set	198

APPENDIX A: ACCESSORIES

200

Cases	200
Batteries and Chargers	201
AC Adapters and Other Power Sources	202
Add-On Filters and Lenses	203
Remote Controls	203
Cable Release	204
Lens Hood	205
Thumb Grip	205
External Flash Units	205
Viewfinders	208
LCD Monitor	209
External Microphones	209
External Video Recorder	210
Screen Protector	210
Tripod	211

APPENDIX B: QUICK TIPS 212

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 215

Books 215
Websites and Videos 215
 Digital Photography Review 215
 RX1R II Reviews and Articles 215
 White Knight Press 215
 Official Sony Sites 215
Other Resources 216

Index 217