

Index

Symbols

4K Still Image Playback menu option 118–119
24p/60p Output menu option 156

A

AC adapter
 Sony model no. AC-UUD11
 using to power the camera 5
Access lamp 12, 48–49
Access Point Settings menu option 185, 193, 194
Adobe Camera Raw software 45
AEL button
 assigning an option to 107, 149
 using to enlarge an image in playback mode 107, 118
 using to test Wireless flash setup 107
AEL Hold 107, 144
AEL Toggle 145
AEL w/Shutter menu option 136–137
 effect on continuous shooting exposure adjustments 47, 48, 137
AF Illuminator menu option 61, 100
AF Illuminator/Self-timer Lamp 100
 disabling use of 61
AF/MF Control Hold 100, 145
 using during movie recording 177
AF/MF Control Toggle 145–146
Airplane Mode menu option 193
Anti Motion Blur setting 34
Aperture
 range of available settings 24, 28
 relationship to depth of field 23
Aperture Priority mode 23–25
Aperture Priority mode (movies) 170
Aperture ring 26, 96
 disagreement of ring setting with actual setting 96
 setting intermediate f-stop values 24, 96
Apple iTunes, iPhones, iPads, and iPods
 playing movies on 213
Application List menu option 189, 195
Application Management app 196
Application menu 189, 195–196
Applications (in-camera apps) 189, 195–196
Area Setting menu option 160
Aspect Ratio menu option 42
 incompatibility with other settings 43
 relationship to focal length of lens 134

 relationship to resolution 41
Astrophotography 197–198
Atomos Shogun 4K video recorder 209
 procedure for recording to from RX1R II 179–180
Audio Level Display menu option 125, 174
Audio Recording Level menu option 92, 173–174
Audio Recording menu option 92, 173
Audio Signals menu option 152
Autoexposure lock 144
 during video recording 178
Autoflash setting for Flash Mode 54
Auto ISO 63
 using with Manual exposure mode 28, 64
Auto Mode menu option 16, 91
Auto Object Framing menu option 90–91
 incompatibility with other settings 91
Auto Review menu option 111, 125–126
Auto Slow Shutter menu option 92, 173
 incompatibility with other settings 173
Autumn Leaves setting for Creative Style 77
AVCHD video format 166, 168

B

Back button focus 100, 145
Battery
 charging 3–5
 length of time for full charge 5
 conserving power 212
 generic replacement 201
 inserting into camera 4
 Sony Model No. NP-BX1 201
Battery chargers and power supplies
 Anker 40-watt desktop USB charger 202
 external charger supplied with camera 3–4
 G-Cord 10000 mAh Boutique Mobile Power Supply 202–203
 Sony BC-TRX 201
 Sony Model No. AC-UUD11 3–4, 202
 using as AC adapter to power camera 5, 202
Bit rate for video recording 167
Blurred background
 achieving with aperture setting 24
Bokeh 24
Bracket Order menu option 53
Bracket Settings menu option 52–53
Bright Monitoring 146
BULB setting for shutter speed 28
B/W setting for Creative Style 77

C

Cable release 204
 using to trigger shutter 204
Calendar display screen in playback mode 112
Camera sounds
 silencing 152
Capture One Express software 3

- using to process Raw files 45
 - Cases
 - BlackRapid SnapR 35 201
 - LowePro Rezo 110 AW 200
 - Sony LCJ-RXH 200
 - VanGoddy Laurel 200
 - Center button 105–106
 - assigning a function to 105, 148
 - using to activate Center Lock-on AF tracking frame 105, 148
 - using to activate movable focus frame 106, 148
 - using to magnify manual focus display 105
 - Center Lock-on AF menu option 88
 - incompatibility with other settings 88
 - Center setting for Focus Area 59
 - Center setting for Metering Mode menu option 66
 - Clean HDMI signal, outputting 157
 - Clear Image Zoom 84, 132–134
 - incompatibility with other settings 135–136
 - Clear setting for Creative Style 76
 - Clipping highlights
 - checking for 94
 - Close-up lens
 - using for macro shooting 96, 203
 - Color Space menu option 91
 - Color temperature ratings of various light sources 67
 - Compression of JPEG images 44
 - Conflicting settings
 - error messages for 213
 - Connecting camera to HDTV
 - using micro-HDMI cable 198
 - using View on TV menu option 192
 - Continuous autofocus 15, 97–98
 - not available when self-timer turned on 50
 - only autofocus mode available for movies 98, 177
 - Continuous Exposure Bracketing menu option
 - order of exposures 51, 53
 - using flash with 51
 - Continuous Shooting setting for Drive Mode 47–48
 - incompatibility with other settings 212
 - speed of shooting 48
 - using flash with 48
 - with exposure adjustments 47
 - with focus adjustments 47
 - Contrast
 - adjusting 74–75
 - Contrast detection autofocus 131
 - Control buttons
 - using while recording video 177–179
 - Control dial 107
 - icon on shooting screen indicating current function of 107
 - using to activate Program Shift 107
 - using to change panorama direction 107
 - using to move among enlarged images in playback mode 107, 111, 118
 - using to move among menu screens 39
 - using to select scene type 31, 107
 - using to set shutter speed 25, 26, 107
 - Controls on back of camera 11
 - Controls on bottom of camera 12, 109
 - Controls on front of camera 11–12
 - Controls on left side of camera 109
 - Controls on right side of camera 12, 109
 - Controls on top of camera 10
 - Control wheel 105
 - assigning a function to 105, 141–142
 - using to zoom enlarged image in playback mode 111, 118
 - using while recording video 178
 - various functions of 105
 - Copyright Info menu option 160–161
 - CowboyStudio flash trigger system, NPT04 207
 - Creative Style comparison charts 75–76
 - Creative Style menu option 73–77
 - adjusting contrast, saturation, and sharpness 74–75
 - compared to Scene mode settings 77
 - incompatibility with other settings 75
 - saving adjusted settings 75
 - using with images in Raw format 75
 - Cropping image 212
 - CTRL for HDMI menu option 157
 - Custom button 1 93
 - assigning an option to 142–148
 - Custom button 2/Delete button 104
 - assigning an option to 104, 148
 - using to delete images 104, 111, 114
 - using to reset location of movable focus frame 104
 - Custom Key (Playback) menu option 111, 149
 - Custom Key (Shooting) menu option 60, 141–149
 - Custom menu 121–150
 - Custom white balance
 - how to set 68–69
- ## D
- Date
 - embedding in images 139
 - Date and time
 - setting in camera 8–9, 159–160
 - Date format adjustment 160
 - Date Imprint option for printing images 120
 - Date/Time Setup menu option 8–9, 159–160
 - Day for night shooting for movies 171
 - Daylight Savings Time adjustment 160
 - Deactivate Monitor 147
 - Deep setting for Creative Style 76
 - Delete Confirmation menu option 153–154
 - Delete menu option 115
 - Deleting images
 - using Delete menu option 115
 - Demo Mode menu option 155
 - Dial/Wheel Lock menu option 104, 150
 - Digiscoping 197–198
 - Digital Zoom 84, 132–134
 - incompatibility with other settings 135–136

- using for movie recording 135
- Diopter adjustment slider 12, 107
- Direct manual focus (DMF) 15, 98
 - effect of focus switch position for recording video 177
 - need to half-press shutter button when using MF Assist with 213
- Display button 106
 - using to switch among display screens 106
- Display Button menu option 114, 126–128
- Display Continuous AF Area menu option 131
- Display MAC Address menu option 194
- Display Media Info menu option 163
- Display Quality menu option 154
- Display Rotation menu option 117
- DLNA streaming media server 192
- Down button
 - assigning an option to 107, 148
- Download Application (assigned to control button) 147, 196
- DPOF (Digital Print Order Format) printing 119–120
- Drive Mode menu option 16–17, 47–52
- DRO/Auto HDR menu option 70–73
 - incompatibility with other settings 73
- DRO Bracketing menu option 52
- Dual Video Recording menu option 46, 169

E

- Edit Device Name menu option 194
- Editing movies 182–183
- Enlarge Image menu option 118
- Enlarging image in playback mode 111, 118
 - returning image to normal size 111
 - using the AEL button for 111
- Expand Flexible Spot setting for Focus Area 60
- Exposure bracketing 50–51
 - incompatibility with other settings 51
 - using flash with 51
 - using self-timer with 52–53
- Exposure compensation 61–62, 93–94, 212
 - adjusting flash output as well as exposure 95
 - assigning to a control button 95
 - display of brightness changes on camera's screen 62, 94
 - incompatibility with other settings 95
 - limited adjustment range for movies 176, 177
 - using in Manual exposure mode 27–28, 95
 - using in Sweep Panorama mode 35–36
- Exposure compensation dial 61, 93–95
 - setting retained after power off 138
 - using while recording video 62
- Exposure Compensation menu option 61–62, 95
 - only effective when exposure compensation dial at zero 61, 95
 - wider range of adjustment than with exp. comp. dial 61, 95
- Exposure Compensation Setting menu option 95, 137
- Exposure Settings Guide menu option 26, 129
- External flash
 - LumoPro LP180 207

- Metz Mecablitz 44 AF-1 for Sony 206
 - using with Sony wireless protocol 57
- Sony HVL-F20M 205–206
- Sony HVL-F32M 48, 55, 56, 206
 - using as wireless flash controller and remote unit 56
- Sony HVL-F43M 206
 - using as wireless flash controller and remote unit 56
- Sony HVL-F60M 57, 206
 - using Manual exposure mode with 207
- Yongnuo YN560-III 207
- External LCD monitor
 - Sony model no. CLM-V55 209
- External microphones
 - Rode VideoMic Pro 209
 - Sony model no. ECM-CG50 209
 - Sony model no. ECM-W1M 209
 - Sony model no. ECM-XYST1M 209–210
- External viewfinder
 - Sony FDA-EV1MK 208
 - Sony FDA-V1K 208
 - Voigtlander 75mm 208
 - using to compose cropped image 212
- Eye AF 146
- Eye-Fi card 7
 - related menu option 152
- Eyepiece cup
 - installing on viewfinder 3, 108
- Eye sensor 108, 135
 - using to trigger shutter with Touchless Shutter app 196

F

- Face detection 16, 89
 - incompatibility with other settings 89
- Face Detection (Registered Faces) 88–89, 138
- Face Registration menu option 138
- Fadeout effect for video recording 170, 171
- Fade to white effect for movies 171
- File Format menu option 46, 166–167
- File Number menu option 161–162
- Fill-flash setting for Flash Mode 54
- Filters
 - using with RX1R II 203
- Final Cut Express software 19
- Final Cut Pro software 19
- Finder Color Temperature menu option 152
- Finder/Monitor menu option 108, 135
 - using to turn off monitor 147
- Finder switch 107
- Firmware
 - displaying current version 163
 - updating 163
- Flash Compensation menu option 57, 137
 - incompatibility with other settings 58
- Flashing aperture or shutter speed value
 - indication of inability to set normal exposure 25, 26
- Flashing histogram to indicate exposure problems 114

Flashing settings in Manual exposure mode 27
 Flash Mode menu option 53–57
 Flash Off setting for Flash Mode 54
 Flexible Spot setting for Focus Area 59–60
 methods for changing location of frame 60
 Focus
 checking with enlarged image 111
 general techniques 15
 Focus Area menu option 58–61
 Focus distance of lens for closeup shots 96
 Focus frame
 moving around on display 60
 Focus Magnification Time menu option 86, 122–123
 Focus Magnifier menu option 84–86, 99
 compared to MF Assist option 85–86
 operation for movie recording 86, 181
 Focus modes 15, 96–100
 Focus priority vs release priority, how to set 136
 Focus ring 96
 Focus switch 96–97
 using during video recording 177
 Focus tracking 60–61, 88
 Folder Name menu option 162, 162–163
 Format menu option 8, 161
 For Viewfinder display screen 103, 114, 128
 not available for movie recording 181
 Function button 101–104
 using as zoom-out button in playback mode 104, 118
 using to lock operation of Control wheel and dial 104, 150
 using while recording video 178–179
 Function menu 101–102
 assigning options to 101, 141–142
 Function Menu Settings menu option 140–141

G

Graphic Display screen 126
 Grid Line menu option 123–124

H

Hahnel ProCube Twin Charger 202
 Hand-held Twilight setting 33
 HDMI Information Display menu option 156–157
 HDMI port 12
 HDMI Resolution menu option 156
 HDMI Settings menu option 156–157
 HDR (high dynamic range) photography 71
 using Manual exposure mode for 73
 HDR Painting setting for Picture Effect 81–82
 Hensel Strobe Wizard Plus flash trigger 207
 High Contrast Monochrome setting for Picture Effect 80
 using for street photography 198
 High ISO Noise Reduction menu option 86
 incompatibility with other settings 86
 Histogram
 playback mode 94, 113–114
 shooting mode 114, 127

I

Illustration setting for Picture Effect 83
 Image Data Converter software 3, 75
 using to process Raw files 45
 Image Index menu option 112, 116
 Image Size menu option 41–42
 incompatibility with other settings 42, 45
 relationship to Aspect Ratio setting 41
 iMovie software 19, 182
 In-Camera Guide option 144
 Index screen in playback mode
 using Function button to activate 112
 Intelligent Auto mode 20–21
 incompatibility with other settings 20
 Interlaced video settings 167, 168
 Internal memory storage
 absence of in DSC-RX1R II camera 5
 Interval shooting 157
 IRE units 121
 ISO 62–65
 effect of setting in Manual exposure mode 26, 27–28, 64
 native values 64
 range of values available 63, 64
 for movies 176
 setting minimum and maximum values for Auto ISO 63
 ISO Auto Minimum Shutter Speed menu option 64–65
 ISO menu option
 incompatibility with other settings 64
 iTunes, iPod, iPad, iPhone
 playing videos with 213

J

JPEG images 41

K

Kelvin units 67
 Key icon in playback mode for protected image or video 119

L

Landscape setting 32
 Landscape setting for Creative Style 76
 Language
 setting in camera 8, 159
 Language menu option 8, 159
 LCD monitor
 switching between viewfinder and 108, 135, 147
 tilting features of 108
 turning off 147
 LED video light, CN-160 207
 Left button
 assigning a function to 106, 148
 Lens Compensation menu option 139
 Lens hood
 Vello LHS-LHP1 205
 Level display screen 127

- Lexar Professional 128 GB SDXC card
 - using for high-quality video formats 6
- Light setting for Creative Style 76
- Live View Display menu option 130–131
 - effect on viewing Creative Style settings 130
 - effect on viewing white balance settings 130
 - incompatibility with other settings 131
 - not available for video recording 181
 - using in Aperture Priority mode 25
 - using in Manual exposure mode 27
 - using in Shutter Priority mode 26
 - using with external flash units 130, 207
- Locking focus 97
- Locking operation of Control wheel and dial 104, 150
- Lock-on AF setting for Focus Area 60
 - compared to Center Lock-on AF option 61, 88
- Long Exposure Noise Reduction menu option 86
 - incompatibility with other settings 86
- LPF Bracketing menu option 52
- LPF (Low Pass Filter) Effect menu option 52, 87–88
 - incompatibility with other settings 88
- M**
- Macro setting 96
- Macro switching ring 96
- Manfrotto BeFree tripod 210
- Manual exposure mode 26–29
 - using Auto ISO with 28
 - using exposure compensation in 28
 - using for HDR images 29
- Manual Exposure mode (movies) 171–172
 - range of available shutter speeds 171
 - using Auto ISO with 172
- Manual focus (MF) 15, 98–100
 - using for macro photography 98
- Manual Shift 29, 107
- Marker Display menu option 124
- Marker Settings menu option 124–125
- Memory card
 - capacity for holding images and videos 6–7, 165
 - formatting 7–8
 - inserting into camera 7
 - operating camera without 135
 - special requirements for XAVC S HD video format 6, 165
 - speed requirements 7
 - types of 5
- Memory menu option 37, 92
- Memory Recall mode 36–38, 92
 - settings that cannot be stored 38
- Memory Stick memory cards 7
 - using in DSC-RX1R II camera 6
- Menu button 101
- Menu systems
 - listing of 39
 - navigating among 39–40
- Metering Mode menu option 65–66
 - incompatibility with other settings 66
- MF Assist menu option 85–86, 99, 122
 - compared to Focus Magnifier 85–86, 122
 - need to half-press shutter button when using with DMF 98, 122
 - not available for movie recording 181
- Microphone, built-in 95
- Microphone port 12, 109
 - inability to use other ports when this one in use 12, 109
- Micro-SD card
 - using in DSC-RX1R II camera 5
- Miniature Effect setting for Picture Effect 82
- Minimum shutter speed
 - how to set 64–65
- M.M. (metered manual) indicator
 - relationship to ISO setting 26
- Mode dial 95
 - cannot take still images with dial set to Movie position 95
- Mode Dial Guide menu option 30, 91, 153
- Monitor Brightness menu option 151
- Movie button 101
 - limiting function to Movie mode 101
- Movie Button menu option 95, 101, 147, 149–150
- Movie menu option 91, 169–172
- MOVIE option (assigned to control button) 147, 150
- Movie position on Mode dial
 - reasons for using for recording movies 174–175
- Movie recording
 - adjusting sound volume 173
 - focus constantly adjusted when autofocus turned on 98
 - limits on recording length 6, 165
 - overview of general procedure 17–18, 165–166, 180
- Movies
 - adjusting volume for playback 19
 - editing on computer 19, 182–183
 - file names and locations 183
- MP4 video format 166, 168–169
- Multi Frame Noise Reduction (MFNR) 63–64, 213
- Multi Interface Shoe 95
 - attaching accessories to 95
- Multi port 4, 12, 109
- Multi setting for Metering Mode menu option 65
- N**
- Neutral density filter 203
- Neutral setting for Creative Style 76
- New Folder menu option 162
- NFC active area on camera 12, 109, 188, 193
- NFC (near field communication) 12, 109, 188–189, 193
- Night Portrait setting 33–34
- Night Scene setting 33
- Night Scene setting for Creative Style 77
- NO CARD error message 5, 135
- Not Set option (for control button) 147
- NTSC/PAL Selector menu option 154–155, 167
 - effect on other settings 155

O

- Off setting for Picture Effect 78
- One-touch (NFC) menu option 192
- Overlay icon in Superior Auto mode 22

P

- Panorama Direction menu option 46
 - using Control dial to change panorama direction 46
- Panoramas
 - creating 34–36
 - playback in camera 106
- Panorama Size menu option 46
- Partial Color setting for Picture Effect 80–81
 - adjusting range of colors for 80–81
- PC Remote menu option 157–158
- Peaking Color menu option 99, 129
- Peaking Level menu option 99, 128–129
 - using with DMF 98
- Phase Detection Area menu option 131
- Phase detection autofocus 131
 - available only for apertures of f/9.0 and wider 131
- Photoflex LiteDome XS softbox 207
- Photomatrix Pro software 29, 72
- PictBridge printing protocol 120
- Picture Effect comparison charts 78
- Picture Effect menu option 77–83
 - adjusting parameters 78
 - incompatibility with other settings 77, 83
 - settings unavailable for movies 177
- Playback
 - movies
 - general procedure 18–19, 106, 181–182
 - still images
 - general procedures 18, 111
- Playback button 100
- Playback display screens 113
- Playback menu 114–121
- PlayMemories Camera Apps icon 196
- PlayMemories Home software 183, 184
 - location for downloading 3
- PlayMemories Mobile app 186, 188, 190–191
- Pole aerial photography 191
- Pop Color setting for Picture Effect 79
- Portrait setting 31–32
- Portrait setting for Creative Style 76
- Posterization setting for Picture Effect 79
- Power Save Start Time menu option 154
- Power switch 93
- Pre-AF menu option 98, 132
- Premiere Elements software 19
- Premiere Pro software 19, 182
- Printing images directly from camera 119–120
- Priority Set in AF-C menu option 136
- Priority Set in AF-S menu option 136
- Program Auto mode 22–23
- Program Auto mode (movies) 170

- Program Shift 23, 129
 - not available during video recording 179
- Progressive video settings 167, 168
- Protect menu option 119

Q

- Quality menu option 41–42
- Quick Navi system 102–104, 128

R

- Raw File Type menu option 45–46
 - Raw format 44–46
 - ability to alter settings after images captured 44–45
 - compressed and uncompressed files 45–46
 - incompatibility with other settings 45
 - using for HDR photography 73
 - Raw & JPEG option for Quality menu option 45
 - Rear Sync setting for Flash Mode 54
 - Record Setting menu option 46, 167–169
 - Recover Image Database menu option 163
 - Red Eye Reduction menu option 58
 - Release priority vs focus priority, how to set 136
 - Release w/o Card menu option 5, 135–136
 - Remote Camera Control software 3
 - using to control camera from computer 157–158
 - Remote controls
 - Sony model no. RM-SPR1 204
 - Sony model no. RMT-VP1K 204
 - Sony model no. RM-VPR1 203–204
 - using to zoom the lens 84, 203
 - Reset EV Compensation menu option 95, 137
 - Reset Network Settings menu option 195
 - Resetting camera settings 164
 - Resolution of still images 41
 - Retro Photo setting for Picture Effect 80
 - Rich-tone Monochrome setting for Picture Effect 82
 - Right button
 - assigning an option to 106, 148
 - Rotate menu option 118
- S**
- SanDisk Extreme 256 GB SDXC card
 - using for highest-quality video format 6
 - SanDisk Extreme Pro 64 GB SDXC card
 - using for highest-quality video format 6, 165
 - Saturation
 - adjusting 74–75
 - Scene mode 29–34
 - incompatibility with other settings 30
 - methods for selecting a scene setting 30
 - using Control dial to select scene setting 31
 - Scene recognition feature 20–21
 - Scene Selection menu option 30, 91
 - using Control dial to select scene type 91
 - Screen protector
 - Sony PCK-LM15 210

- SD cards
 - in general 5
 - Sekonic Prodigy color meter 68
 - Select REC Folder menu option 162
 - Self-timer 17, 49–50
 - incompatible with continuous autofocus 50
 - taking multiple shots with 50
 - using with exposure bracketing 52–53
 - Self-timer (Continuous) 50
 - incompatible with continuous autofocus 50
 - Self-timer During Bracket menu option 52–53, 214
 - Send to Computer menu option 184–186, 192
 - Send to Smartphone menu option 186–187, 192
 - changing size of transferred images 189
 - Sensor plane indicator 96
 - Sepia setting for Creative Style 77
 - Serviio media streaming software 192
 - Setting Reset menu option 164
 - Settings
 - saving with Memory Recall mode 36–38
 - Setup menu 8, 150–164
 - Sharpness
 - adjusting 74–75
 - Shoe adapter
 - Sony model no. ADP-MAA 206
 - Shooting menu
 - icons for still images or movies 40–41
 - in general 39
 - meaning of dimmed items 40
 - navigating in 39–40
 - Shooting mode display screens
 - for movie recording 181
 - selecting with Display Button menu option 126–128
 - Shooting modes
 - list of 20
 - Shutter button 93
 - Shutter Priority mode 25–26
 - Shutter Priority mode (movies) 170–171
 - range of available shutter speeds 170–171
 - Shutter speed
 - range of available settings 20, 24, 25, 28–29
 - for movies 170, 171
 - Single Exposure Bracketing menu option 51
 - Single shooting setting for Drive Mode 47
 - Single-shot autofocus 15, 97
 - Slide Show menu option 117
 - Slow-motion video 167
 - Slow Sync setting for Flash Mode 33, 54–55
 - Smart Remote Control app 84, 189, 196
 - Smart Remote Embedded app 84, 189–191, 193, 195
 - Smart Teleconverter 146–147
 - incompatibility with other settings 147
 - Smart Zoom 83–84, 132–134
 - Smile/Face Detection menu option 88–89
 - Smile Shutter 89
 - Soft Focus setting for Picture Effect 80
 - Soft High-key setting for Picture Effect 80
 - Soft release 93
 - Soft Skin Effect menu option 16, 89–90
 - incompatibility with other settings 89
 - Software for Sony RX1R II camera
 - where to obtain 3, 183
 - Sony DSC-RX1R II camera
 - features of 1
 - items included with 3
 - Sounds made by camera, silencing 152
 - Specify Printing menu option 119–120
 - Speed Priority Continuous Shooting setting of Drive Mode 48
 - exposure adjustments with 48
 - focus adjustments with 48
 - speed of shooting 48
 - using flash with 48
 - Sports Action setting 32
 - Spot AEL Hold 145
 - Spot AEL Toggle 145
 - Spot setting for Metering Mode menu option 65
 - observing effects on display screen 66
 - Spotting scope
 - connecting to RX1R II 197
 - SSID/PW Reset menu option 195
 - Standard setting for Center button 60, 105–106, 148
 - Standard setting for Creative Style 75
 - SteadyShot (Movies) menu option 91, 172
 - cropping of frame with 172
 - Step-by-step guides
 - connecting with NFC 188–189
 - sending images to a computer 184–185
 - sending images to a smartphone 186–187
 - taking pictures in Intelligent Auto mode 13–15
 - using a smartphone or tablet as a remote control 189–191
 - using wireless flash 56
 - Street photography 198
 - Sunset setting 32
 - Sunset setting for Creative Style 77
 - Superior Auto mode 16, 21–22, 213
 - how to select 22
 - use of multiple-shot processing in 21–22
 - Sweep Panorama mode 34–36
 - incompatibility with other settings 35
- ## T
- Tables
 - behavior of RX1R II for video recording in various shooting modes 176
 - number of images that fit on 64 GB memory card 42
 - settings for recording to Atomos Shogun video recorder 179–180
 - Shooting menu items that can be adjusted during video recording 176
 - suggested control assignments for movie recording 180
 - suggested settings for Shooting menu in Intelligent Auto mode 14
 - suggested Shooting menu settings for movie recording in

- Auto mode 17
- suggested Shooting menu settings for recording movies 181–182
- zoom ranges at various image sizes 134
- Telescope
 - connecting to RX1R II 197
- Tethered shooting 157–158, 214
- Thumb grip
 - Sony TGA-1 205
- Tile Menu menu option 153
- Time exposure 28
- Time-lapse photography 157, 214
- Time zone
 - setting 160
- Touchless Shutter app
 - using to trigger shutter with eye sensor 196
- Toy Camera setting for Picture Effect 78–79
- Tripod socket 110
- Tv notation for time value or shutter speed 26, 107

U

- Upload Settings menu option 152
- USB Connection menu option 157–158, 196
- USB LUN Setting menu option 158
- USB Power Supply menu option 159

V

- Version menu option 163
- Video files
 - locations on memory cards 183
- Viewfinder
 - adjusting for vision 107
 - automatic switching to LCD screen 108, 135
 - cannot be used with Wi-Fi functions 108
 - external, Sony FDA-EV1MK 95
 - switching between LCD monitor and 147
- Viewfinder Brightness menu option 152
- VIEW icon on screen for Setting Effect Off 130
- View Mode menu option 115–116
- View on TV menu option 192–193, 199
- Vivid setting for Creative Style 76
- Volume Settings menu option 152

W

- Watercolor setting for Picture Effect 83
- WD TV Live media player 192
- White balance
 - adjusting after shooting for Raw images 69
 - adjusting with color axes 69
 - setting for use with non-Sony external flash unit 207
- White Balance Bracketing menu option 51–52
- White balance comparison chart 70
- White Balance menu option 67–70
 - incompatibility with other settings 70
- Wide setting for Focus Area 58–59
- Wi-Fi functions of camera 184–196

- disabling 184, 193
- Wi-Fi menu 192–195
- Wind Noise Reduction menu option 92, 174
- Windows Movie Maker software 19, 182
- Wireless Auto Import software 184
- Wireless setting for Flash Mode 55–56, 107
 - testing with AEL button 107
- WPS button on router 184, 194
- WPS Push menu option 184, 193–194
- Write Date menu option 139

X

- XAVC S HD video format 166, 167
 - requirement of using certain type of memory card with 166

Z

- Zebra menu option 121–122
- Zone focusing, how to set 145
- Zoom menu option 83–84, 147
 - techniques for zooming the lens 84
 - using for video recording 181
- Zoom Setting menu option 132–134