

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Inserting the Memory Card	4
Introduction to Main Controls	6
Top of Camera	6
Back of Camera	6
Front of Camera	7
Right Side of Camera	7
Bottom of Camera	7
Setting the Date, Time, and Language	8
CHAPTER 2: BASIC OPERATIONS	9
Taking Pictures	9
Fully Automatic: Intelligent Auto Mode	9
Variations from Fully Automatic	11
Focus	11
Manual Focus	12
Defocus Control Option	13
Drive Mode	14
Intelligent Auto Plus Mode	14
Motion Picture Recording	15
Basic Playback	16
Playing Movies	17
CHAPTER 3: THE RECORDING MODES	19
Choosing a Recording Mode	19
Intelligent Auto Mode	19
Intelligent Auto Plus Mode	21
Using the Up Button: Defocus Control and Exposure Compensation	22
Using the Right Button: Color Control	22
Program Mode	23
Aperture Priority Mode	24
Shutter Priority Mode	26
Manual Exposure Mode	27
Panorama Mode	29
Scene Mode	31
Creative Control Mode	36
Custom Mode: C Position on Mode Dial	46
CHAPTER 4: THE RECORDING MENU AND THE QUICK MENU	47
The Recording Menu	47
Photo Style	49
Filter Settings	52
Aspect Ratio	53

Picture Size . . . . . 53

    Extended Optical Zoom . . . . . 54

Quality . . . . . 55

Sensitivity (ISO) . . . . . 57

AF Mode . . . . . 58

    Face/Eye Detection . . . . . 58

    AF Tracking . . . . . 59

    49-Area . . . . . 59

    Custom Multi . . . . . 60

    1-Area . . . . . 62

    Pinpoint . . . . . 62

    Moving the Focus Frame or Focus Area . . . . . 63

AFS/AFF/AFC . . . . . 63

Metering Mode . . . . . 63

4K Photo . . . . . 65

Auto Bracket . . . . . 65

Self-timer . . . . . 66

Highlight Shadow . . . . . 66

Intelligent Dynamic . . . . . 67

Intelligent Resolution . . . . . 67

Post Focus . . . . . 68

iHandheld Night Shot . . . . . 70

iHDR . . . . . 70

HDR . . . . . 70

Multiple Exposure . . . . . 72

Time Lapse Shot . . . . . 73

Stop Motion Animation . . . . . 74

Panorama Settings . . . . . 75

Shutter Type . . . . . 75

Flash . . . . . 76

    Flash Mode . . . . . 76

    Flash Synchro . . . . . 77

    Flash Adjustment . . . . . 78

Red-eye Removal . . . . . 78

ISO Limit Set . . . . . 79

ISO Increments . . . . . 79

Extended ISO . . . . . 80

Long Shutter Noise Reduction . . . . . 80

Diffraction Compensation . . . . . 80

Intelligent Zoom . . . . . 80

Digital Zoom . . . . . 81

Color Space . . . . . 81

Stabilizer . . . . . 81

Face Recognition . . . . . 82

Profile Setup . . . . . 83

Quick Menu . . . . . 83

## CHAPTER 5: PHYSICAL CONTROLS

Items on Top of Camera . . . . . 85

    Shutter Button . . . . . 85

    Zoom Lever . . . . . 85

    On/Off Switch . . . . . 86

    Mode Dial . . . . . 86

    Motion Picture Button . . . . . 86

    Rear Dial . . . . . 86

    Built-in Flash Unit . . . . . 87

Microphone . . . . .	87
Controls on Back of Camera . . . . .	87
Viewfinder, Eye Sensor, LVF Button, and Diopter Adjustment Wheel . . . . .	87
Flash Release Button . . . . .	88
AF/AE Lock Button . . . . .	88
Playback Button . . . . .	88
Display Button . . . . .	88
Menu/Set Button and Direction Buttons . . . . .	90
Direction Buttons . . . . .	90
Up Button: Exposure Compensation . . . . .	91
Right Button: White Balance . . . . .	92
Left Button: Focus Mode . . . . .	96
Autofocus . . . . .	96
AF Macro . . . . .	96
Macro Zoom . . . . .	96
Manual Focus . . . . .	96
Down Button: Drive Mode . . . . .	97
Burst Shooting . . . . .	98
4K Photo . . . . .	100
4K Burst . . . . .	101
4K Burst S/S . . . . .	101
4K Pre-burst . . . . .	101
Extracting a 4K Photo Still Image . . . . .	101
Auto Bracket . . . . .	102
Self-timer . . . . .	103
Center Button: Menu/Set . . . . .	104
Function Buttons . . . . .	105
Fn1/4K Photo Button . . . . .	105
Fn2/Post Focus Button . . . . .	105
Fn3/Delete/Q.Menu/Cancel Button . . . . .	105
Fn4/LVF Button . . . . .	106
Assigning Functions to Function Buttons . . . . .	107
Preview . . . . .	108
One Push AE . . . . .	109
Touch AE . . . . .	109
Focus Area Set . . . . .	109
Cursor Button Lock . . . . .	109
Restore to Default . . . . .	110
Assigning Option to Function Button for Playback Mode . . . . .	110
LCD Monitor . . . . .	110
Using the Touch Screen . . . . .	110
Items on Front of Camera . . . . .	112
Control Ring . . . . .	112
Step Zoom . . . . .	113
AF Assist/Self-timer Lamp . . . . .	113

## CHAPTER 6: PLAYBACK

114

Normal Playback . . . . .	114
Index View and Enlarging Images . . . . .	114
The Playback Menu . . . . .	115
Slide Show . . . . .	116
[Play] All . . . . .	116
[Play] Picture Only/Video Only . . . . .	117
4K Photo/Post Focus . . . . .	117
Category Selection . . . . .	117
Favorite . . . . .	117

Playback Mode . . . . .	117
Normal Play . . . . .	118
Other Playback Modes. . . . .	118
Location Logging . . . . .	118
Raw Processing . . . . .	120
Light Composition . . . . .	122
Clear Retouch . . . . .	123
Title Edit. . . . .	124
Text Stamp . . . . .	125
Video Divide . . . . .	125
Time Lapse Video . . . . .	126
Stop Motion Video . . . . .	127
Resize . . . . .	127
Cropping . . . . .	127
Rotate . . . . .	128
Rotate Display. . . . .	128
Favorite . . . . .	128
Print Set . . . . .	129
Protect. . . . .	129
Face Recognition Edit. . . . .	130
Picture Sort . . . . .	130

## CHAPTER 7: THE CUSTOM MENU AND THE SETUP MENU 131

The Custom Menu . . . . .	131
Custom Set Memory . . . . .	131
Silent Mode . . . . .	132
AF/AE Lock . . . . .	132
AF/AE Lock Hold . . . . .	133
Shutter AF. . . . .	133
Half Press Release. . . . .	134
Quick AF. . . . .	134
Eye Sensor AF. . . . .	134
Pinpoint AF Time . . . . .	135
Pinpoint AF Display. . . . .	135
AF Assist Lamp . . . . .	135
Direct Focus Area . . . . .	135
Focus/Release Priority . . . . .	136
AF+MF. . . . .	136
Manual Focus (MF) Assist. . . . .	136
MF Assist Display . . . . .	137
MF Guide . . . . .	137
Peaking . . . . .	137
Histogram. . . . .	138
Guide Line. . . . .	140
Highlight . . . . .	140
Zebra Pattern . . . . .	141
Monochrome Live View . . . . .	141
Constant Preview . . . . .	141
Exposure Meter . . . . .	142
Dial Guide. . . . .	142
LVF Display Style . . . . .	143
Monitor Display Style. . . . .	143
Recording Area . . . . .	143
Remaining Display . . . . .	143
Auto Review. . . . .	144
Function Button Set . . . . .	144

Zoom Lever . . . . .	145
Zoom Resume . . . . .	145
Quick Menu (Q.Menu) . . . . .	145
Ring/Dial Set . . . . .	146
Eye Sensor. . . . .	147
Touch Settings . . . . .	147
Touch Screen. . . . .	147
Touch Tab . . . . .	147
Touch AF . . . . .	148
Touch Pad AF. . . . .	148
Touch Scroll . . . . .	148
Menu Guide. . . . .	148
The Setup Menu . . . . .	149
Online Manual . . . . .	149
Clock Set . . . . .	149
World Time . . . . .	150
Travel Date . . . . .	150
Wi-Fi . . . . .	151
Beep. . . . .	151
Live View Mode . . . . .	151
Monitor Display/Viewfinder . . . . .	151
Monitor Luminance. . . . .	152
Economy . . . . .	152
Sleep Mode . . . . .	152
Auto LVF/Monitor Off . . . . .	152
USB Mode. . . . .	153
TV Connection . . . . .	153
m/ft . . . . .	153
Menu Resume. . . . .	154
Menu Background . . . . .	154
Menu Information . . . . .	154
Language . . . . .	154
Version Display . . . . .	155
Exposure Compensation Reset. . . . .	155
Self Timer Auto Off . . . . .	155
Number Reset. . . . .	155
Reset. . . . .	156
Reset Wi-Fi Settings. . . . .	156
Demo Mode. . . . .	156
Format. . . . .	156

## CHAPTER 8: MOTION PICTURES

Basics of ZS100 Videography . . . . .	157
High Speed Video Recording . . . . .	159
Making Other Settings When Recording Movies. . . . .	159
The Creative Video Menu. . . . .	160
Photo Style. . . . .	160
Filter Settings . . . . .	160
4K Live Cropping. . . . .	160
Snap Movie. . . . .	161
Recording Format . . . . .	162
Recording Quality . . . . .	163
Exposure Mode . . . . .	164
High Speed Video . . . . .	164
Sensitivity . . . . .	164
AF Mode . . . . .	164

AFS/AFF/AFC . . . . .	164
Continuous AF . . . . .	164
Level Shot . . . . .	164
Metering Mode . . . . .	165
Highlight Shadow . . . . .	165
Intelligent Dynamic . . . . .	165
Intelligent Resolution . . . . .	165
Diffraction Compensation . . . . .	165
Intelligent Zoom . . . . .	165
Digital Zoom . . . . .	165
Flicker Decrease . . . . .	166
Silent Operation . . . . .	166
Wind Noise Canceller . . . . .	166
Zoom Mic . . . . .	166
Recording Still Images During Video Recording . . . . .	167
Using External Audio Recorder . . . . .	167
Physical Controls . . . . .	167
Using the Touch Screen During Video Recording . . . . .	169
Recommendations for Recording Video . . . . .	170
Motion Picture Playback and Editing . . . . .	170
Editing with a Computer . . . . .	171

## CHAPTER 9: WI-FI AND OTHER TOPICS 173

Using Wi-Fi Features . . . . .	173
Connecting to a Smartphone or Tablet . . . . .	173
Controlling the Camera with a Smartphone or Tablet . . . . .	175
Sending Images and Videos to a Smartphone or Tablet . . . . .	176
Uploading Images by Wi-Fi to Social Networks . . . . .	178
Connecting to a Computer to Transfer Images Wirelessly . . . . .	179
Sending Images to Other Devices . . . . .	180
Viewing Images Wirelessly on TV . . . . .	180
Macro (Closeup) Shooting . . . . .	181
Street Photography . . . . .	182
Connecting Camera to HDTV with Cable . . . . .	182

## APPENDIX A: ACCESSORIES 184

Cases . . . . .	184
Batteries and Chargers . . . . .	184
AC Adapter . . . . .	186
External Flash Units . . . . .	186
External Audio Recorders . . . . .	187
External Video Recorder . . . . .	187
Equipment for Pole Aerial Photography . . . . .	188
Tripods . . . . .	188

## APPENDIX B: QUICK TIPS 189

## APPENDIX C: RESOURCES FOR FURTHER INFORMATION 191

Photography Books . . . . .	191
Websites . . . . .	191
Videos . . . . .	192