

Index

Symbols

- 1-Area setting for AF Mode 62
- 4K Burst setting for 4K Photo option 100
- 4K Burst S/S setting for 4K Photo option 100
 - recording of audio with 101
- 4K Live Cropping option on Creative Video menu 160
- 4K Photo menu option 65, 100–102, 189
 - combining 4K Photo bursts into a light composition 122–123
 - extracting a still image from 4K burst 101–102
 - incompatibility with other settings 101
 - requirement of high-speed memory card 100
- 4K Pre-burst setting for 4K Photo option 100
- 4K video format 100, 163
- 4K video recording 162–163
 - requirement of high-speed memory card for 4, 163
- 24 fps video formats 163
- 30 fps video formats 163
- 49-Area setting for AF Mode 59–60
- 60 fps video formats 163

A

- AC adapter
 - Panasonic model no. DMW-AC10
 - using for time lapse photography 74
- adding location data to images 118
- Adding text to images 124–125
- Adobe Lightroom software 120
- Adobe Photoshop Elements software 56
- Adobe Photoshop software 56, 79
 - using for HDR photography 103
- Adobe Premiere Elements software 18
- Adobe Premiere Pro software 162, 167, 172
- AF/AE Lock button 88, 132–133
- AF/AE Lock menu option 132–133
 - inability to lock exposure in Manual exposure mode 132
- AF Assist Lamp menu option 113, 135
- AF assist/self-timer lamp 104, 112
 - disabling operation of 113, 135
- AF+MF menu option 136
- AF Mode menu option 11–12, 58–63
 - moving focus frame on display 63
- AF Mode option on Creative Video menu 164
- AF-On menu option 133
- AFS/AFF/AFC menu option 12, 63
 - incompatibility with other settings 63

- AFS/AFF/AFC option on Creative Video menu 164
- AF Tracking setting for AF Mode 59
 - incompatibility with other settings 59
- Anker 40-watt desktop USB charger 185
- Aperture
 - effect of setting on depth of field 24–25
 - range of available settings 23, 26
 - dependent on zoom level of lens 25
 - setting in Manual exposure mode 28
 - setting with rear dial or control ring 25
- Aperture Priority mode 24–26
- Appetizing Food scene setting 35
- Artistic Nightscape scene setting 34
- Aspect ratio
 - relationship to image size 53
- Aspect Ratio menu option 53–54
- Atomos Shogun video recorder 153, 187
- Auto Bracket menu option 65–66, 103
- Auto Bracket option of Drive Mode 102–103
 - incompatibility with other settings 103
 - setting exposure interval and number of shots 103
 - setting order of bracketed exposures 65
- Autofocus option for focus mode 96
- Auto ISO setting 57
 - not available with Manual Exposure mode for video recording 159, 164, 189
 - using in Manual exposure mode 28–29, 57, 189
- Auto LVF/Monitor Off menu option 152
- Auto Review menu option 144
- AVCHD files
 - locating on memory card 162, 171
- AVCHD video format 162–163

B

- Baby
 - adding name and age to image 83
- Back button focus 88, 133
 - using instead of shutter button for autofocus 133
- Backlight compensation 20
- Backlit Softness scene setting 33
- Battery
 - Panasonic model no. DMW-BLG10PP 185
 - charging 4
 - inserting into camera 3
 - Wasabi Power replacement battery 185
- Battery charger, external
 - Panasonic model no. DMW-BTC9 185
 - Wasabi Power model no. LCH-BLE9 185
- Beep menu option 151
- Bleach Bypass setting for Creative Control mode 43
- Blurred background
 - methods of achieving 25
 - using wide aperture to achieve 24–25
- Bright Blue Sky scene setting 33
- Burst Rate menu option 65
- Burst shooting 98–102

- factors affecting speed of 99
- general procedure 14
- H option 99
- incompatibility with other settings 100
- L option 99
- M option 99
- selecting speed of 98–99
- SH option 98–99
 - playback 98–99

C

- Calendar screen in playback mode 16, 114, 118
- Cases
 - LowePro Inverse 100 AW 184
 - LowePro Rezo 110 AW 184
- Categories for playback 117
- Charging/Wi-Fi lamp 7, 173
- Clean HDMI signal output 153
- Clear in Backlight scene setting 33
- Clear Night Portrait scene setting 35
- Clear Nightscape scene setting 34
- Clear Portrait scene setting 32
- Clear Retouch menu option 123–124, 190
- Clear Sports Shot scene setting 36
- Clock Set menu option 149–150
- Color Space menu option 81
 - incompatibility with other settings 81
- Color temperature
 - using to set white balance 93–94
- Color tone
 - adjusting in Intelligent Auto Plus mode 22
- Color tone adjustment for Monochrome Photo Style 50
- Constant Preview menu option 28, 109, 141–142
- Continuous AF option on Creative Video menu 164
- Continuous autofocus setting 63
- Contrast
 - adjusting 49
- Control ring 112–113
 - assigning a function to 112, 146
 - default functions of 112
 - possible assignments for 112
- Controls on back of camera 6–7, 87–112
- Controls on top of camera 6, 85–87
- Cool Night Sky scene setting 34
- Creative Control mode 36–46
 - incompatibility of other settings with 38
 - making adjustments to settings 38–39
 - selecting setting 37
 - using with Raw setting for Quality 38
- Creative Video menu 160–164
 - relationship to Recording menu 160
- Creative Video mode 158–159
- Cropping menu option 127–128, 190
- Cross Process setting for Creative Control mode 42
- Cursor Button Lock option for function button 109–110
- Custom menu 131–149

- Custom mode 46, 131–132
- Custom Multi setting of AF Mode 60–62, 189
- Custom Set Memory menu option 46, 131–132
- Cute Dessert scene setting 36

D

- Date and time
 - displaying on screen 90
 - setting 8, 149–150
- Daylight Saving Time
 - setting for 150
- Defocus control option 21, 92
 - using in Creative Control mode 39
 - using to blur background 13
- Deleting images 105–106, 118
- Deleting portions of images with Clear Retouch option 123–124
- Demo Mode menu option 156
- Depth of field
 - relationship to aperture setting 24–25
- Dial Guide menu option 142
- Diffraction Compensation menu option 80
 - incompatibility with other settings 80
- Diffraction Compensation option on Creative Video menu 165
- Digital Zoom menu option 81
 - incompatibility with other settings 81
- Digital Zoom option on Creative Video menu 165
- Diopter adjustment wheel 88
- Direct Focus Area menu option 59, 63, 135–136
- Direction buttons 90–104
- Display button 88–90
 - using to navigate quickly through menus 48, 90, 189
- Display screens
 - playback mode 89–90
 - recording mode 88–89
- Distinct Scenery scene setting 33
- Down button
 - functions of 97–104
- Drive Mode options 97–104
 - turning off burst shooting and other settings 14, 97
 - using in Intelligent Auto mode 13, 21
- Dynamic Monochrome setting for Creative Control mode 41

E

- Economy menu option 152
- Electronic shutter
 - advantages of 75
- Enlarging image in playback mode 17, 114, 118
- Exposure compensation 91
 - adjusting in Creative Control mode 39
 - adjusting in Intelligent Auto Plus mode 15, 22
 - and video recording 159
 - retaining value after camera powered off 155

Exposure Compensation Reset menu option 155
 Exposure Meter menu option 25, 142
 Exposure Mode menu option for Creative Video mode 158–159, 164
 Expressive setting for Creative Control mode 39
 Extended ISO menu option 80
 Extended Optical Zoom 54–55
 incompatibility with other settings 54
 relationship to Picture Size setting 54
 External audio recorders
 Shure VP83 187–188
 Tascam DR-40 187–188
 Tascam DR-100MkII 187–188
 using for video recording 167
 Zoom H1 187
 Zoom H6 187–188
 External flash units
 LumoPro LP180 187–188
 using with ZS100 camera 186
 Yongnuo YN-560 III 187
 Eye sensor 87–88
 setting sensitivity of 147
 Eye Sensor AF menu option 134
 Eye Sensor menu option 147

F

Face/Eye Detection setting for AF Mode 11, 58–59
 changing face camera focuses on 59
 Face Recognition Edit menu option 130
 Face Recognition menu option 82–83
 Fantasy setting for Creative Control mode 45
 Favorite menu option 128–129
 Fill-flash setting 76
 Filter effect adjustment for Monochrome Photo Style 50
 Filter Settings menu option 52
 using with Quality set to Raw 52
 Filter Settings option on Creative Video menu 160
 Final Cut Pro software 167
 Firmware
 upgrading 155
 Firmware version
 displaying 155
 Flash
 bouncing off ceiling 189
 diffusing 189
 in general 87
 using in Intelligent Auto mode 21, 76
 using in Intelligent Auto Plus mode 22
 Flash Adjustment option of Flash Mode 78
 Flashing highlights in playback mode 90, 140
 Flash menu option 76–78
 Flash Mode menu option 76–77
 Flash release button 87, 88
 Flash Synchro setting for Flash Mode 77
 incompatibility with other settings 78
 Flexible autofocus setting 63

Flicker Decrease option on Creative Video menu 166
 Focus Area Set option for function button 63, 109
 Focus frame
 moving on display 63, 135–136
 Focus mode menu 96–97
 using to select autofocus or manual focus 21
 Focus/Release Priority menu option 136
 effect on burst shooting 100, 136
 Forced On with Red Eye setting for Flash Mode 77
 Format menu option 156
 Freeze Animal Motion scene setting 36
 Function buttons 105–112
 assigning functions to for playback mode 110, 144–145
 assigning functions to for recording mode 105, 107, 144–145, 190
 Fn1/4K Photo button 105
 Fn2/Post Focus button 105
 Fn3/Delete/Q.Menu/Cancel button 105–106
 Fn4/LVF button 106
 using to switch between viewfinder and LCD monitor 147
 Fn5/Wi-Fi button 173
 Function Button Set menu option 105, 144–145

G

G-Cord 10000 mAh Boutique Mobile Power Supply 185
 Geotagging option 119
 Glistening Water scene setting 34
 Glittering Illuminations scene setting 34
 Google Maps 120
 GPS data
 adding to images 119
 Guide Line menu option 140

H

Half Press Release menu option 85, 134
 Handheld Night Shot scene setting 35
 HDMI Info Display (Rec) menu option 153, 183, 187
 HDMI Mode (Play) menu option 153
 HDR (high dynamic range) photography 27, 103
 using Manual exposure mode for 27
 HDR menu option 70–71
 making settings for 71
 HDTV
 connecting camera to with HDMI cable 182–183
 High Dynamic setting for Creative Control mode 42, 70
 High Key setting for Creative Control mode 40
 Highlight menu option 90, 140
 Highlight Shadow menu option 66–67
 High Speed Video menu option 159, 164
 High speed video recording 159, 164
 requirement of using high-speed memory card for 159
 Histogram
 in playback mode 139
 moving on display 139
 Histogram menu option 138–140

I

- i.Dynamic menu option 67
- i.Dynamic option on Creative Video menu 165
- i.Handheld Night Shot menu option 70
- iHDR menu option 70
- Image numbers
 - resetting 155
- iMovie software 18, 171
- Impressive Art setting for Creative Control mode 42
- Index screens in playback mode 16, 114–115, 118
- Intelligent Auto mode 19–21
 - settings unavailable with 20
 - switching to Intelligent Auto Plus mode 20
- Intelligent Auto Plus mode 21–22
 - features of 15
 - selecting 14–15
 - settings unavailable with 15, 21
- Intelligent ISO setting
 - incompatibility with other settings 57
- Interlaced video formats 163
- i.Resolution menu option 67
- i.Resolution option on Creative Video menu 165
- ISO. See Sensitivity
- ISO Increments menu option 79–80
- ISO Limit Set menu option 57, 79
 - not effective for video recording 79, 164
- Items on bottom of camera 7
- Items on front of camera 7, 112–113
- i.Zoom menu option 80–81
 - incompatibility with other settings 81
- i.Zoom option on Creative Video menu 165

J

- JPEG files
 - compression of 56
 - size of 56
- Jump Snap feature 176

L

- Language
 - setting 8, 154
- Language menu option 154
- Latitude and longitude information
 - adding to images 120
- LCD monitor 110–112
 - adjusting brightness of 152
 - setting display quality of 151
 - switching between viewfinder and 106, 147
- Left button
 - functions of 96–97
- Lens
 - minimum focus distance 181
 - retraction in playback mode 88
 - specifications of 7
- Level Shot option on Creative Video menu 164–165

- incompatibility with other settings 165
- Light Composition menu option 122–123
- Live View Mode menu option 151
- Location Logging menu option 118–120
- Locking cursor buttons 109–110
- Locking exposure 88, 132–133
- Locking focus 132–133
- LoiLoScope software 3
 - where to download 3
- Long Shutter Noise Reduction menu option 80
 - incompatibility with other settings 80
- Low Key setting for Creative Control mode 40
- LumoPro optical slave flash 28
- LVF button 87
- LVF Display Style menu option 143
- LVF/Monitor Switch menu option 88, 106, 147

M

- Macro AF setting for focus mode 181
- Macro photography 181–182
 - using Post Focus feature with 181–182
- Macro zoom option for focus mode 96
- Manual exposure mode 27–29
 - icons on screen 28
 - reasons for using 27
 - using Auto ISO setting with 28–29, 57, 189
- Manual focus
 - general procedure for using 12–13
 - using autofocus in manual focus mode 133
 - using in conjunction with autofocus 136
- Manual focus option for focus mode 96–97
- Mechanical shutter
 - advantages of 75
- Megapixels 53–54
- Memory card
 - capacity for storing images and videos 5
 - considerations for choosing 4–5
 - inserting into camera 5
 - requirement of UHS Speed Class 3 for 4K video recording 4
 - requirement of using 4
- Menu Background menu option 154
- Menu Guide menu option 31, 148–149
- Menu Information menu option 154
- Menu Resume menu option 154
- Menu/Set button
 - functions of 104
- Menu system
 - dimmed items as unavailable 48
 - navigating in 47–49
 - numbers indicating current screen 48
- Metering Mode menu option 63–65
 - incompatibility with other settings 64
- Metering Mode option on Creative Video menu 165
- MF Assist Display menu option 137
- MF Assist menu option 97, 136–137
 - incompatibility with other settings 137

- using to enlarge manual focus screen 13
- MF Guide menu option 97, 137
- M/FT menu option 153
- Microphone 87
- Miniature setting for Creative Control mode 44
- Mode dial 86
 - using to select recording mode 19
- Monitor Display menu option 151–152
- Monitor Display Style menu option 88, 143
- Monitor Luminance menu option 152
- Monochrome Live View menu option 141
- Monochrome scene setting 36
- Monochrome setting for Creative Control mode 41
- Monochrome setting for Photo Style 51
 - available adjustments for 50
- Motion picture button 86
- Motion pictures
 - editing in camera 125–126, 170–171
 - editing with computer 18, 171–172
 - saving still frames from 18, 171
- MP4 video format 162–163
 - locating MP4 files on memory card 171
- MTS files for AVCHD video 162, 171
- Multiple Exposure menu option 72–73
 - using Overlay option with existing Raw image 73

N

- Natural setting for Photo Style 51
- Noise reduction
 - adjusting 49
- No Memory Card error message 4
- Number Reset menu option 155–156

O

- Old Days setting for Creative Control mode 40
- One Point Color setting for Creative Control mode 45
- One Push AE option for function button 109
- Online Manual menu option 149
- On/off switch 85

P

- Panasonic AC Adapter, model no. DMW-AC10 186
- Panasonic DC Coupler, model no. DMW-DCC11 186
- Panasonic Image App 118–120, 173, 174–179, 190
- Panasonic Lumix Club 177, 178–179
- Panasonic Lumix DMC-ZS60/TZ80 camera
 - items included with in box 3
 - usefulness of this book for 2
- Panasonic Lumix DMC-ZS100 camera
 - features lacking 1
 - features of 1
 - various model number designations of 1
- Panorama mode 29–30
- Panoramas
 - direction of 30, 75

- playing in camera 30
- shooting with filter effects 30
- size of 30, 75
- Panorama Settings menu option 30, 75
- Peaking
 - using to assist with manual focus 13
- Peaking menu option 97, 137–138
- Pet
 - adding name and age to image 83
- PhotoAcute software 103
- Photo Collage feature 178
- Photoflex Lite-Dome XS softbox 187
- PHOTOfunSTUDIO software 3, 83, 125, 179–180
 - where to download 3
- Photomatix Pro software 103
- Photo Style menu option 49–51
 - adjusting parameters for 49–50
 - comparison chart 51
 - saving a custom setting 51
 - using with Raw setting for Quality 50
 - using with Scene mode 50
- Photo Style option on Creative Video menu 160
- PictBridge protocol 153
- Picture Size menu option 53–54
 - incompatibility with other settings 54
- Picture Size setting for panoramas 30
- Picture Sort menu option 130
- Pinpoint AF Display menu option 62–63, 135
- Pinpoint AF Time menu option 63, 135
- Pinpoint setting for AF Mode 62–63, 135
 - not available for video recording 164
- Playback
 - burst of shots 92
 - SH option 99
 - motion pictures 17–18, 92, 170
 - panoramas 30, 92
 - still images 16–17
 - general procedures 114, 118
 - using touch screen for 114, 148
- Playback button 88
- Playback menu 115–130
- Playback Mode menu option 117–118
- Plural Eyes software 167
- Pole aerial photography 187
- Portrait setting for Photo Style 51
- Post Focus menu option 68–69, 190
 - incompatibility with other settings 69
 - using for macro photography 181–182
- Preview option for function button 108–109
 - incompatibility with other settings 142
- Print Set menu option 129
- Profile Setup menu option 83
- Program mode 23–24
- Program Shift 23
- Progressive video formats 163
- Protect menu option 129–130

Q

- Q.Menu menu option 145–146
- Quality menu option 55–56
 - distinguished from Picture Size option 55
- Quick AF menu option 134
- Quick Menu 83–84
 - customizing 145–146
- QuickTime video software 18

R

- Raw & Fine setting for Quality 56
 - setting Picture Size for 54
- Raw Processing menu option 120–122, 190
- Raw setting for Quality
 - general characteristics 55–56
 - incompatibility with other settings 48, 55
 - processing Raw images in camera 120–122
 - size of files shot with Raw 56
 - using with Filter Settings option or Creative Control mode 189
 - using with Photo Style settings 50
- Raw & Standard setting for Quality 56
 - setting Picture Size for 54
- Rear-curtain flash 77
- Rear dial 86
 - changing function assigned to 146
 - default assignments of 86
- Recording Area menu option 143
- Recording Format option on Creative Video menu 162
- Recording modes
 - list of 19
- Recording Quality option on Creative Video menu 163
- Red-eye Removal menu option 78–79
- Red icon indicating writing to memory card 5
 - displayed after burst shooting 100
- Relaxing Tone scene setting 33
- Remaining Display menu option 143
- Reset menu option 156
- Resetting camera to default settings 156
- Reset Wi-Fi Settings menu option 156
- Resize menu option 127, 190
 - incompatibility with other settings 127
- Restore to Default option for function button 110
- Retro setting for Creative Control mode 39
- Right button
 - functions of 92–96
- Ring/Dial Set menu option 86–87, 112, 146
- Romantic Sunset Glow scene setting 33
- Rotate Display menu option 128
- Rotate menu option 127
- Rough Monochrome setting for Creative Control mode 41

S

- Saturation
 - adjusting 49

- Scene detection 20
- Scene menu option 31
- Scene mode 31–36
 - incompatibility with other settings 32
 - selecting scene type 31–32
 - using with Quality set to Raw 32
- Scenery setting for Photo Style 51
- SD card
 - capacity of 4
- SD cards
 - in general 4
- SDHC card
 - capacity of 4
- SDXC card
 - capacity of 4
- Second-curtain flash 77
- Sekonic Prodigy color meter 93
- Self-timer 66, 103–104
 - general procedure for using 14, 189
 - incompatibility with other settings 104
 - retaining setting after camera powered off 155
- Self Timer Auto Off menu option 104, 155
- Self-timer menu option 66, 104
- Sensitivity (ISO) 57–58
 - effects of setting of 25600 58
 - in general 57–58
 - making numerical setting for 57
 - setting from menu 57
 - settings available for video recording 164
- Sensitivity (ISO) option on Creative Video menu 164
- Sequence setting for Auto Bracket menu option 65
- Setup menu 149–156
- Sharpness
 - adjusting 49
- Shure VP83F audio recorder 167
- Shutter AF menu option 85, 133–134
- Shutter button 85
 - using to start and stop video recording 158
- Shutter Priority mode 26–27
- Shutter speed
 - range of available settings 23, 24, 26, 29, 75
 - range of available settings for video recording 158–159, 164
 - setting by turning rear dial or control ring 27
 - setting in Manual exposure mode 28
 - using setting to freeze or blur motion 26
- Shutter Type menu option 75–76
- Silent Mode menu option 132, 135
- Silent Operation option on Creative Video menu 166
- Silky Monochrome setting for Creative Control mode 41
- Silkipix software 3, 56
 - where to download 3
- Silky Skin scene setting 32
- Simultaneous Record Without Filter menu option 52
- Single autofocus setting 63
- Single/Burst setting for Auto Bracket menu option 65
- Sleep Mode menu option 152

Slide Show menu option 116–117

Slow-motion video footage
 using 60p format to produce 163
 using High Speed Video option to produce 159, 164

Slow Sync setting for Flash Mode 76
 incompatibility with other settings 77

Snap Movie option on Creative Video menu 161–162
 combining movies with Panasonic Image App 178

Soft Focus setting for Creative Control mode 44

Soft Image of a Flower scene setting 35

Sounds made by camera
 silencing 151

Spot metering option 64
 moving spot metering area on display 64, 188
 during video recording 165

Stabilizer menu option 81–82
 incompatibility with other settings 82

Standard setting for Photo Style 51

Star Filter setting for Creative Control mode 45

Step-by-step guides
 adding location data to images 118–119
 connecting camera to smartphone or tablet 173–175
 recording motion pictures in Intelligent Auto mode 15
 saving still frame from motion picture 171
 sending images to computer by Wi-Fi 179–180
 taking pictures in Intelligent Auto Mode 9
 uploading images to social networks 178–179
 using 4K Live Cropping feature 161
 using Custom Multi setting for AF Mode 60–61
 using Snap Movie feature 161–162
 using the Video Divide option 170

Step zoom function for control ring 112, 145

Step zoom function for zoom lever 145

Stop Motion Animation menu option 74–75

Stop Motion Video menu option 75, 127

Street photography 182

Sunshine setting for Creative Control mode 46

Sweet Child's Face scene setting 33

T

Tables

default assignments for rear dial 86

default functions of control ring 112

function button assignments for recording mode 107

Number of still images stored on 64 GB card 5

Recommended settings for shooting in Intelligent Auto Mode 10

results of burst shooting tests 99

Shutter speed equivalents 27

use of camera controls for video recording 168

Tascam DR-40 audio recorder 167

Tascam DR-100mkII audio recorder 167

Text Stamp menu option 125
 incompatibility with other settings 125
 using to imprint name on image 83

Time exposure setting for shutter speed 29

Time Lapse Shot menu option 73–74

Time Lapse Video menu option 74, 126

Time zone
 setting 150

Title Edit menu option 124–125

Touch AE icon 111, 148

Touch AE option for function button 109

Touch AF menu option 59, 63, 136, 148

Touch icon for virtual function buttons 111–112

Touch Pad AF menu option 148

Touch screen features
 in general 110–112, 190
 using during video recording 169

Touch screen icons 110–112

Touch Screen menu option 147

Touch Scroll menu option 114, 118, 148

Touch Settings menu option 59, 97, 147–148

Touch shutter icon 110

Touch Shutter option 148
 using during video recording 170

Touch tab icons 110–111, 147

Touch Tab menu option 147

Touch zoom icon 111

Toy Effect setting for Creative Control mode 43

Toy Pop setting for Creative Control mode 43

Tracking focus 11–12

Travel Date menu option 150

Tripods
 Manfrotto BeFree MKBFRA4-BH 188
 Manfrotto BeFree model no. MKBFRC4-BH 188

TV Connection menu option 153

U

UHS Speed Class 3
 requirement for SD card for recording 4K video 4

Ultra-HD video format. See 4K video format

Up button
 functions of 91–92

USB Mode menu option 153

V

Version Display menu option 155

VGA video format 164

Video Divide menu option 125–126, 170

Video recording
 duration limits for 5
 effects of Mode dial position on 157–158
 general procedure for 15–16, 157–160, 170
 range of aperture settings available 158
 range of shutter speed settings available 158–159, 164
 taking still pictures during 159, 167
 using Creative Video mode 158–159
 using external video recorder 153
 using physical controls of camera during 167–169

Viera Link menu option 153

Viewfinder 87–88

- switching between monitor and 106, 147
- Viewfinder menu option 151–152
- Virtual function buttons
 - cannot be used with viewfinder 108
 - functions that cannot be assigned to 108
- Vivid setting for Photo Style 51
- Vivid Sunset Glow scene setting 34

W

- Warm Glowing Nightscape scene setting 34
- WD TV Live media device 180
- White balance 92–96
 - adjusting with color axes 94
 - comparison chart 94–95
 - list of preset options 92
 - setting by color temperature 93–94
 - setting custom value manually 92–93
- White balance bracketing 95–96
 - incompatibility with other settings 96
- Wi-Fi features of camera 173–181
 - connecting to smartphone or tablet 173–175
 - controlling camera with smartphone or tablet 175–176, 190
 - Jump Snap feature 176
 - sending images and videos to smartphone or tablet 176–177
 - sending images to a computer 179–180
 - sending images to printers and other devices 180
 - uploading images to social media sites 177, 178–179
 - viewing images on TV 180
- Wi-Fi menu option 151, 173
- Wind Noise Canceller option on Creative Video menu 166
- Windows Movie Maker software 18, 172
- World Time menu option 150

Z

- Zebra pattern menu option 141
- Zoom H1 audio recorder 167
- Zoom H6 audio recorder 167
- Zoom lever 85
 - assigning step zoom operation to 145
 - using to navigate quickly through menus 48, 85, 189
- Zoom Lever menu option 145
- Zoom MIc option on Creative Video menu 166
- Zoom Resume menu option 145
- Zoom scale
 - selecting meters or feet for display 153