

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Choosing and Inserting a Memory Card	4
Setting the Date, Time, and Language	7
CHAPTER 2: BASIC OPERATIONS	9
Introduction to Main Controls	9
Top of Camera	9
Back of Camera	10
Front of Camera	11
Left Side of Camera	11
Right Side of Camera	12
Bottom of Camera	12
Taking Pictures in Intelligent Auto Mode	13
Variations from Fully Automatic	14
Focus	14
Focus Modes	15
Other Settings	15
Flash	16
Drive Mode: Self-Timer and Continuous Shooting	17
Overview of Movie Recording	18
Viewing Pictures	19
Review While in Shooting Mode	19
Reviewing Images in Playback Mode	19
Playing Movies	20
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	21
Intelligent Auto Mode	21
Superior Auto Mode	22
Program Mode	23
Aperture Priority Mode	24
Shutter Priority Mode	26
Manual Exposure Mode	28
Scene Mode	31
Portrait	33
Sports Action	33
Macro	34
Landscape	34
Sunset	34
Night Scene	35
Hand-Held Twilight	35
Night Portrait	36
Anti Motion Blur	36
Sweep Panorama Mode	37
Memory Recall Mode	39

CHAPTER 4: THE SHOOTING MENU

41

Image Size	43
Aspect Ratio	44
Quality	46
Image Size (Dual Recording)	47
Quality (Dual Recording)	47
File Format	48
Record Setting	48
Dual Video Recording	48
HFR Settings	48
Panorama Size and Panorama Direction	48
Drive Mode.	49
Single Shooting	49
Continuous Shooting	49
Speed Priority Continuous Shooting	50
Self-Timer	51
Self-Timer (Continuous)	51
Continuous Exposure Bracketing	52
Single Exposure Bracketing	53
White Balance Bracketing	53
DRO Bracketing	53
Bracket Settings	54
Flash Mode.	54
Flash Off	55
Autoflash	55
Fill-Flash	55
Slow Sync	55
Rear Sync	56
Wireless	57
Flash Compensation.	58
Red Eye Reduction.	59
Focus Area	59
Wide	60
Center	60
Flexible Spot	61
Expand Flexible Spot	61
Lock-on AF	62
AF Illuminator	63
Exposure Compensation	63
ISO	63
Multi Frame Noise Reduction	64
ISO Auto Minimum Shutter Speed	66
Metering Mode	67
White Balance	68
DRO/Auto HDR	72
Creative Style	74
Adjusting Contrast, Saturation, and Sharpness	75
Standard	77
Vivid	77
Neutral	78
Clear	78
Deep	78
Light	78
Portrait	78
Landscape.	78
Sunset	78

Night Scene 78

Autumn Leaves 78

B/W 78

Sepia. 78

Picture Effect 79

 Off 80

 Toy Camera 80

 Pop Color 80

 Posterization 81

 Retro Photo 81

 Soft High-Key 81

 Partial Color 82

 High Contrast Monochrome 82

 Soft Focus 82

 HDR Painting 83

 Rich-Tone Monochrome 83

 Miniature Effect 84

 Watercolor 84

 Illustration. 84

Picture Profile 85

Range of Zoom Assist 89

Focus Magnifier 89

Long Exposure Noise Reduction 91

High ISO Noise Reduction. 91

Center Lock-on AF. 91

Smile/Face Detection 92

 Face Detection On (Registered Faces) 92

 Face Detection On 93

 Smile Shutter 93

Auto Dual Recording 94

Soft Skin Effect. 94

Auto Object Framing 94

Auto Mode. 95

Scene Selection 95

High Frame Rate 95

Movie. 96

SteadyShot (Still Images) 96

SteadyShot (Movies). 96

Color Space 96

Auto Slow Shutter 96

Audio Recording. 96

Audio Recording Level 97

Audio Out Timing 97

Wind Noise Reduction. 97

Memory Recall 97

Memory 97

CHAPTER 5: PHYSICAL CONTROLS

Shutter Button 99

Zoom Lever 99

Power Switch. 99

Flash Pop-up Button. 99

Custom Button 1. 100

Custom Button 2. 100

Exposure Compensation Dial 100

Display Panel and Display Panel Illumination Button 101

Mode Dial	102
Built-in Flash	102
Multi Interface Shoe	102
Microphone	102
Sensor Plane Indicator.	102
Focus Switch	103
Single-Shot AF	103
Continuous AF	104
Direct Manual Focus	104
Manual Focus	105
AF Illuminator/Self-Timer Lamp.	107
Aperture Ring and Aperture Click Switch.	107
Front and Rear Lens Rings.	107
Playback Button	108
Movie Button	108
Menu Button.	108
Function Button	108
Function Menu	108
Quick Navi System	110
Dial/Wheel Lock.	111
Send to Smartphone	111
Custom 3/Delete Button	111
Control Wheel and Its Buttons	112
Control Wheel.	112
Center Button.	112
Direction Buttons.	113
Up Button: Display.	113
Left Button	113
Right Button	114
Down Button.	114
AEL Button	114
Control Dial	114
Viewfinder and Eye Sensor	114
Diopter Adjustment Wheel	115
Tilting LCD Screen	115
Access Lamp	115
Ports for Audio, HDMI, and Other Connections	116
Focus Hold Button.	116
Right Side of Camera	117
Bottom of Camera	117

CHAPTER 6: PLAYBACK AND PRINTING

118

Normal Playback.	118
Index View and Enlarging Images.	118
Playback Display Screens	120
Deleting Images with the Delete Button	121
Playback Menu.	121
Delete	122
View Mode	122
Image Index.	123
Display Rotation	124
Slide Show	124
Rotate	125
Enlarge Image.	125
Enlarge Initial Magnification	125
Enlarge Initial Position	126

Protect. 126
 Motion Interval Adjustment 127
 Specify Printing 127
 Photo Capture 128

CHAPTER 7: THE CUSTOM AND SETUP MENUS 130

Custom Menu 130
 Zebra 130
 MF Assist 131
 Focus Magnification Time 132
 Initial Focus Magnification 132
 Grid Line. 133
 Rule of Thirds Grid 133
 Square Grid 133
 Diagonal Plus Square Grid. 134
 Marker Display 134
 Marker Settings 134
 Audio Level Display. 135
 Auto Review. 136
 Display Button 136
 Peaking Level 138
 Peaking Color 139
 Exposure Settings Guide 139
 Live View Display 140
 Pre-AF 141
 Zoom Speed 141
 Zoom Setting 141
 Finder/Monitor 144
 Release without Card 145
 AEL with Shutter 145
 Shutter Type 146
 Exposure Compensation Setting. 147
 Reset EV Compensation 147
 Face Registration 148
 Write Date. 148
 Video Light Mode. 149
 Function Menu Settings 149
 Custom Key (Shooting). 150
 Control Wheel 151
 Custom Button 1. 151
 Focus Standard 153
 In-Camera Guide 153
 AEL Hold. 154
 AEL Toggle 154
 Spot AEL Hold. 155
 Spot AEL Toggle. 155
 AF/MF Control Hold 155
 AF/MF Control Toggle 155
 Eye AF 155
 Focus Hold 156
 Bright Monitoring. 156
 Smart Teleconverter 156
 Zoom Assist. 157
 Deactivate Monitor 157
 MOVIE 157
 Download Application 157

Not Set	157
Custom Button 2	157
Custom Button 3	157
Center Button	157
Left Button	158
Right Button	158
Down Button	158
AEL Button	158
Focus Hold Button	158
Custom Key (Playback)	158
Lens Ring Setup	159
Focus Ring Rotate	159
Zoom Ring Rotate	159
Zoom Function on Ring	159
Movie Button	160
Dial/Wheel Lock	161
Setup Menu	162
Monitor Brightness	162
Viewfinder Brightness	163
Finder Color Temperature	163
Gamma Display Assist	163
Volume Settings	164
Audio Signals	164
Upload Settings	164
Tile Menu	164
Mode Dial Guide	165
Delete Confirmation	165
Display Quality	165
Power Save Start Time	166
NTSC/PAL Selector	166
Demo Mode	167
TC/UB (Time Code/User Bit) Settings	167
TC/UB Display Setting	168
TC Preset	169
UB Preset	169
TC Format	169
TC Run	169
TC Make	169
UB Time Record	169
HDMI Settings	170
HDMI Resolution	170
24p/60p Output	170
HDMI Information Display	170
TC Output	171
Rec Control	171
CTRL for HDMI	171
4K Output Select	171
Memory Card + HDMI	171
HDMI Only (30p)	172
HDMI Only (24p)	172
USB Connection	172
USB LUN Setting	173
USB Power Supply	174
Language	174
Date/Time Setup	174
Area Setting	175
Copyright Info	175

Format	176
File Number	176
Set File Name	177
Select REC Folder	177
New Folder	177
Folder Name	178
Recover Image Database	178
Display Media Info	178
Version	179
Setting Reset	179

CHAPTER 8: MOTION PICTURES

180

Movie-Making Overview	180
Details of Settings for Shooting Movies	181
Movie-Related Shooting Menu Options	181
File Format	181
XAVC S 4K	181
XAVC S HD	182
AVCHD	182
MP4	182
Record Setting	182
XAVC S 4K	182
XAVC S HD	183
AVCHD	183
60i and 60p Video Formats	184
24p Video Formats	184
MP4	184
Dual Video Recording	184
HFR Settings	185
Picture Profile	185
Auto Dual Recording	185
High Frame Rate	185
Movie (Exposure Mode)	185
Program Auto	186
Aperture Priority	186
Shutter Priority	187
Manual Exposure	187
SteadyShot (Movies)	188
Auto Slow Shutter	189
Audio Recording	190
Audio Recording Level	190
Audio Out Timing	191
Wind Noise Reduction	191
Effects of Mode Dial Position on Recording Movies	191
Effects of Other Shooting Menu Settings on Recording Movies	193
Effects of Physical Controls When Recording Movies	195
High Frame Rate Recording	196
Recording to an External Video Recorder	198
Shooting Still Images During Video Recording	200
Summary of Options for Recording Movies	200
Other Settings and Controls for Movies	201
Movie Playback	202
Motion Shot Feature	203
Editing Movies	204

CHAPTER 9: USING WI-FI AND OTHER TOPICS 205

Sending Images to a Computer	205
Sending Images to a Smartphone	207
Connecting with NFC	209
Using a Smartphone or Tablet as a Remote Control	210
Wi-Fi Menu	213
Send to Smartphone	213
Send to Computer	213
View on TV	213
One-touch (NFC)	214
Airplane Mode	214
WPS Push	215
Access Point Settings	215
Edit Device Name	215
Display MAC Address	216
SSID/PW Reset	216
Reset Network Settings	216
Applications and Application Menu	216
Other Topics	218
Using the Superzoom Telephoto Lens	218
Street Photography	220
Infrared Photography	220
Connecting to a Television Set	221

APPENDIX A: ACCESSORIES 222

Cases	222
Batteries and Chargers	223
AC Adapters and Other Power Sources	224
Add-On Filters and Lenses	225
Remote Controls	225
Cable Release	226
External Flash Units	227
Sony Video Light	229
External LCD Monitor	229
External Microphones	230
External Video Recorder	231
Tripods	231

APPENDIX B: QUICK TIPS 232

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 235

Books	235
Websites and Videos	235
Digital Photography Review	235
Reviews and Demonstrations of the RX10 III	235
White Knight Press	235
The Official Sony Site	236
Other Resources	236

Index 238