

Index

Symbols

- 4K Output Select menu item 171
- 4K video
 - in general 181–182
 - using as a type of continuous shooting 201
- 5-minute recording limit for high-quality video
 - avoiding by recording to external recorder 229, 233
- 24p, 30p, 60p, and 120p video frame rates 184
- 24p/60p Output menu item 169–170
- 35mm-equivalent zoom range 143

A

- AC adapter
 - Sony AC-UUD12 4, 225
- Access lamp 11, 53, 118
- Access Point Settings menu item 207, 216
- Adobe Premiere Elements software 21
- Adobe Premiere Pro software 21, 169, 200
- AEL Hold option 155
- AEL Toggle option 155
- AEL w/Shutter menu item 103, 147–148
 - using with continuous shooting 53, 148–149
- AF Area Auto Clear menu item 142
- AF Drive Speed menu item 185
- AF Illuminator menu item 68, 105–106
- AF Illuminator/Self-timer Lamp 10, 105
 - controlling operation of 68, 105–106
- AF/MF Control Hold option 156
 - using for back button focus 156
- AF/MF Control Toggle option 64, 156
- AF Tracking Sensitivity menu item 185
- Airplane Mode menu item 215–216
- Anker 40-watt desktop USB charger 225
- Anti Motion Blur scene type setting 37
 - compared to Hand-held Twilight setting 37
- Aperture
 - range of available settings 27, 31
 - effect of focal length on 27
- Aperture Priority exposure mode for movies 186–187
- Aperture Priority mode 25–27
- Apple Computer devices and software
 - playing movies with 182, 233
- Application List menu item 211, 218
 - assigning to a control button 219
- Application Management app 218
- Application menu 211, 217–218
- Area Setting menu item 175

- Aspect Ratio menu item 47–48
 - incompatibility with other settings 48
 - relationship to Image Size menu item 46
 - relationship to zoom range 146
- Asterisk indicating autoexposure lock 32
- Astrophotography 219
- Atomos Shogun video recorder 229
 - controlling from RX100 V camera 171
 - recording video to 182, 199–200
- Audio Recording menu item 190
- Audio Signals menu item 163
- Auto Dual Recording menu item 98, 201
- Autoflash setting 58
- Autofocus
 - using while in manual focus mode 156
- Auto ISO setting
 - setting minimum and maximum values for 69–70
 - setting minimum shutter speed for use with 71–72
 - using with Manual exposure mode 30, 71
 - for movies 188
- Automatic AF setting 61
- Auto Mode 22–24
- Auto Mode menu item 100
- Auto Object Framing menu item 34, 99
 - incompatibility with other settings 99
- Auto Review menu item 20, 136–137
 - deleting an image in Auto Review 122, 137
- Auto Slow Shutter menu item 101, 190
 - works only when Auto ISO is in effect 190
- AVCHD format for movies 182

B

- Back button focus feature 156
- Background defocus setting for Photo Creativity 15
- Battery
 - charging 3–4
 - indicator light 4
 - time for full charge 4
 - when camera connected to computer 4, 174
 - generic replacement 225
 - Sony NP-BX1 3, 225
- Battery charger
 - generic external charger 224
 - Sony AC-UUD12 4, 225
 - Sony BC-TRX external charger 224
 - using as external power source 3, 225
- Battery/memory card compartment 3, 7, 118
- Beauty Effect menu item 129
- Bit rates of video formats 183, 184
- Black and white
 - Picture Profile setting for 94
 - shooting in 84, 88, 89
- Black Gamma 93
- Black Level 93
- Blurred background 26, 187
 - how to achieve 15

Bokeh 15, 26
 Bounce flash 104
 Bracket Order menu item 57
 Bracket Pro camera app 218
 Bracket Settings menu item 57
 Bright Monitoring option 157
 incompatibility with other settings 157
 Brightness setting for Photo Creativity 15
 BULB setting for shutter speed 31

C

Calendar display of images 120, 124
 Camera apps 217–219
 Capture One Express software 3
 Capturing still frames from 4K video sequence 130
 Capturing still images during movie recording 98, 232
 Cases for RX100 IV camera
 Camson leather case 223–224
 Eagle Creek Waist Pack 224
 LowePro Inverse 110 AW Waist Pack 224
 LowePro Rezo 110 AW 224
 Sony LCJ-RXF 223
 Center button 113–114
 assigning a function to 113, 158
 Focus Standard setting for 113, 158
 using to activate focus tracking 113
 using to adjust location of Flexible Spot focus frame 113
 using to determine reason for setting conflict 232
 using to magnify focus area 113
 using to play a panorama at larger size 113
 using to play a video 113
 using to return enlarged image to normal size 114, 120
 Center Button menu item 158
 using Focus Standard setting 158
 Center Lock-on AF menu item 96
 compared with Lock-on AF setting for Focus Area 68, 96
 incompatibility with other settings 97
 Center option for Focus Area 65–66
 distinguishing focus frame from Spot metering circle 74
 Center option for Metering Mode 73, 74
 Clean HDMI signal output 170, 222
 Clear Image Zoom 144–146
 incompatibility with other settings 146–147
 Clipping of highlights 115, 138
 Clipping of shadow areas 138
 Color Depth 94, 234
 Color Mode 94, 234
 Color Phase 94
 Color setting for Photo Creativity 15
 Color Space menu item 101
 Color temperature 74
 using to set white balance 75
 Continuous AF setting 61
 Continuous shooting option 52–54
 incompatibility with other settings 54
 selecting speed of 52

 using autoexposure with 53
 using autofocus with 53
 using with flash 53
 Contrast
 adjusting 81–82
 Control ring 10, 106–107
 assigning functions to 104, 106, 152
 speeding up zoom operation 158–159
 Standard option for settings 106, 152
 using to adjust exposure compensation 152
 using to adjust manual focus 106, 133
 using to select panorama direction 40, 51
 using to select scene type setting 33, 100
 using to set aperture 106
 using to set shutter speed 106
 using to zoom the lens 104, 158–159
 Control Ring option of Custom Key Settings menu item 104, 106, 152–153
 Control wheel 10, 112–113
 icon on display screen 29, 112–113
 locking operation of 111, 160
 using to control both aperture and shutter speed 29
 using to move to other enlarged images 120
 using to select scene setting 33, 100, 112
 using to set aperture 112
 using to set panorama direction 40, 51, 112
 using to set shutter speed 112
 Copyright Info menu item 175
 Counter option for movie recording 167
 Creative Style comparison charts 83
 Creative Style menu item 81–85
 adjusting contrast, saturation, and sharpness 81–82
 comparison of settings to Scene mode settings 84
 incompatibility with other settings 82
 saving custom settings 82
 using with Raw images 82
 CTRL for HDMI menu item 171
 Custom/Delete button 10–9, 111–112
 assigning function to 158–159
 using for In-Camera Guide option 111–112
 using to delete images or videos 112, 122, 164
 using to reset Photo Creativity settings 112
 using to return movable focus frame to center 66
 Custom Key (Playback) menu item 111, 158
 Custom Key (Shooting) menu item 106, 152–158
 list of items that can be assigned to a button 153–154
 Custom menu 131–161
 Custom white balance
 how to set 76

D

Date and Time
 setting with Setup menu 8, 174
 Date/Time Setup menu item 8, 174
 DaVinci Resolve software 234
 Day for night movie recording 188

Deactivate Monitor menu item 157
 Delete Confirmation menu item 164–165
 Delete menu item 123
 Deleting images or videos 122, 123, 164
 Demo Mode menu item 166–167
 Depth of field
 relationship to aperture setting 26
 Detail (Picture Profile parameter) 94
 Digiscoping 220
 Digital Zoom 144–146
 incompatibility with other settings 146
 Dimmed menu items 45
 Diopter adjustment lever 105
 Display button 114
 using to cycle through display screens 139
 Display Button menu item 137–139
 Display Continuous AF Area menu item 142
 Display MAC Address menu item 217
 Display Media Information menu item 178
 Display Quality menu item 165
 Display Rotation menu item 125
 Display screens
 playback mode 121
 shooting mode 137–139
 selecting with Display button menu item 137–139
 DLNA streaming media server 214
 DMF (direct manual focus) 62
 requirement to hold shutter button down halfway with MF Assist 62, 107, 133
 Down button 114–116
 inability to be reassigned to other functions 116
 using to activate Photo Creativity options 114
 using to adjust exposure compensation 115
 using to adjust volume for movies 116
 using to switch functions of Control wheel 114
 Download Application option 157
 DPOF (Digital Print Order Format) printing 128
 Drive Mode 18, 52–57
 basic procedure for using 52
 DRO/Auto HDR menu item 78–80
 incompatibility with other settings 80
 DRO bracketing 56
 order not affected by Bracket Order menu setting 57
 DRO (dynamic range optimizer) setting
 effect on Raw images 80
 Dual Video Recording menu item 51, 185

E

Edit Device Name menu item 216
 Electronic shutter 148–149
 fastest setting available when using flash 148
 Electronic viewfinder 9, 104–105
 adjusting brightness of 105, 162
 adjusting color temperature 162
 does not function during Wi-Fi remote control operation 105

 setting camera to power off when EVF closed 11, 105, 118, 166
 setting information display screens for 105
 switching between EVF and LCD screen 105, 146–147
 turning on camera by popping up EVF 104, 118
 Enlarge Image menu item 126
 Enlarge Initial Magnification menu item 126–127
 Enlarge Initial Position menu item 20, 127
 Enlarging images with zoom lever 120
 Expand Flexible Spot setting for Focus Area 67
 Exposure bracketing
 continuous 55–56
 incompatibility with other settings 56
 order of bracketed exposures 55
 changing 55, 57
 single 56
 using exposure compensation with 56
 using flash with 56
 using self-timer with 57
 Exposure compensation 115–116
 limited adjustment range for movies 195
 using with Manual exposure mode 30
 using with Sweep Panorama mode 40
 Exposure Compensation menu item 68
 Exposure Settings Guide menu item 140
 External audio recorder
 Tascam DR-100MkII 230
 External flash
 LumoPro LP180 229
 using with RX100 V camera 228–229
 Yongnuo YN560-IV 229
 Eye AF option 156–157
 not available for movie recording 157
 Eye-Fi card
 setting upload options for 163
 Eye sensor 9, 105

F

Face Detection On menu item 97
 Face Detection On (Registered Faces) menu item 97
 Face Registration menu item 97, 149–150
 Fadeout
 in-camera effect for movies 187, 188, 188–189
 Fade to white
 in-camera effect for movies 188
 File Format menu option 51, 181–182
 File Number menu item 176
 Fill-flash setting 58
 Filter adapter 221
 Lensmate 52mm version 225–226
 Sony VFA-49R1 49mm version 226
 Final Cut Express software 21
 Final Cut Pro software 21, 200
 Finder Color Temperature menu item 162
 Finder/Monitor menu item 105, 146–147
 Finder switch 9, 11, 104, 118

Fireworks scene type setting 38

Firmware 179

- checking for updates 179
- displaying version 179

Flash 104

- basic procedure for using 16–18
- incompatibility with other settings 17

Flash Compensation menu item 60

- incompatibility with other settings 60

Flashing highlights in playback mode

- indicating areas of overexposure 122

Flash Mode menu option 17, 57–60, 104

Flash Off setting 58

Flash pop-up switch 9, 104

Flash synchronization speed 27, 31, 60, 148

Flash unit 104

- cannot be used until manually popped up 17, 104
- moving for bounce flash 104
- using diffuser with 233

Flexible Spot option for Focus Area 66–67, 113

Focus Area menu item 64–68

Focus frame

- changing size and location of 66–67, 232
- during video recording 196

Focusing on off-center subject 66

Focus Magnification Time menu item 95, 133

Focus Magnifier menu item 63, 94–95

- assigning to a control button 63, 95
- compared to MF Assist option 63, 95
- using for recording movies 95, 203

Focus Mode menu item 61–64

Focus point

- checking in playback mode 20, 127

Focus Standard setting for control button 67, 113

Focus tracking 67, 96

Folder Name menu item 178

Format item on Setup menu 7, 176

For Viewfinder display screen 109, 138–139

- not available for video recording or in Movie mode 139, 202

Function button 9, 108–111

- assigning option to for playback mode 158
- using to activate Send to Smartphone option 111
- using with Wheel Lock menu item 160

Function for VF Close menu item 11, 118, 166

Function menu 108–109

- assigning options to 151–152
- using during video recording 195
- using to adjust settings 108–109

Function Menu Settings menu item 150–152

G

Gamma 93

Gamma Display Assist menu item 162

G-Cord 1000 mAh Boutique Mobile Power Supply 225

Gourmet scene type setting 38

Grid Line menu item 134–135

Grip, accessory

- Richard Franiec version 226
- Sony AG-R2 226

H

Hand-held Twilight scene type setting 36

- compared to Anti Motion Blur setting 36

HDMI Audio Output menu item 171

HDMI cable 221

HDMI Information Display menu item 170, 222

HDMI Only menu items 171–172

HDMI port 11–10, 118, 221

HDMI Resolution menu item 169

HDMI Settings menu item 169–171

HDR (high dynamic range) photography 32, 79, 89

HDR setting in camera 79

- incompatibility with Raw format 80

Help system 111–112

HFR Settings menu item 51, 197

High Frame Rate menu item 100, 197

High Frame Rate recording 196–198

- range of available shutter speeds 197

High ISO Noise Reduction menu item 96

- incompatibility with other settings 96

High Sensitivity scene type setting 38

- compared to Anti Motion Blur and Hand-held Twilight settings 39

Histogram

- activating in shooting mode 122, 138
- playback mode 121–122

I

Icon for menu items for still images or movies 45

Illustrations

- controls on back of camera 107
- controls on top of camera 221
- electronic viewfinder 104
- items on bottom of camera 118
- items on front of camera 106
- items on left side of camera 104
- ports on right side of camera 118
- tilting LCD screen 117

Image Data Converter software 3, 50, 80

- using to process Raw files 50

Image Index menu item 124–125

Image size

- relationship to aspect ratio 46

Image Size (Dual Recording) menu item 50, 201

Image Size menu item 46

iMovie software 21, 182

In-Camera Guide option 111–112

Index screen of images 119–120, 125

Information display screens

- playback mode 121
- shooting mode 137–138

- selecting screens to be displayed 137–138
- Infrared photography 221
- Initial Focus Magnification menu item 95, 133–134
- Intelligent Auto Mode 23
 - settings unavailable with 23
- Interlaced video formats 182, 184
- Intervalometer
 - Vello ShutterBoss II 228
- ISO 69–71
 - basic procedure for setting 29, 69–70
 - MFNR setting 70–71
 - incompatibility with other settings 71
 - native settings 71
 - range of available settings 69
 - range of available settings for movies 71
 - setting minimum and maximum values for Auto ISO 69–70
- ISO Auto Minimum and Maximum settings 69–70
- ISO Auto Minimum Shutter Speed menu item 71–72
- ISO setting of 25600
 - availability of 39, 69, 71

J

- JPEG images 49

K

- Kelvin units of color temperature 74
- Knee 93

L

- Landscape scene type setting 35
- Language
 - selecting on Setup menu 8, 174
- Large focus frame
 - indicating focusing difficulty or non-optical zoom 65, 146
- LCD screen 116
 - ability to tilt up, down, or 180 degrees forward 116–117
 - adjusting brightness of 161–162
 - in general 116
 - setting information display screens for 137–138
 - switching between LCD screen and EVF 146–147
 - turning off with control button 157
 - using when lighting is dim 157
- Left button 116
 - assigning a function to 158
 - using to activate Drive Mode 116
- Lens
 - focal length range of 10
 - focusing distance for closeup shots 35
- Level display screen 138
 - using for panorama shooting 41
- Light Painting camera app 218
- Live View Display menu item 141–142, 229
 - forced to Setting Effect On in some shooting modes 142, 203
- Locations of still images and videos on memory card 177, 198, 205

- Locking aperture setting 148
- Locking exposure 40, 53, 103, 147–148, 155
- Lock-on AF setting for Focus Area 67–68
- Long Exposure Noise Reduction menu item 96–97
 - incompatibility with other settings 96
- LSI chip 1
 - effect on continuous shooting 52

M

- Macro scene type setting 34–35
- Manfrotto BeFree tripods 230–231
- Manual exposure mode 29–32
- Manual Exposure mode for movies 188
- Manual focus 62–64
 - focusing aids 63–64
- Manual Shift feature 31–32
- Marker Display menu item 135
- Marker Settings menu item 135–136
 - maximum zoom range at various image sizes 146
- Mechanical shutter 148–149
- Memory buffer
 - icon on display with continuous shooting 53
- Memory Card + HDMI menu item 171
- Memory cards
 - capacity for storing images and videos 6, 47
 - Eye-Fi cards 6
 - formatting in camera 7, 176
 - inserting into camera 7
 - micro-SD cards 5
 - operating camera without card 4, 147
 - SanDisk Extreme 256 GB SDXC card 6
 - SD, SDHC, and SDXC cards 5
 - Sony Memory Stick cards 5
 - inserting into camera 7
 - special requirements for XAVC S video formats 5, 180, 182
 - types of 5
- Memory menu item 42, 102
- Memory Recall menu item 101–102
- Memory Recall mode 41–42, 101–102
- Menu button 108
 - using to return enlarged image to normal size 108, 120
- Menu items
 - dimmed because of conflicting settings 45
 - preceded by icons: Stills, Movies, HFR 45–46
- Metering Mode menu item 73–74
 - incompatibility with other settings 74
- MF Assist menu item 63, 132–133
 - compared to Focus Magnifier option 95
 - not available for movies 202
 - using with DMF 62, 107, 133
- MFNR (Multi Frame Noise Reduction) setting 70–71
- Micref Level menu item 190–191
- Microphone, built-in 9
- M.M. icon for metered manual value 29–30
- Mode dial 9, 103
- Mode Dial Guide menu option 12, 22, 164

- Monitor Brightness menu item 161–162
 - lower setting when Wi-Fi in use 162
 - Motion Interval Adjustment menu item 128
 - Motion Shot+ camera app 205, 218
 - Motion Shot feature for movie playback 204–205
 - Movie button 9, 107
 - limiting operation to Movie mode 107, 160–161
 - Movie Button menu item 103, 107, 159–160, 192
 - Movie (exposure mode selection) menu item 100, 186–188
 - MOVIE option for assignment to control button 157
 - Movie position on Mode dial
 - reasons for using 191–192
 - Movies
 - adjusting playback volume 21, 163
 - recording
 - basic procedure 18–19, 201
 - functions that work from control buttons during video recording 196–197
 - time limits 181, 233
 - to external video recorder 182
 - using external audio recorder 200–201
 - MP4 format for movies 182, 184
 - Multi option for Metering Mode 73, 74
 - Multiple Exposure camera app 218
 - Multi port 10, 118
 - uses of 10, 118
 - My Best Portrait camera app 218
- N**
- ND Filter menu item 72–73
 - incompatibility with other settings 73
 - Neutral density filter 72
 - New Folder menu item 177
 - NFC area on left side of camera 11, 118
 - NFC (near field communication) protocol 215
 - using to connect camera to Android device 118, 210–211
 - Night Portrait scene type setting 36–37
 - Night Scene scene type setting 36
 - NO CARD warning message 4, 147–148
 - Noise Reduction Effect setting for MFNR 70
 - Not Set option for assignment to control button 157
 - NTSC/PAL Selector menu item 166
 - effect on Record Setting menu option 51, 166
- O**
- One-touch NFC menu item 215
 - Optical slave flash 229
 - Optical zoom 143–146
 - Overheating of camera 181, 200
 - Overlay icon
 - indicator of burst of shots in Superior Auto mode 24
- P**
- Panorama Direction menu item 40, 51
 - Panorama Size menu item 40, 51
 - Panoramas, playback 40
 - Panoramas, shooting 40–41
 - Peaking Color menu item 64, 140
 - Peaking Level menu item 64, 139–140
 - using for shot through telescope 219
 - using with DMF 140
 - using with MF Assist 133, 140
 - Pearstone 4.2-inch articulating arm 229
 - Pet scene type setting 38
 - Phase Detection Area menu item 142
 - Phase detection autofocus points 1, 142
 - Phase detection autofocus system
 - limits on compatible aperture settings 142
 - Photo Capture menu item 130, 201
 - Photo Creativity feature 13–16
 - combining multiple settings 16
 - not available with Raw format 14
 - resetting to default values 16
 - using during movie recording 196
 - Photomatix software 80
 - Photo Retouch camera app 218
 - PictBridge printer 128
 - PiCture Effect+ camera app 218
 - PiCture Effect comparison charts 85–86
 - PiCture Effect menu item 85–90
 - HDR Painting setting 89
 - High Contrast Monochrome setting 88
 - Illustration setting 90
 - incompatibility with other settings 85, 91
 - incompatibility with Raw format 85
 - Miniature Effect setting 89–90
 - Partial Color setting 88
 - adjusting range of colors recognized 88
 - Pop Color setting 86
 - Posterization setting 87
 - Retro Photo setting 87
 - Rich-tone Monochrome setting 89
 - Soft Focus setting 88
 - Soft High-key setting 87
 - Toy Camera setting 86
 - using for movies 91
 - Watercolor setting 90
 - PiCture Effect setting for Photo Creativity feature 16
 - Picture Profile menu item 91–94, 185
 - adjusting parameters for a Picture Profile 93–94
 - assigning to a control button 185
 - characteristics of 7 preset options 92
 - effect of setting on Raw images 94
 - incompatibility with other settings 94
 - using for still images 234
 - Picture Profiles comparison chart 92
 - Playback
 - movies 203–204
 - basic procedure 20–21
 - selecting still images or videos to view 203
 - still images
 - basic procedures 20, 119
 - Playback button 10, 107

- using to turn on camera 104, 107
- Playback menu 122–130
- PlayMemories Home software 3, 21, 173, 205–206, 206
- PlayMemories Mobile app 208–213
- Pole aerial photography 213–214
- Portrait scene type setting 34
- Power button 9, 104
 - indicator light 9, 104
- Power Save Start Time menu item 165
- Pre-AF menu item 61, 143
- Printing images directly to printer 128–129
- Program Auto exposure mode for Movies 186
- Program mode 24–25
- Program Shift feature 25
 - not available for movie recording 196
- Progressive video formats 182, 184
- Protect menu item 127–128

Q

- Quality (Dual Recording) menu option 50, 201
- Quality menu item 49–50
- Quick Navi system 109–110, 139

R

- Raw format
 - correcting images taken with bad camera settings 49
 - incompatibility with other settings 50
 - in general 49–50
- Raw & JPEG option for Quality setting 50
- Rear Sync flash setting 58
- Rec Control menu item 171
- Record Setting menu item 51, 182–184
 - incompatibility with other settings 183
- Recover Image Database menu item 178
- Red Eye Reduction menu item 60
- Release Without Card menu item 4, 147
- Remote Camera Control software 3, 10, 172–173
- Remote control devices
 - Sony RM-SPR1 wired remote 228
 - Sony RMT-VP1K infrared remote 227–228
 - Sony RM-VPR1 wired remote 227
 - Vello ShutterBoss II intervalometer 228
- Reset Network Settings menu item 217
- Resetting camera settings 179
- Right button
 - assigning a function to 158
 - using to activate Flash Mode menu 104, 114
- Rotate menu item 125, 126

S

- Saturation
 - adjusting 81–82
 - Picture Profile adjustment for 94
- Saturation (Picture Profile parameter) 94
- Saving frame from movie in camera 130
- Scene mode 32–39

- incompatibility with other settings 32
- methods of selecting a scene type 32–33, 100
- Scene recognition feature 23
 - requires face detection to be on to recognize faces 23
- Scene Selection menu item 32–33, 100
- Sekonic C-700 color meter 75
- Select REC Folder menu item 177
- Self-portrait Timer menu item 116, 149
- Self-timer
 - basic procedure for using 54
 - not available for movies or panoramas 54
 - using for closeup photography 54
 - using with exposure bracketing 233
- Self-timer (Continuous)
 - incompatibility with other settings 55
 - using to take multiple shots 54–55
- Self-timer During Bracket menu option 57, 233
- Send to Computer menu item 207, 214
- Send to Smartphone menu item 209, 214
 - activating with Function button 111
- Set File Name menu option 176–177
- Setting Reset menu item 179
- Setup menu 161–179
- Sharpness
 - adjusting 81–82
- Shooting menu
 - in general 44–46
 - navigating in 44–45
- Shooting menu items that affect movies and can be adjusted while recording 193
- Shooting modes
 - list of 22
- Shooting still images during movie recording 200–201
- Shutter button 9, 103
- Shutter Priority exposure mode for movies 187
- Shutter Priority mode 27–28
- Shutter speed
 - range of available settings 24, 27, 31
- Shutter Type menu option 148–149
- Single shooting setting for Drive Mode 52
- Single-shot AF setting 61
- Sky HDR camera app 218
- Slide Show menu option 125–126
 - incompatibility with other settings 125
- S-Log2 gamma curve
 - using Gamma Display Assist to aid viewing 162
- Slow-motion video
 - creating using 60p or 120p setting 183, 184
- Slow Sync flash setting 37, 58–59
- Smart Remote Control app 212
- Smart Remote Embedded app 212–213, 218
- Smart Zoom 144–146
- Smile/Face Detection menu item 97–98
- Smile Shutter menu item 98
- Smooth Reflection camera app 218
- Soft Skin Effect menu item 98
 - requirement to have Face Detection turned on 98

Software for use with RX100 V camera
 where to download 3, 205, 206, 232

Sony Clip-On LCD Monitor, CLM-FHD5 231

Sony RX100 V camera
 features of 1
 items supplied with in box 3

Speaker
 location of 11

Specify Printing menu item 128

Sports Action scene type setting 34

Spot AEL Hold option 155

Spot AEL Toggle option 155

Spot option for Metering Mode 73, 74

Spotting scope, connecting camera to 220

SSID/PW Reset menu item 217

Star Trail camera app 218

SteadyShot (Movies) menu item 100, 188–190
 cropping of video image with 189–190
 incompatibility of Active and Intelligent Active settings with 4K video format 189

SteadyShot (Still Images) menu item 100
 flashing icon as warning of slow shutter speed 138

Step-by-step guides
 connecting with NFC 210–211
 high frame rate video recording 196–198
 sending images to a computer 206–208
 sending images to a smartphone 208–210
 taking pictures in Auto mode 11–13
 using external audio recorder for movie recording 200
 using smartphone as remote control for RX100 V 211–213

Step Zoom option 104, 158–159
 not available for movies 159, 202

Stop Motion+ camera app 218

Street photography 220–221
 extracting still frames from 4K video for 221
 using tilting LCD screen for 220

Sunset scene type setting 35–36

Superior Auto mode 23–24
 difference from Intelligent Auto mode 24
 incompatibility with other settings 24

Sweep Panorama mode 39–41
 incompatibility with other settings 40

T

Tables
 behavior of RX100 IV for video recording in various modes 193
 functions of Control ring with Standard setting 106
 number of images that fit on 64 GB memory card 47
 settings on RX100 V for recording video to Shogun recorder 200
 suggested control assignments for movie recording 202
 suggested settings for Auto Mode still images 12
 suggested settings for movies in Intelligent Auto mode 19
 suggested settings for panoramas 40

TC Format menu item 168

TC Make menu item 169

TC Output menu item 171

TC Preset menu item 168

TC Run menu item 169

TC/UB Display Setting menu item 167–168

TC/UB Settings menu item 167–169

Telescope, connecting camera to 219

Television set, playing images and videos on 221–222

Tethered shooting 172–173

Tile Menu menu option 164

Time code
 in general 167
 options for displaying and recording 167–169
 procedure for resetting 228
 setting for output through HDMI port 171

Time-Lapse camera app 173, 218

Time-lapse photography 173, 233

Time zone
 selecting 175

Tripod icon on camera's display screen
 meaning of 23

Tripod socket 118

Tv notation for shutter speed 28

U

UB Preset menu item 168

UB Time Record menu item 169

Upload Settings menu item 163

USB Connection menu item 172–173
 PC Remote option for controlling camera from computer 172–173
 using MTP option for downloading camera apps 172, 218

USB LUN Setting menu item 173

USB Power Supply menu item 174

User Bit option for movie recording 168
 setting to display current time 169

V

Version menu item 179

VGA setting for Image Size 46
 available only with 4:3 aspect ratio 46, 48

Viewfinder Brightness menu item 162

VIEW icon on screen to indicate Setting Effect Off 81, 142

View Mode menu item 20, 120, 124

View on TV menu item 214–215

Vividness setting for Photo Creativity feature 16

Volume Settings menu item 163

W

WD TV Live media player 214

Wheel Lock menu item 111, 160

White balance bracketing 56
 changing order of exposures 57

White balance comparison chart 77

White Balance menu item 74–77
 adjusting setting using Raw software 77

- adjusting setting with color axes 76–77
- Wide option for Focus Area 64
- Wi-Fi menu 214–217
- Wind Noise Reduction menu item 191
- Windows Movie Maker software 21, 182
- Wireless Auto Import software 206
- WPS Push menu item 206–207, 216
- Write Date menu item 150

X

- XAVC S 4K format for movies 181–182
- XAVC S HD format for movies 182
- XAVC S video formats
 - special memory card requirements for 5, 182

Z

- Zebra menu item 131–132
 - saving custom settings 132
- Zone focusing 156
- Zoom Function on Ring menu item 104, 158–159, 202
- Zoom lever 9, 104–105
 - adjusting speed of zooming 143
 - using to display index screen 9, 104, 119
 - using to enlarge images 104, 120
- Zoom Setting menu item 104, 143–146
 - incompatibility with other settings 146–147
- Zoom Speed menu item 104, 143