

Index

Symbols

4K (UHD) motion picture recording 132
memory card speed requirement 132

A

AC adapter
Nikon model EH-67A 158
using for time-lapse photography 68

Accessory shoe
lack of for Coolpix B700 1

Active D-Lighting menu option 75–76
incompatibility with other settings 76

Adobe Camera Raw software 54, 60

Adobe Photoshop Elements software 75

Adobe Photoshop software 39, 75

Adobe Premiere Elements software 68, 137

Adobe Premiere Pro software 137

AEL (autoexposure lock)
using with motion picture recording 127
using with Time-lapse Movie setting 45

AF Area Mode menu option 13–14, 71–73
Face Priority option 71
Manual (Spot, Normal, or Wide) 14, 37, 72
Subject Tracking option 72–73
incompatibility with other settings 73
Target Finding option 73

AF Assist menu option 116

AF Assist/Red-eye Reduction/Self-timer Lamp 92
disabling 92, 116

Airplane Mode menu option 144

Aperture
procedure for setting 27
relationship to depth of field 25–26

Aperture Priority mode 25–27

Aperture values
available range of 1, 25, 27, 29

Apple Final Cut software 137

Apple iTunes, iPads, iPhones, etc.
playing movies from B700 on 163

Aspect ratio 55–56
comparison images 56
limitation on selecting with Raw+Fine or Raw+Normal 56

Assign Side Zoom Control menu option 118

Auto Flash setting 151

Autofocus frame, movable 14

Autofocus Mode menu option (movies) 134–135
using Left button to force autofocus 92, 135

Autofocus Mode menu option (still images) 73

Auto ISO setting 68
not available in Manual exposure mode 29, 70

Auto mode 22
incompatibility with other settings 22

Auto Off menu option 119
pressing button to cancel 81, 85, 86, 119

Auto with Red-eye Reduction flash setting 151

B

Backlighting/HDR setting 38–40

Battery charger
generic model for charging outside of camera 158
generic USB charger 3, 158
Nikon model number EH-73P 158

Battery, Nikon EN-EL23 3, 158
charging 3–4
using camera at same time 3, 158
using USB cable connected to computer 4, 120
inserting into camera 4
using generic replacement 158

Beach setting 36

Bird-watching setting 42–43

Blinking aperture or shutter speed value
meaning of 25

Bluetooth connection to camera 139

Bluetooth menu option 145

Blurred background
how to achieve 26–27

Bokeh 27

C

Calendar screen in playback mode 96

Cases
Crumpler 6 Million Dollar Home bag 157–158
Lowepro Inverse 100 AW backpack 157
Lowepro Rezo 110 AW 157

Charge by Computer menu option 120

Choose Key Picture menu option 107–108

Close-up filters 161

Close-up setting 37, 150

CN-160 LED lighting unit 161

Color temperature
in general 60

Command dial 86–87
switching functions of with multi selector dial 87–86, 122
using to control manual focus 87
using to enlarge and shrink images in playback mode 87

Comment and Copyright Information Screen 97
not displayed for motion pictures 97

Comments
adding to images 121

Connecting to and using SnapBridge app 139–143

Connect to Smart Device menu option 139–140, 144

Continuous menu option 64–68
 Continuous H: 60 fps 67
 Continuous H: 120 fps 67
 high-speed shooting 66
 Interval timer setting 67–68
 low-speed shooting 66
 Pre-shooting Cache setting 66
 turning off continuous shooting 66
 unavailability of some settings 65, 70
 using self-timer with 65

Continuous shooting
 advantages of using 65, 163
 in general 65
 playback of continuous shots 20, 65–66, 98–99
 changing key image for 107–108

Contrast
 adjusting 58

Copyright Information menu option 121

Creative Mode 47–49
 list of groups and settings 48
 making adjustments to parameters 47–48
 using to record motion pictures 164

Creative Mode comparison chart 49

Cropping images in camera 96

Cross Screen setting for Filter Effects 103

Custom Picture Control menu option 59–60
 using with Raw format 60

Custom white balance
 how to set 61–62

D

Date and time
 imprinting on images 114
 setting 9–10, 111

Date Stamp menu option 114
 incompatibility with other settings 115

Delete/Trash button 87–88

Deleting images 87–88
 in shooting mode 88

Digital Zoom menu option 116–118
 incompatibility with other settings 118
 limitation when using 2160/30p Movie Options setting 129
 using with motion picture recording 129

Diopter adjustment wheel 7, 85

Direction buttons
 in general 89

Display button 85

Display screens
 playback mode 86, 97–98
 shooting mode 85–86

D-Lighting menu option 101

Dusk/Dawn setting 36

Dynamic Fine Zoom feature 116

E

Easy Panorama setting 40

scrolling panorama with OK button 41
 shooting taller panoramas 164

Electronic Vibration menu option (movies) 135–136
 incompatibility with other settings 136

Enlarging images in playback mode 96

EVF Auto Toggle menu option 85, 114

EVF Options menu option 112

Exposure bracketing 70–71
 incompatibility with other settings 71
 using to create HDR images 70

Exposure compensation 90
 availability with Auto mode 22, 90
 display of histogram with 16
 incompatibility with other settings 90
 procedure for using 16–17
 using with motion picture recording 127

External flash units
 LumoPro LP180 160
 using with Coolpix B700 159–160
 Yongnuo YN560 IV 160

Eye sensor 85

F

Faces
 setting autofocus to detect 71

File numbering system
 resetting 123

Fill Flash/Standard Flash setting 152

Filter adapter
 Kiwifotos tube model 161

Filter effects adjustment for Monochrome Picture Control
 setting 59

Filter Effects menu option 102–104
 using to add second effect to image 164

Filters
 attaching to lens of Coolpix B700 161

Fireworks Show setting 38

Firmware Version menu option 124

Fisheye setting for Filter Effects 103

Flash
 diffusing 164
 general procedure for using 17–18, 151
 incompatibility with other settings 17, 71, 151

Flash Exposure Compensation menu option 74, 153
 using to reduce harshness of flash 74

Flashing parts of image in playback mode 98

Flash mode menu 18, 89, 151

Flash pop-up button 17, 83–84, 151

Flexible Program feature 23
 setting which dial controls 122

Focus
 controlling in Auto mode 22
 locking 14, 81

Focus mode
 selecting 13, 90
 with motion picture recording 126–127

- Focus mode menu 90
- Focus range of lens 150
- Food setting 37–38, 150
- Format Card menu option 119–120
 - incompatibility with other settings 120
- Frame Rate menu option 131
- Full-time autofocus option 73
- Function buttons 82–83, 85
 - cannot be used during motion picture recording 130
 - changing options assigned to 82–83
 - incompatibility with other settings 83
 - settings that can be assigned to 82
- G**
- GPS capability
 - lack of for Coolpix B700 1
- Grid
 - displaying in shooting mode 86, 113
- H**
- HDMI cable 93, 156
- HDMI port 93
- HDR (high dynamic range) photography 39
- HDR setting on Coolpix B700 163
 - how to use 38–39, 39
- Histogram
 - playback mode 86, 97–98, 114
 - not displayed for motion pictures 97
 - shooting mode 86, 113–114
 - displaying with exposure compensation button 114
 - incompatibility with other settings 113
 - relationship to Manual Exposure Preview option 80, 114
- HS (high speed) movie options 133–134
- I**
- Icon indicating assignment of command dial 87
- Icon indicating assignment of multi selector dial 88
- Icon indicating flash ready to fire 18
- Icon indicating memory card access in progress 6
- Illustrations of controls
 - back of camera 7
 - bottom of camera 8
 - front of camera 8
 - left side of camera 7, 83
 - right side of camera 8, 84, 93
 - top of camera 6, 81
- Image Comment menu option 121
- Image Quality menu option 53–54
- Image Review menu option 20, 95, 112
- Image sharpening
 - adjusting 58
- Image Size menu option 55–56
 - relationship to zoom range 117
- Image stabilization 115–116
- iMovie software 21, 68, 137
- Index screens in playback mode 95–96
- Infinity focus mode 13, 90
- Infrared filter
 - Hoya R72 154
- Infrared photography 153–154
- Interval timer setting 67–68
 - location of images 67
- ISO setting 68–70
 - Auto setting 68
 - Fixed Range Auto setting 68
 - incompatibility with other settings 70
 - Minimum Shutter Speed setting 70
 - negative effects of very high setting 68
 - procedure for making setting 68
 - using to enable use of fast shutter speed 148
 - using with Manual exposure mode 70
 - value to choose 68
- J**
- JPEG files 53
- K**
- Kelvins
 - as used to measure color temperature 60
- Key icon for protected images 106
- L**
- Landscape menu option 30–31
- Landscape mode 30
- Language
 - setting 10, 120
- LCD screen
 - adjusting brightness and color of 112
 - characteristics of 1
 - switching view by folding in against camera 11, 85
 - switching view to and from 85, 114
 - tilting and swiveling features of 93–94
- Lens cap
 - attaching to camera 3
- Location Data menu option 122
- Locking exposure 81
 - when recording motion pictures 90
- Locking focus 81
- M**
- Macro autofocus setting 149–150
- Macro photography 149–150
- Manual exposure mode 27–28
 - incompatibility with other settings 29
 - procedure for making settings 27–28
 - using to create HDR images 27, 40
- Manual Exposure Preview menu option 79–80, 114
- Manual focus
 - adjusting magnification with 15, 92
 - general use of 15–16
 - reasons for using 15

- using autofocus with 16, 90, 164
- using for macro photography 150
- using Left button to toggle enlargement factor 15
- using Peaking with 16
- using with motion picture recording 127
- Mark for Upload menu option 100
- Memory card
 - formatting 119–120
 - inserting into camera 6
 - number of images that can be stored 5
 - types and capacities of 5
- Menu button 87
 - using to crop image in playback mode 96
- Menu system
 - in general 51
 - items that cannot be selected 52–53
 - making selections in 52
 - names of menus 52, 87
 - navigating in 52
- Metering menu option 63–64
 - incompatibility with Active D-Lighting setting 64
 - using with motion picture recording 128
- micro-SD card
 - using in Coolpix B700 5
- Miniature setting for Filter Effects 103
- Minimum Shutter Speed menu option 70
- Mode dial 82
- Monitor button 85
 - using to switch between LCD and viewfinder 85
- Monitor Options menu option 112
- Monitor Settings menu option 86, 112–114
- Monochrome Picture Control setting 58
 - adjustments to 59
- Moon setting 42
- Motion picture recording
 - effects of shooting mode on 126
 - exposure control 127
 - autoexposure lock 127
 - exposure compensation 127
 - focus options 126–127
 - general procedure for 18–20
 - limitations on length of recording 131
 - overview 125
 - pausing with OK button 130
 - quick guide 125–126
 - slow-motion options 132, 133
 - speeded-up motion option 134
 - still photo settings available 126–129
 - still photo settings not available 130
 - taking still images during recording 129
- Motion pictures
 - editing in camera 137–138
 - not available when battery charge is low 137
 - editing with computer 20, 137
 - playback 20–21, 136–137
 - saving single frame from 129, 138
- Movie button 86

- Movie Maker software for Windows 137
- Movie menu 130–136
- Movie Options menu option 132–134, 164
- Multiple Exposure Lighten setting 44–45
- Multiple Exposure menu option 76–77
- Multi selector dial 88
 - switching functions with command dial 88, 122

N

- Neck strap
 - attaching to camera 3
- Network menu
 - in general 143–144
- Neutral density filter 164
- Neutral Picture Control setting 57
- NFC active area on camera 93
- NFC (near field communication) protocol 93
- Night Landscape menu option 32–33
- Night Landscape mode 32
- Night Portrait mode 31
- Nightscape+Light Trails option for Multiple Exposure Lighten setting 44
- Nikon Capture NX-D software 60
 - using to process Raw files 54
 - where to download 3
- Nikon Coolpix B700 camera
 - advantages of 1
 - drawbacks of 1
 - items that come in box 3
 - new features of 1
- Nikon Movie Editor software 21
- Nikon Reference Manual for Coolpix B700
 - where to download 3
- Nikon ViewNX-i software
 - where to download 3
- No card present error message 4, 111
- Noise Reduction Filter menu option 75
- Noise Reduction Burst setting 31, 37
- NTSC video system 131

O

- Off-center subject
 - setting focus for 14
- OK button 88–89

P

- Painting setting for Filter Effects 104
- PAL video system 131
- Panoramas
 - shooting 40–41
- Party/Indoor setting 35
- Peaking feature for manual focus 16, 123
 - not available with motion picture recording 127
- Pet Portrait Auto Release feature 41, 92
- Pet Portrait setting 41
- PhotoAcute software 39

- PhotoFlex Lite-Dome XS softbox 160
 - Photo Illustration setting for Filter Effects 104
 - PhotoMatix Pro software 39, 40
 - PictBridge printer 108
 - Picture Control menu option 56–60
 - adjustments to settings 58–59
 - A setting for Automatic adjustment 58
 - incompatibility with other settings 58
 - using with motion picture recording 128
 - Playback button 20, 85
 - using to turn on camera 85
 - Playback menu 100–108
 - Playback of images and videos
 - continuous burst of shots 20, 98–99
 - enlarging image 96
 - general procedures 20–21, 95
 - motion pictures 20–21, 136–137
 - Pole attachment for pole aerial photography 162
 - Portrait (Color+B&W) setting for Filter Effects 104–105
 - Portrait setting 34–35
 - Power switch 81
 - Printing images 108–109
 - Print menu 109
 - Program mode 23
 - Program Shift. See Flexible Program feature
 - Protect menu option 105–106
- Q**
- Quick adjust option for Picture Control 58
 - Quick Retouch menu option 100–101
- R**
- Raw+Fine setting 54
 - Raw format 53–54
 - ability to change settings in post-processing 53–54
 - availability with Auto mode 22
 - disadvantages of 54
 - incompatibility with other settings
 - Alex White
 - White Knight Press 54
 - using with Picture Control settings 60
 - Raw+Normal setting 54
 - Rear-curtain Sync flash setting 152–153
 - Reset All menu option 53, 123
 - Reset File Numbering menu option 123
 - Reset User Settings menu option 78
 - Resolution of images 55
 - Restore Default Settings option on Network menu 145
 - Rotate Image menu option 106
- S**
- Saturation
 - adjusting 58
 - Save User Settings menu option 77
 - Scene Auto Selector 34
 - Scene modes
 - incompatibility with other settings 30
 - in general 30, 33
 - SCENE setting on mode dial 33
 - list of available scene types 30
 - Sekonic C-700 color meter 62
 - Selective Color setting 44
 - Selective Color setting for Filter Effects 102
 - Self-timer 91
 - using to avoid camera shake 91, 164
 - using with continuous shooting options 91
 - using with motion picture recording 91, 128
 - Send While Shooting menu option 143, 144
 - Sensor
 - characteristics of 1
 - Sequence Display Options menu option 100–99, 107
 - Setup menu
 - in general 110
 - Sharpness. See Image sharpening
 - Shooting menu
 - in general 51
 - Shooting modes
 - names of 12, 22
 - Shutter Priority mode 23–24
 - Shutter release button 81–82
 - operating with no memory card in camera 111
 - Shutter speed
 - procedure for setting 24–25, 28
 - range of available settings 24, 29, 65
 - limitations when using Continuous menu option 65
 - Shutter Speed Equivalent 25
 - Side zoom control 84, 118
 - assigning to manual focus 84, 118
 - using for telephoto shots 84, 118, 149
 - Single autofocus option 73
 - Skin Softening menu option 101–102
 - Slide Show menu option 105
 - Slot Empty Release Lock menu item 5, 111
 - Slow Sync flash setting 152
 - Small Picture menu option 106–107
 - Smile Timer 91–92
 - incompatibility with other settings 91
 - Snap-back zoom button 84
 - using for telephoto shots 84, 149
 - SnapBridge app 139
 - connecting to camera and using features of 139–143
 - setting for automatic download of images 141
 - summary of options for transferring images and videos 143
 - using to control remotely 142–143
 - using to download images and videos from camera 142–143
 - Snow setting 36
 - Soft Portrait setting for Filter Effects 102
 - Soft setting 43
 - Sound Settings menu option 118–119
 - Sports setting 35
 - Standard Picture Control setting 57
 - Star Trails option for Multiple Exposure Lighten setting 45

Startup Zoom Position menu option 79

Step-by-step guides

- basic picture-taking 11–12
- connecting to and using SnapBridge app 139–143
- motion picture recording 18–20
- quick guide to motion picture recording 125–126

Still images

- taking during motion picture recording 129

Street photography 154–156

Subject Tracking autofocus option 72–73

Sunset setting 36

Superlapse Movie setting 46–47

Sync with Smart Device menu option 111

T

Tables

- fractional shutter speed equivalents 25
- limits on shutter speed settings 24

Target Finding autofocus option 73

Television set

- connecting camera to 156

Time-lapse Movie setting 45–46, 68

- compared to interval timer setting 68

Time-lapse photography 45–46, 67–68

Time zone

- changing for travel 111
- setting 111

Time Zone and Date menu option 9, 110–111

Toggle Av/Tv Selection menu option 24, 122

Tone levels in image, checking 98

Toning adjustment for Monochrome Picture Control setting 59

Tripods

- Manfrotto BeFree 162

U

USB port 93

- using to connect camera to printer 108

User Settings mode 49–50, 163

- using to save specific settings 149

V

Vibration Reduction menu option 115

- using with motion picture recording 128

Viewfinder

- adjusting brightness and color of 112
- adjusting for user's vision 7, 85
- switching view by folding LCD screen in against camera 7, 85, 94
- switching view to and from 114

View/Hide Framing Grid menu option 113

View/Hide Histograms menu option 80, 113–114

Vignette setting for Filter Effects 104

Vivid Picture Control setting 57

W

White balance comparison chart 62–63

White Balance menu option 60–63

- Choose Color Temperature setting 62
- making adjustments to preset settings 61
- Preset Manual setting
 - using to alter coloring of images or videos 62, 128
 - using to set custom white balance 61–62
 - using with motion picture recording 128

Wi-Fi menu option 144–145

Wind Noise Reduction menu option 136

Z

Zone focusing 164

Zoom lens

- flattening of subjects into single plane 146
- haze effect from compression of atmosphere 146
- isolating subject through telephoto shot 147
- rule of thumb for choosing shutter speed for telephoto shots 148
- shallow depth of field at telephoto settings 147
- using telephoto power of 145–149
- ways to avoid image blur at telephoto settings 148–149

Zoom lever 82

Zoom Memory menu option 78–79

- not applicable to side zoom control 79

Zoom Microphone menu option 136

Zoom range 116–118, 145

- relationship to Image Size setting 117

Zoom scale

- meaning of white, blue, and yellow bars 117–118