

Contents

INTRODUCTION	1
--------------	---

CHAPTER 1: PRELIMINARY SETUP	3
------------------------------	---

Setting Up the Camera	3
Charging and Inserting the Battery	3
Inserting the Memory Card	4
Introduction to Main Controls	6
Top of Camera	6
Back of Camera	7
Front and Sides of Camera	7
Bottom of Camera	8
Setting the Date, Time, and Language	9

CHAPTER 2: BASIC OPERATIONS	11
-----------------------------	----

Fully Automatic—Auto Mode	11
Basic Variations from Fully Automatic	12
Focus	13
Manual Focus	15
Exposure	16
Exposure Compensation	16
Flash	17
Movie Recording	18
Viewing Pictures and Movies	20
Review While in Shooting Mode	20
Reviewing Images in Playback Mode	20
Playing Movies	20

CHAPTER 3: THE SHOOTING MODES	22
-------------------------------	----

Auto Mode	22
Program Mode	23
Shutter Priority Mode	23
Aperture Priority Mode	25

Manual Exposure Mode 27

Scene Modes. 30

 Landscape. 30

 Night Portrait 31

 Night Landscape 32

 The SCENE Setting on the Mode Dial 33

 Scene Auto Selector 34

 Portrait 34

 Sports 35

 Party/Indoor 35

 Beach 36

 Snow 36

 Sunset 36

 Dusk/Dawn 36

 Close-up. 37

 Food. 37

 Fireworks Show 38

 Backlighting/HDR. 38

 Easy Panorama 40

 Pet Portrait 41

 Moon 42

 Bird-watching. 42

 Soft 43

 Selective Color 44

 Multiple Exposure Lighten 44

 Time-lapse Movie. 45

 Superlapse Movie. 46

Creative Mode 47

User Settings Mode 49

CHAPTER 4: THE SHOOTING MENU 51

Image Quality 53

Image Size 55

Picture Control. 56

 Standard 57

 Neutral 57

 Vivid 57

 Monochrome 58

 Adjustments to Picture Control Settings 58

 Custom Picture Control. 59

White Balance 60

Metering 63

Continuous shooting 64

ISO Sensitivity 68

 Minimum Shutter Speed 70

Exposure Bracketing. 70

AF Area Mode 71

 Face Priority 71

 Manual (Spot, Normal or Wide). 72

 Subject Tracking 72

 Target Finding AF. 73

Autofocus Mode. 73

Flash Exposure Compensation 74

Noise Reduction Filter. 75

Active D-Lighting 75

Multiple Exposure 76

Save User Settings	77
Reset User Settings	78
Zoom Memory and Startup Zoom Position	78
Manual Exposure Preview	79

CHAPTER 5: PHYSICAL CONTROLS 81

Power Switch	81
Shutter Release Button	81
Mode Dial	82
Zoom Lever	82
Function Button 1 (Fn1)	82
Flash Pop-up Button	83
Side Zoom Control	84
Snap-back Zoom Button	84
Fn2 Button	85
Playback Button	85
Diopter Adjustment Dial	85
Monitor Button and Eye Sensor	85
Display Button	85
Movie Button	86
Command Dial	86
Menu Button	87
Delete/Trash Button	87
Multi Selector and its Buttons and Dial	88
Multi Selector Dial	88
OK Button	88
Direction Buttons	89
Up Button: Flash Settings	89
Right Button: Exposure Compensation	90
Down Button: Focus Mode	90
Left Button: Self-timer; Smile Timer; Pet Portrait Release	91
AF Assist/Red-eye Reduction/Self-timer Lamp	92
Ports on Right Side of Camera	93
Tilting and Swiveling LCD Screen	93

CHAPTER 6: PLAYBACK 95

Normal Playback	95
Index Views, Calendar View, and Enlarging Images	95
Various Playback Screens	97
Viewing Shots Taken in a Sequence	98
The Playback Menu	100
Mark for Upload	100
Quick Retouch	100
D-Lighting	101
Skin Softening	101
Filter Effects	102
Slide Show	105
Protect	105
Rotate Image	106
Small Picture	106
Sequence Display Options	107
Choose Key Picture	107
Printing Images	108
Printing Directly from the Camera	108

CHAPTER 7: THE SETUP MENU 110

Time Zone and Date	110
Slot Empty Release Lock.	111
Monitor Settings.	112
Image Review	112
Monitor Options	112
EVF Options	112
View/Hide Framing Grid	113
View/Hide Histograms	113
EVF Auto Toggle	114
Date Stamp	114
Vibration Reduction	115
AF Assist	116
Digital Zoom	116
Assign Side Zoom Control.	118
Sound Settings.	118
Auto Off	119
Format Card	119
Language	120
Charge by Computer	120
Image Comment.	121
Copyright Information.	121
Location Data	122
Toggle Av/Tv Selection	122
Reset File Numbering	123
Peaking.	123
Reset All	123
Firmware Version	124

CHAPTER 8: MOTION PICTURES 125

Movie-making Overview	125
Quick Guide to Recording a Movie Clip	125
Other Settings for Movies	126
Still Photo Settings Available for Movies.	126
Focus Mode	126
Exposure, Exposure Compensation, and Exposure Lock.	127
Self-timer.	128
Picture Control.	128
White Balance	128
Metering	128
Vibration Reduction	128
Zoom	129
Taking Still Images During Movie Recording	129
Pausing Recording with the OK Button	130
Fn Buttons: Do Not Operate During Video Recording	130
Settings That Are Not Adjustable for Video Recording	130
The Movie Menu.	130
Frame Rate	131
Movie Options	132
HS (High Speed) Movie Options	133
Autofocus Mode	134
Electronic VR (Vibration Reduction)	135
Wind Noise Reduction	136
Zoom Microphone	136
Frame Rate	136

Movie Playback and Editing	136
Playback.	136
Editing.	137

CHAPTER 9: SNAPBRIDGE APP, SUPERZOOM LENS, AND OTHER TOPICS 139

SnapBridge App	139
Initial Connection and General Overview	139
Summary of Options for Transferring Images and Movies to a Smart Device Wirelessly	143
The Network Menu	143
Airplane Mode	144
Connect to Smart Device.	144
Send While Shooting	144
Wi-Fi	144
Bluetooth	145
Restore Default Settings	145
Using the Superzoom Lens	145
Macro (Close-up) Photography	149
Using Flash.	151
Infrared Photography	153
Street Photography	154
Connecting to a Television Set	156

APPENDIX A: ACCESSORIES 157

Cases	157
Batteries and Chargers	158
External Flash	159
Filters and Filter Adapters	161
Pole for Extended-reach Shots	162
Tripods	162

APPENDIX B: QUICK TIPS 163

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 165

Photography Books	165
Digital Photography Review	165
Reviews of the Coolpix B700	165
The Official Nikon Site	165
Photography Information	165