

# Contents

|  |    |
|--|----|
| INTRODUCTION   | 1  |
| CHAPTER 1: PRELIMINARY SETUP                             | 3  |
| Charging and Inserting the Battery . . . . .             | 3  |
| Choosing and Inserting a Memory Card . . . . .           | 4  |
| Setting the Language, Date, and Time . . . . .           | 7  |
| CHAPTER 2: BASIC OPERATIONS                              | 9  |
| Introduction to Main Controls . . . . .                  | 9  |
| Top of Camera . . . . .                                  | 9  |
| Back of Camera . . . . .                                 | 9  |
| Front of Camera . . . . .                                | 10 |
| Right Side of Camera . . . . .                           | 10 |
| Left Side of Camera . . . . .                            | 10 |
| Bottom of Camera . . . . .                               | 11 |
| Taking Pictures in Auto Mode . . . . .                   | 11 |
| Variations from Fully Automatic . . . . .                | 13 |
| Photo Creativity Feature . . . . .                       | 13 |
| Flash . . . . .  | 16 |
| Drive Mode: Self-Timer and Continuous Shooting . . . . . | 17 |
| Overview of Movie Recording . . . . .                    | 17 |
| Viewing Pictures . . . . .                               | 19 |
| Reviewing While in Shooting Mode . . . . .               | 19 |
| Reviewing Images in Playback Mode . . . . .              | 19 |
| Playing Movies . . . . .                                 | 19 |
| CHAPTER 3: SHOOTING MODES                                | 21 |
| Intelligent Auto Mode . . . . .                          | 21 |
| Superior Auto Mode . . . . .                             | 22 |
| Program Mode . . . . .                                   | 23 |
| Aperture Priority Mode . . . . .                         | 24 |
| Shutter Priority Mode . . . . .                          | 26 |

|                                    |    |
|------------------------------------|----|
| Manual Exposure Mode . . . . .     | 27 |
| Scene Mode . . . . .               | 30 |
| Portrait . . . . .                 | 32 |
| Advanced Sports Shooting . . . . . | 32 |
| Landscape . . . . .                | 33 |
| Sunset . . . . .                   | 33 |
| Night Scene . . . . .              | 33 |
| Hand-Held Twilight . . . . .       | 34 |
| Night Portrait . . . . .           | 34 |
| Anti Motion Blur . . . . .         | 34 |
| Pet . . . . .                      | 35 |
| Gourmet . . . . .                  | 35 |
| Beach . . . . .                    | 35 |
| Snow . . . . .                     | 36 |
| Fireworks . . . . .                | 36 |
| Soft Skin . . . . .                | 36 |
| High Sensitivity . . . . .         | 36 |
| iSweep Panorama Mode . . . . .     | 37 |
| Memory Recall Mode . . . . .       | 39 |

## CHAPTER 4: SHOOTING MENU

41

|   |    |
|---|----|
| Image Size . . . . .  | 43 |
| Aspect Ratio . . . . .  | 45 |
| Quality . . . . .   | 46 |
| Panorama Size and Panorama Direction . . . . .                | 46 |
| File Format . . . . .   | 47 |
| Record Setting . . . . .                                      | 47 |
| Drive Mode . . . . .  | 47 |
| Single Shooting . . . . .                                     | 48 |
| Continuous Shooting . . . . .                                 | 48 |
| Self-Timer . . . . .  | 49 |
| Self-Timer (Continuous) . . . . .                             | 49 |
| Continuous Exposure Bracketing . . . . .                      | 49 |
| Single Exposure Bracketing . . . . .                          | 50 |
| White Balance Bracketing . . . . .                            | 50 |
| DRO Bracketing . . . . .                                      | 51 |
| Bracket Settings . . . . .                                    | 51 |
| Flash Mode . . . . .  | 52 |
| Flash Off . . . . .   | 52 |
| Autoflash . . . . .   | 52 |
| Fill-Flash . . . . .  | 52 |
| Slow Sync . . . . .   | 53 |
| Rear Sync . . . . .   | 53 |
| Flash Compensation . . . . .                                  | 54 |
| Red Eye Reduction . . . . .                                   | 55 |
| Focus Mode (Available as Menu Option on HX90V Only) . . . . . | 55 |
| Single-Shot AF . . . . .                                      | 55 |
| Continuous AF . . . . .                                       | 56 |
| DMF (HX90V Only) . . . . .                                    | 57 |
| Manual Focus (HX90V Only) . . . . .                           | 57 |
| Focus Area . . . . .  | 59 |
| Wide . . . . .  | 59 |
| Center . . . . .  | 59 |
| Flexible Spot . . . . .                                       | 60 |
| Expand Flexible Spot . . . . .                                | 61 |
| AF Illuminator . . . . .                                      | 61 |

- Exposure Compensation . . . . . 61
- ISO . . . . . 62
  - Multi Frame Noise Reduction . . . . . 63
- Metering Mode . . . . . 64
- White Balance . . . . . 65
- DRO/Auto HDR . . . . . 68
- Creative Style . . . . . 71
  - Adjusting Contrast, Saturation, and Sharpness . . . . . 71
    - Standard . . . . . 72
    - Vivid . . . . . 72
    - Portrait . . . . . 72
    - Landscape. . . . . 73
    - Sunset. . . . . 73
    - B/W . . . . . 73
    - Sepia. . . . . 73
- Picture Effect. . . . . 73
  - Off . . . . . 74
  - Toy Camera . . . . . 74
  - Pop Color . . . . . 75
  - Retro Photo . . . . . 76
  - Soft High-Key . . . . . 76
  - Partial Color . . . . . 76
  - High Contrast Monochrome . . . . . 77
  - Soft Focus . . . . . 77
  - HDR Painting . . . . . 77
  - Rich-Tone Monochrome . . . . . 78
  - Miniature Effect. . . . . 78
  - Watercolor . . . . . 79
  - Illustration. . . . . 79
- Focus Magnifier (HX90V only). . . . . 79
- High ISO Noise Reduction. . . . . 81
- Center Lock-on AF. . . . . 81
- Smile/Face Detection . . . . . 81
  - Face Detection On (Registered Faces) . . . . . 81
  - Face Detection On . . . . . 82
  - Smile Shutter . . . . . 82
- Soft Skin Effect. . . . . 83
- Auto Object Framing . . . . . 83
- Scene Selection . . . . . 84
- Movie. . . . . 84
- SteadyShot (Movies). . . . . 84
- Auto Slow Shutter, Micref Level, and Wind Noise Reduction . . . . . 84
- Shooting Tip List. . . . . 85
- Memory Recall . . . . . 85
- Memory . . . . . 85

## CHAPTER 5: PHYSICAL CONTROLS

- Mode Dial . . . . . 87
- Shutter Release Button . . . . . 87
- Zoom Lever . . . . . 87
- Power Button . . . . . 88
- Built-in Flash and Flash Pop-up Switch . . . . . 88
- Electronic Viewfinder . . . . . 88
- AF Illuminator/Self-Timer Lamp. . . . . 89
- Control Ring (HX90V Only) . . . . . 90
- Playback Button . . . . . 91

|   |     |
|---|-----|
| Movie Button . . . . .  | 91  |
| Menu Button . . . . .   | 91  |
| Function Button . . . . .                                     | 92  |
| Shooting Mode: Function Menu . . . . .                        | 92  |
| Quick Navi System . . . . .                                   | 93  |
| Playback Mode: Send to Smartphone . . . . .                   | 94  |
| In-Camera Guide/Delete Button . . . . .                       | 94  |
| Control Wheel and Its Buttons . . . . .                       | 96  |
| Control Wheel. . . . .  | 96  |
| Center Button. . . . .  | 97  |
| Direction Buttons. . . . .                                    | 97  |
| Up Button: Display. . . . .                                   | 97  |
| Right Button: Flash Mode . . . . .                            | 97  |
| Down Button: Photo Creativity/Exposure Compensation . . . . . | 98  |
| Exposure Compensation . . . . .                               | 98  |
| Left Button: Self-Timer/Drive Mode . . . . .                  | 100 |
| Tilting LCD Screen . . . . .                                  | 100 |
| Ports and Other Items on Sides and Bottom of Camera . . . . . | 101 |

## CHAPTER 6: PLAYBACK AND PRINTING

103

|  |     |
|--|-----|
| Normal Playback. . . . .                         | 103 |
| Index View and Enlarging Images. . . . .         | 103 |
| Playback Screens. . . . .                        | 105 |
| Deleting Images with the Delete Button . . . . . | 106 |
| Playback Menu. . . . .                           | 106 |
| Delete . . . . .                                 | 107 |
| View Mode . . . . .                              | 108 |
| Image Index. . . . .                             | 108 |
| Display Rotation . . . . .                       | 109 |
| Slide Show . . . . .                             | 109 |
| Rotate . . . . .                                 | 110 |
| Enlarge Image. . . . .                           | 111 |
| 4K Still Image Playback . . . . .                | 111 |
| Protect. . . . .                                 | 111 |
| Motion Interval Adjustment . . . . .             | 111 |
| Specify Printing . . . . .                       | 112 |
| Beauty Effect . . . . .                          | 113 |

## CHAPTER 7: CUSTOM AND SETUP MENUS

114

|  |     |
|--|-----|
| Custom Menu . . . . .                          | 114 |
| Zebra . . . . .                                | 114 |
| MF Assist (HX90V Only). . . . .                | 115 |
| Focus Magnification Time (HX90V Only). . . . . | 115 |
| Grid Line. . . . .                             | 116 |
| Rule of Thirds Grid . . . . .                  | 116 |
| Square Grid . . . . .                          | 116 |
| Diagonal Plus Square Grid. . . . .             | 117 |
| Marker Display . . . . .                       | 117 |
| Marker Settings . . . . .                      | 117 |
| Auto Review. . . . .                           | 118 |
| Display Button . . . . .                       | 119 |
| Peaking Level (HX90V Only) . . . . .           | 121 |
| Peaking Color (HX90V Only) . . . . .           | 122 |
| Exposure Settings Guide . . . . .              | 122 |
| Zoom Speed . . . . .                           | 122 |

|   |     |
|---|-----|
| Zoom Setting . . . . .  | 123 |
| Finder/Monitor . . . . .  | 126 |
| Release without Card . . . . .  | 126 |
| Self-portrait Timer . . . . .   | 127 |
| Face Registration . . . . .   | 127 |
| Write Date. . . . .   | 128 |
| Function Menu Settings . . . . .  | 128 |
| Custom Key Settings . . . . .   | 129 |
| Control Ring (HX90V Only) . . . . .   | 130 |
| Center Button . . . . .   | 131 |
| Standard. . . . .   | 132 |
| MOVIE . . . . .   | 132 |
| Download Application . . . . .  | 132 |
| Not Set . . . . .   | 132 |
| Left Button . . . . .   | 133 |
| Right Button . . . . .  | 133 |
| Down Button. . . . .  | 133 |
| In-Camera Guide Button. . . . .   | 133 |
| Zoom Function on Ring (HX90V Only). . . . .                                   | 133 |
| Movie Button . . . . .  | 134 |
| Setup Menu . . . . .  | 134 |
| Monitor Brightness . . . . .  | 135 |
| Viewfinder Brightness . . . . .   | 135 |
| Finder Color Temperature . . . . .  | 135 |
| Volume Settings . . . . .   | 135 |
| Audio Signals . . . . .   | 136 |
| GPS Settings (HX90V Only). . . . .  | 136 |
| GPS On/Off. . . . .   | 136 |
| GPS Auto Time Correction. . . . .   | 137 |
| GPS Area Adjustment . . . . .   | 137 |
| Use GPS Assist Data . . . . .   | 137 |
| GPS Log Recording . . . . .   | 137 |
| Upload Settings. . . . .  | 138 |
| Tile Menu . . . . .   | 138 |
| Mode Dial Guide . . . . .   | 139 |
| Delete Confirmation . . . . .   | 139 |
| Display Quality . . . . .   | 140 |
| Power Save Start Time . . . . .   | 140 |
| NTSC/PAL Selector (Cameras Sold in Europe and Other PAL Areas Only) . . . . . | 140 |
| Function for VF Close . . . . .   | 141 |
| Demo Mode. . . . .  | 141 |
| HDMI Settings. . . . .  | 141 |
| HDMI Resolution. . . . .  | 142 |
| 24p/60p Output . . . . .  | 142 |
| HDMI Information Display. . . . .   | 142 |
| CTRL for HDMI . . . . .   | 143 |
| USB Connection . . . . .  | 143 |
| USB LUN Setting . . . . .   | 143 |
| USB Power Supply . . . . .  | 144 |
| Language . . . . .  | 144 |
| Date/Time Setup . . . . .   | 144 |
| Area Setting. . . . .   | 145 |
| Format. . . . .   | 145 |
| File Number. . . . .  | 146 |
| Select REC Folder . . . . .   | 146 |
| New Folder . . . . .  | 146 |
| Folder Name . . . . .   | 147 |

|                                     |     |
|-------------------------------------|-----|
| Recover Image Database . . . . .    | 147 |
| Display Media Information . . . . . | 147 |
| Version . . . . .                   | 148 |
| Setting Reset . . . . .             | 148 |

## CHAPTER 8: MOTION PICTURES

150

|   |     |
|---|-----|
| Movie-Making Overview . . . . .                                       | 150 |
| Details of Movie Settings . . . . .                                   | 150 |
| Movie-Related Shooting Menu Options . . . . .                         | 151 |
| File Format . . . . .   | 151 |
| XAVC S HD. . . . .  | 151 |
| AVCHD. . . . .  | 151 |
| MP4 . . . . .   | 151 |
| Record Setting . . . . .  | 151 |
| XAVC S HD. . . . .  | 152 |
| AVCHD. . . . .  | 152 |
| 60i and 60p Video Formats . . . . .                                   | 152 |
| 24p Video Formats. . . . .  | 153 |
| MP4 . . . . .   | 153 |
| Movie (Exposure Mode) . . . . .                                       | 153 |
| Program Auto . . . . .  | 154 |
| Aperture Priority . . . . .   | 154 |
| Shutter Priority. . . . .   | 155 |
| Manual Exposure . . . . .   | 155 |
| SteadyShot (Movies) . . . . .   | 156 |
| Auto Slow Shutter . . . . .   | 157 |
| Micref Level . . . . .  | 158 |
| Wind Noise Reduction . . . . .  | 158 |
| Effects of Mode Dial Position on Recording Movies . . . . .           | 158 |
| Effects of Other Shooting Menu Settings on Recording Movies . . . . . | 160 |
| Effects of Physical Controls When Recording Movies . . . . .          | 161 |
| Summary of Options for Recording Movies . . . . .                     | 163 |
| Other Settings and Controls for Movies . . . . .                      | 164 |
| Movie Playback . . . . .  | 164 |
| Motion Shot Feature . . . . .   | 165 |
| Editing Movies . . . . .  | 166 |

## CHAPTER 9: WI-FI, APPLICATIONS, AND OTHER TOPICS

168

|  |     |
|--|-----|
| Connections Using Wi-Fi and NFC . . . . .                  | 168 |
| Sending Images to a Computer . . . . .                     | 168 |
| Sending Images to a Smartphone . . . . .                   | 170 |
| Connecting with NFC. . . . .                               | 172 |
| Using a Smartphone or Tablet as a Remote Control . . . . . | 173 |
| Wi-Fi Menu . . . . .                                       | 176 |
| Send to Smartphone . . . . .                               | 176 |
| Send to Computer . . . . .                                 | 176 |
| View on TV . . . . .                                       | 177 |
| One-touch (NFC) . . . . .                                  | 177 |
| Airplane Mode . . . . .                                    | 178 |
| WPS Push . . . . .   | 178 |
| Access Point Settings. . . . .                             | 178 |
| Edit Device Name. . . . .                                  | 179 |
| Display MAC Address. . . . .                               | 179 |
| SSID/PW Reset . . . . .                                    | 179 |
| Reset Network Settings. . . . .                            | 179 |

Applications and Application Menu . . . . . 180

Other Topics . . . . . 181

    Using the Superzoom Lens. . . . . 181

    Macro Photography . . . . . 184

    Street Photography. . . . . 185

    Connecting to a Television Set. . . . . 186

APPENDIX A: ACCESSORIES 187

Cases . . . . . 187

Batteries and Chargers . . . . . 188

Remote Controls. . . . . 189

External Flash and LED Light . . . . . 191

External Video Recorder. . . . . 192

External Audio Recorder. . . . . 192

Tripods . . . . . 193

APPENDIX B: QUICK TIPS 194

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 196

Books. . . . . 196

Websites and Videos. . . . . 196

    Digital Photography Review . . . . . 196

    Reviews of the HX80 and HX90V. . . . . 196

    The Official Sony Site . . . . . 197

    Other Resources . . . . . 197

**Index 198**