

# Index

## Symbols

- 1-Area setting for AF Mode 64
- 4K Burst setting for 4K Photo option 104
- 4K Burst (S/S) setting for 4K Photo option 104
  - recording of audio with 105
- 4K Live Cropping option on Motion Picture menu 169–170
- 4K Photo Bulk Saving menu option 129–130
- 4K Photo option for drive mode 67, 103–106
  - advantages of 103
  - extracting a still image from 4K burst 105–106
  - requirement of high-speed memory card 104
  - using autofocus with 105
- 4K Pre-burst setting for 4K Photo option 105
- 4K video recording 172–173
  - requirement of high-speed memory card for 173
- 5-Axis Hybrid Image Stabilizing Function
  - automatically used for video recording 175
- 24 fps video formats 172
- 30 fps video formats 172
- 49-Area setting for AF Mode 61–62
- 60 fps video formats 172

## A

- AC adapter
  - Panasonic model no. DMW-AC10 194
- Adobe Bridge software
  - viewing location data with 127
- Adobe Camera Raw software 58
- Adobe Lightroom software
  - using with location data 127
- Adobe Photoshop Elements software 58
- Adobe Photoshop software 40, 58
  - using for HDR photography 68, 75
- Adobe Premiere Elements software 18
- Adobe Premiere Pro software 171
- AF/AE Lock Hold menu option 141
  - Incompatibility with other settings 141
- AF/AE Lock menu option
  - inability to lock exposure in Manual exposure mode 141
- AF/AE Lock option for function button 114, 140–141
  - incompatibility with other settings 114, 141
- AF Assist Lamp menu option 121, 143
- AF assist/self-timer lamp 121
  - disabling operation of 121, 143
- AF Macro option for focus mode 99, 191
- AF+MF menu option 144

- AF Mode menu option 60–65
- AF Mode option on Motion Picture menu 173
- AF-On menu option 141
- AF-On option for function button 141
- AFS/AFF/AFC menu option 65–66
  - incompatibility with other settings 66
- AFS/AFF/AFC option on Motion Picture menu 173–174
- AF Tracking setting for AF Mode 61
  - incompatibility with other settings 61
- Anker 40-watt desktop USB charger 194
- Aperture
  - range of available settings
    - dependent on zoom level of lens 27
  - relationship to depth of field 26
- Aperture bracketing 69–70
  - incompatibility with other settings 70
- Aperture Priority mode 26–28
- Aperture Priority mode (movies) 167
- Aperture ring 120–121
  - disagreement of ring setting with actual setting 27, 120
  - setting intermediate f-stop values 120
  - using to set aperture 27
- Appetizing Food scene setting 37
- Artistic Nightscape scene setting 36
- Aspect Ratio menu option 55–56
- Autofocus option for focus mode 99
- Auto ISO setting 59
  - not available with Manual Exposure mode for video recording 173, 199
  - using in Manual exposure mode 59, 199
- Auto Monitor Off menu option 161
- Auto Review menu option 150
- AVCHD files
  - locating on memory card 171, 181
- AVCHD video format 171

## B

- Back button focus 141
  - using instead of shutter button for autofocus 141–142
- Backlight compensation 22
- Backlit Softness scene setting 34
- Battery
  - charging 3–4
    - length of time for full charge 4
  - generic replacement 194
  - inserting into camera 3
    - Panasonic model no. DMW-BLH7PP 194
- Battery charger, external 194
- Beep menu option 160
- Bit rate for video recording 172
- Bleach Bypass setting for Creative Control mode 45
- Blurred background
  - achieving with aperture setting 26
  - methods of achieving 26–27
  - using defocus control option to achieve 23
- Bracket menu option 67–72

- incompatibility with other settings 72
- Bright Blue Sky scene setting 35
- Burst Rate menu option 67
- Burst shooting 101–103
  - factors affecting speed of 102
  - general procedure 101
  - H option 102
  - incompatibility with other settings 103
  - L option 102
  - M option 102
  - selecting speed of 101
  - SH option 101–102
    - playback 102

## C

- Calendar index screen in playback mode 122
- Cases
  - Eagle Creek waist pack 193
  - Loweprro Inverse 100 AW 193
  - Loweprro Rezo 110 AW 193
- Categories for playback 124–125
- Center Marker menu option 148
- Clear in Backlight scene setting 34
- Clear Night Portrait scene setting 37
- Clear Nightscape scene setting 36
- Clear Portrait scene setting 34
- Clear Retouch menu option 131–132
- Clear Sports Shot scene setting 38
- Clock Set menu option 8, 158
- Color Space menu option 86
  - incompatibility with other settings 86
- Color temperature ratings of various light sources 96
- Color tone
  - adjusting in Intelligent Auto Plus mode 15, 24
- Color tone adjustment for Monochrome Photo Style 52
- Compression of JPEG images 58
- Connecting camera to HDTV
  - using micro-HDMI cable 192
  - using Wi-Fi feature 190
- Constant Preview menu option 30, 149–150
- Continuous AF option on Motion Picture menu 173–174
- Contrast
  - adjusting 51
- Control ring 119–120
  - assigning a function to 120, 154
  - default functions of 120–121
  - possible assignments for 120
  - using to adjust manual focus 119
- Controls on back of camera 6, 92–119
- Controls on bottom of camera 7
- Controls on front of camera 7, 119–121
- Controls on right side of camera 7
- Controls on top of camera 6, 90–92
- Cool Night Sky scene setting 36
- Creative Control mode 38–48
  - incompatibility with other settings 40

- making adjustments to settings 40–41
- selecting setting 39–40
- similarity to Filter Settings menu option 38
- using for video recording 40
- using with Raw setting for Quality 40
- Creative Video mode 167–168
- Cropping menu option 135
  - incompatibility with other settings 135
- Cross Process setting for Creative Control mode 44
- Cursor Button Lock option for function button 116
- Custom menu 139–158
  - availability of option in Intelligent Auto Plus mode 23
- Custom mode 48
- Custom Multi setting of AF Mode 62–64
  - using to create focus zone including all areas 199
- Custom Set Memory menu option 48, 139–140
- Cute Dessert scene setting 37

## D

- Date and time
  - displaying on screen 94
  - setting 8, 158
- Date format adjustment 158
- Daylight Saving Time
  - setting for 159
- Defocus control option 14–15
  - using in Creative Control mode 41
  - using in Intelligent Auto Plus mode 23, 95
  - using to blur background 15
- Deleting images 112
- Demo Mode menu option 165
- Depth of field
  - relationship to aperture setting 26
- Dial Guide menu option 150
- Diffraction Compensation menu option 85
  - incompatibility with other settings 85
- Diffraction Compensation option on Motion Picture menu 175
- Digital Zoom menu option 85–86
  - incompatibility with other settings 86, 175
- Digital Zoom option on Motion Picture menu 175
- Direction buttons 94–111
- Display button 92–94
  - using to navigate quickly through menus 50, 94, 199
  - using to switch among display screens 92
- Display screens
  - playback mode 93–94
  - recording mode 92–93
- Distinct Scenery scene setting 35
- Down button
  - functions of 100–111
- DPOF (Digital Print Order Format) printing 136
- Drive Mode menu 100–110
  - incompatibility with other settings 101
  - turning off burst shooting and other settings 101
  - using in Intelligent Auto mode 13–14, 22

Dynamic Monochrome setting for Creative Control mode 43

## E

Economy menu option 161

Editing movies

using Video Divide menu option 133–134

Enlarging image in playback mode 17–18, 123

returning image to normal size 123

Exposure bracketing 68–69

using in Intelligent Auto Plus mode 23

Exposure compensation 94–95

adjusting in Creative Control mode 41

adjusting in Intelligent Auto Plus mode 95

and video recording 168

using in Intelligent Auto Plus mode 14, 23

Exposure Compensation Reset menu option 164

Exposure Meter menu option 25, 150

Exposure Mode menu option on Motion Picture menu 173

Expressive setting for Creative Control mode 41

Extended ISO menu option 84–85

Extended Optical Zoom 56–57

incompatibility with other settings 56

relationship to Picture Size setting 56–57

External flash units

LumoPro LP180 195–196

using with LX10 camera 195

Yongnuo YN560-IV 196

## F

Face/Eye Detection setting for AF Mode 60–61

changing eye or face camera focuses on 61

changing location and size of focus frame 61

Face Recognition Edit menu option 137

Face Recognition menu option 87–88

Fantasy setting for Creative Control mode 47

Favorite menu option 136

Fill-flash 81

Filter adapters for LX10 camera

Lensmate system 198

Magfilter system 198

Filter effect adjustment for Monochrome Photo Style 52

Filters

using with LX10 198

Filter Settings menu option 53–54

compared to Creative Control mode 54

settings unavailable for video recording 179

using with Quality set to Raw 54, 199

Filter Settings option on Motion Picture menu 169

Firmware

displaying current version 163–164

updating 164

Flash 92

bouncing off ceiling 92

diffusing 199

using in Intelligent Auto Plus mode 24

Flash Adjustment option of Flash Mode 83

Flashing aperture or shutter speed value

indication of inability to set normal exposure 26, 28

Flashing highlights in playback mode 94, 148

Flash menu option 81–83

incompatibility with other settings 81

Flash Mode menu option 81–82

Flash release switch 6

Flash Synchro setting for Flash Mode 82–83

incompatibility with other settings 83

Flicker Decrease option on Motion Picture menu 175

Focus

general techniques 11–12

Focus bracketing 70–71

compared to Post Focus feature 71

Focus frame

moving around on display 65

Focus mode menu 99–100

Focus/Release Priority menu option 143

effect on burst shooting 143–144

Focus Stacking option 106–107

incompatibility with other settings 109

Focus tracking 61

Forced On setting for Flash Mode 81

Forced On with Red Eye setting for Flash Mode 81

Format menu option 165

Freeze Animal Motion scene setting 38

Function buttons 111–116

assigning functions to for playback mode 116, 152

assigning functions to for recording mode 113–116, 152, 200

Fn1/4K Photo button 111

default assignment for playback mode 116

Fn2/Post Focus button 111–112

default assignment for playback mode 116, 152

Fn3/Delete/Q.Menu/Cancel button 112

Function Button Set menu option 151–152

## G

Geotagging option 126–127, 187

Glistening Water scene setting 35

Glittering Illuminations scene setting 36

GPS data

adding to images 126–127

GPS icon

indicating image with location data 126

Guide Line menu option 147

## H

Half Press Release menu option 142

Handheld Night Shot scene setting 36

HDMI Mode menu option 162

HDMI port

using to connect camera to HDTV 192

HDR menu option 75–76

making settings for 75

High Dynamic setting for Creative Control mode 44

High Key setting for Creative Control mode 42  
 Highlight menu option 94, 148  
 Highlight Shadow menu option 72–73  
   saving a custom setting 73  
 Highlight Shadow option on Motion Picture menu 174  
 High Speed Video menu option 168, 173  
 High speed video recording 168  
   requirement of using high-speed memory card for 168  
 Histogram  
   moving on display 147  
   playback mode 94  
   shooting mode 146–147  
 Histogram menu option 147–148

## I

i.Dynamic (Intelligent Dynamic) menu option 73  
 i.Dynamic option on Motion Picture menu 175  
 i.Handheld Night Shot menu option 74  
 iHDR menu option 74  
 Image numbers  
   resetting 164  
 iMovie software 18  
 Impressive Art setting for Creative Control mode 44  
 Index screens in playback mode 17, 122  
 Intelligent Auto mode 20–22  
   settings unavailable with 21  
 Intelligent Auto Plus mode 22–24  
   features of 14–15  
   selecting 14  
   settings unavailable with 15  
 Intelligent ISO setting 59  
   incompatibility with other settings 59, 179  
 Interlaced video settings 172  
 i.Resolution (Intelligent Resolution) menu option 74  
   incompatibility with other settings 74  
   relationship to iZoom option 85  
 i.Resolution option on Motion Picture menu 175  
 Irfanview software program 34, 54, 199  
 ISO. See Sensitivity (ISO)  
 ISO Increments menu option 84  
 ISO Limit Set menu option 59, 84  
   not effective for video recording 179  
 i.Zoom (Intelligent Zoom) menu option 85  
   incompatibility with other settings 85  
 i.Zoom option on Motion Picture menu 175

## J

JPEG files 58  
   compression of 58  
 Jump Snap feature 185–186

## K

Kelvin units 96  
 Key icon in playback mode for protected image or video 137

## L

Language  
   setting 163  
 Language menu option 163  
 LCD monitor 116–119  
   adjusting brightness of 160–161  
   tilting features of 116–117  
 Left button  
   functions of 99–100  
 Lens 121  
   focal length of 121  
   minimum focus distance 121, 191  
   specifications of 121  
 Lens Position Resume menu option 153  
 Lens Retraction menu option 153  
 Level Gauge Adjustment menu option 165  
 Level Shot option on Motion Picture menu 174  
   incompatibility with other settings 174  
 Light Composition menu option 130–131  
 Live View Mode menu option 160  
   incompatibility with other settings 86, 160  
 Location Logging menu option 126–127  
 Locking cursor buttons 116  
 Locking exposure 114  
 Locking focus 114  
 LoiLoScope software  
   where to download 3  
 Long Exposure Noise Reduction menu option 85  
   incompatibility with other settings 85  
 Low Key setting for Creative Control mode 42

## M

Macro photography 191–192  
   using Post Focus feature with 191  
 Macro zoom option for focus mode 99  
   incompatibility with other settings 99  
 Manfrotto BeFree tripod 197  
 Manual exposure mode 29–31  
   icons on screen 29  
   incompatibility with other settings 30  
   using Auto ISO with 30  
   using for HDR images 29  
 Manual Exposure mode (movies) 167–168  
   range of available shutter speeds 167  
 Manual focus  
   general procedure for using 12–13, 100  
   using autofocus in manual focus mode 141  
   using in conjunction with autofocus 144  
 Manual focus option for focus mode 100  
 Memory card  
   capacity for storing images and videos 4–5  
   considerations for choosing 4  
   inserting into camera 5  
   operating camera without 4  
   requirement of UHS Speed Class 3 for 4K video recording 4  
   speed requirements 5

- types of 4
- Menu Background menu option 162
- Menu Guide menu option 157–158
- Menu Information menu option 163
- Menu Resume menu option 162
- Menu systems
  - listing of 49
  - navigating among 49–50
- Metering Mode menu option 66–67
  - incompatibility with other settings 67
- Metering Mode option on Motion Picture menu 174
- MF Assist Display menu option 144
- MF Assist menu option 144
  - incompatibility with other settings 144
  - not available for movie recording 144
  - using to enlarge manual focus screen 144
- MF Guide menu option 145
- M/FT menu option 162
- Microphone 92
- Miniature setting for Creative Control mode 45–46
- Mode dial 91
  - cannot take still images with dial set to Creative Video position 91
  - using to select recording mode 91
- Monitor Display menu option 160–161
- Monitor Luminance menu option 160
- Monochrome Live View menu option 148
  - incompatibility with other settings 149
  - using with peaking 149
- Monochrome scene setting 38
- Monochrome setting for Creative Control mode 43
- Monochrome setting for Photo Style
  - available adjustments for 52
- Mophie PowerStation XL portable USB power supply 194
- Motion picture button 91
- Motion Picture menu 169–176
  - items in common with Recording menu 169
  - limited options in Intelligent Auto mode 169
- Movies
  - editing on computer 181–182
- MP4 video format 171
  - locating MP4 files on memory card 171, 181
- MTS files for AVCHD video 171
- Multiple Exposure menu option 76–78
  - using Overlay option with existing Raw image 77

## N

- Noise reduction
  - adjusting 51
- No Memory Card error message 4
- Number Reset menu option 164

## O

- Old Days setting for Creative Control mode 42
- One Point Color setting for Creative Control mode 47–48
- One Push AE option for function button 115

- Online Manual menu option 158
- On/Off switch 90

## P

- Panasonic AC Adapter, model no. DMW-AC10 194
- Panasonic DC Coupler, model no. DMW-DCC15A 195
- Panasonic Image App 183
  - using for geotagging 126
- Panasonic Lumix Club 187, 188–189
  - internet address for 189
- Panasonic Lumix DMC-LX10 camera
  - features lacking 1
  - features of 1
  - items included in box 3
  - various model number designations of 1
- Panasonic user's guide for LX10 camera
  - download link 158
- Panorama mode 31–32
- Panoramas
  - creating 31–32
  - direction of 31, 80
  - playback in camera 32
  - shooting with filter effects 32
  - size of 31, 80
- Panorama Settings menu option 31, 80
- Peaking menu option 145–146
  - incompatibility with other settings 146
- Photo Collage feature 188
- Photoflex Lite-Dome XS softbox 196
- PHOTOfunSTUDIO software 88, 132, 189
  - where to download 3
- Photomatix Pro software 76
- Photo Style menu option 51–53
  - adjusting parameters for 51–52
  - comparison chart 53
  - incompatibility with other settings 52
  - saving a custom setting 53
  - using with Raw setting for Quality 52
  - using with Scene mode 52
- Photo Style option on Motion Picture menu 169
- Picture Size menu option 56–57
  - incompatibility with other settings 56
  - relationship to aspect ratio setting 56
- Picture Size setting for panoramas 31
- Picture Sort menu option 137
- Pinpoint AF Display menu option 143
- Pinpoint AF Time menu option 142
- Pinpoint setting for AF Mode 64–65
  - not available for video recording 173
- Playback
  - movies
    - general procedure 179–180
  - still images
    - general procedures 16–18, 122–123
- Playback button 92
- Playback menu 123–137



Playback Mode menu option 125  
 Plural Eyes software 177  
 Pole aerial photography 197  
 Post Focus option for drive mode 106–108, 200  
   incompatibility with other settings 109  
 Preview option for function button 114–115  
   incompatibility with other settings 115  
 Print Set menu option 136–137  
 Profile Setup menu option 88  
 Program mode 24–25  
 Program mode (movies) 167  
 Program Shift 24–25  
   incompatibility with other settings 25  
 Progressive video settings 172  
 Protect menu option 137

## Q

Q.Menu menu option 153–154  
 Quality menu option 57–59  
   distinguished from Picture Size option 57  
 Quick AF menu option 142  
   incompatibility with other settings 142  
 Quick Menu 88–89  
   customizing 153–154  
 QuickTime video software 18

## R

Raw & Fine setting for Quality 58  
   setting Picture Size for 56  
 Raw format 57–58  
   ability to alter settings after images captured 57–58  
   incompatibility with other settings 50, 57  
 Raw Processing menu option 127–129  
   settings that can be adjusted with 129  
 Rear-curtain flash 82–83  
 Rear dial 91–92  
   changing function assigned to 91–92, 154  
   default assignments of 91  
 Recording Area menu option 150–151  
 Recording Format option on Motion Picture menu 171–172  
 Recording menu 49–87  
   items that are dimmed and unavailable for selection 50  
   limited options in Intelligent Auto mode 22  
   navigating through 50  
   options available in Intelligent Auto Plus mode 22  
 Recording modes  
   list of 20, 166  
 Red-eye Removal menu option 83–84  
 Red icon indicating writing to memory card 5  
 Relaxing Tone scene setting 34  
 Remaining Display menu option 150  
 Reset menu option 164  
 Resetting camera settings 164  
 Reset Wi-Fi Settings menu option 164  
 Resize menu option 134–135  
   incompatibility with other settings 135

Restore to Default option for function button 116  
 Retro setting for Creative Control mode 41  
 Right button  
   functions of 96–99  
 Ring/Dial Set menu option 120, 154  
 Romantic Sunset Glow scene setting 35  
 Rotate Display menu option 136  
   relationship to Rotate menu option 135  
 Rotate menu option 135–136  
 Rough Monochrome setting for Creative Control mode 43

## S

Saturation  
   adjusting 51  
 Scene detection 21  
 Scene menu option 33  
 Scene mode 32–48  
   incompatibility with other settings 32, 34  
   methods for selecting a scene setting 32–34  
   using with Quality set to Raw 34  
 Second-curtain flash 82  
 Sekonic C-700 Color Meter 97  
 Self Shot feature 116, 154–156  
   using in Intelligent Auto mode 14  
 Self-timer  
   general procedure for using 109–110, 199  
   incompatibility with other settings 110  
   retaining setting after camera powered off 110, 164  
 Self Timer Auto Off menu option 110, 164  
 Self-timer menu option 72, 110  
 Sensitivity (ISO) 59–60  
   available values 59, 84  
   effects of setting of 25600 60  
   incompatibility with other settings 59  
   in general 59  
   making numerical setting for 59  
   setting from menu 59  
   settings available for video recording 59, 173, 179  
   setting values lower or higher than normal range 84–85  
 Sensitivity (ISO) option on Motion Picture menu 173  
 Sepia setting for Creative Style 43  
 Setup menu 158–165  
 Sharpness  
   adjusting 51  
 Shooting menu. See Recording menu  
 Shooting modes. See Recording modes  
 Shutter AF menu option 141–142  
   relationship to Half Press Release menu option 142  
 Shutter button 90–91  
   using to start and stop video recording 90, 168  
 Shutter Priority mode 28–29  
 Shutter Priority mode (movies) 167  
   range of available shutter speeds 167  
 Shutter speed  
   range of available settings 24, 26, 28, 29–30  
   range of available settings for video recording 167

- setting by turning rear dial 28
- setting in Manual exposure mode 167
- using setting to freeze or blur motion 28
- Shutter Type menu option 80
- Silent Mode menu option 140, 143
- Silent Operation option on Motion Picture menu 175–176, 179
- Silky Monochrome setting for Creative Control mode 43
- Silkipix software 40, 58
  - where to download 3
- Silky Skin scene setting 34
- Simultaneous Record Without Filter menu option 54
- Single shooting setting for Drive Mode 101
- Sleep Mode menu option 161
- Sleep Mode (Wi-Fi) menu option 161
- Slide Show menu option 123–125
- Slow-motion video footage
  - using 60p format to produce 172
  - using High Speed Video option to produce 168
- Slow Sync setting for Flash Mode 82
- Slow Sync with Red Eye setting for Flash Mode 82
- Snap Movie option on Motion Picture menu 170–171
  - combining movies with Panasonic Image App 171, 188
- Soft Focus setting for Creative Control mode 46
- Soft Image of a Flower scene setting 37
- Spot metering option
  - moving spot metering area on display 67, 198
- Stabilizer menu option 86
  - incompatibility with other settings 86, 175
- Stabilizer option on Motion Picture menu 175
- Star Filter setting for Creative Control mode 47
- Stealth iPole XL 197
- Step-by-step guides
  - adding location data to images 126–127
  - connecting camera to smartphone or tablet 183–184
  - recording motion pictures in Intelligent Auto mode 15–16
  - saving still frame from motion picture 181
  - sending images to a computer 189–190
  - sending images to a smartphone 186–187
  - taking pictures in Intelligent Auto Mode 9–10
  - uploading images to social networks 188–189
  - using 4K Live Cropping feature 170
  - using an external audio recorder for video recording 177
  - using a smartphone or tablet as a remote control 185–186
  - using Custom Multi setting for AF Mode 62–63
  - using Snap Movie feature 170–171
  - using the Video Divide option 180
- Step zoom function for control ring 120, 153
- Step zoom function for zoom lever 153
- Stop Motion Animation menu option 79–80
- Stop Motion Video menu option 80, 134
- Street photography 192
- Sunshine setting for Creative Control mode 48
- Sweet Child's Face scene setting 35

## T

- Tables
  - default assignments for rear dial 102
  - default functions of control ring 120
  - function button assignments for recording mode 113
  - number of images that fit on 32 GB memory card 5
  - Recommended settings for shooting in Intelligent Auto Mode 11
  - results of burst shooting tests 102
  - Shutter speed equivalents 29
  - use of camera controls for video recording 177–179
- Tascam DR-100mkII audio recorder 177, 196
- Text-entry screen
  - how to use 132
- Text Stamp menu option 132–133
  - incompatibility with other settings 133
  - using to imprint name on image 88, 132
  - using to imprint travel date information on images 159
- Time exposure setting for shutter speed 31
- Time Lapse Shot menu option 78–79
- Time Lapse Video menu option 79, 134
- Time zone
  - setting 159
- Title Edit menu option 132
- Touch AE icon 119
- Touch AE option for function button 115–116
- Touch AF menu option 157
- Touch screen features 117–119, 156–157
  - in general 117, 200
  - using during video recording 177
- Touch screen icons 118–119
- Touch Screen menu option 117, 157
- Touch Scroll menu option 122, 157
- Touch Settings menu option 117, 156–157
- Touch Shutter option 156
- Touch tab icons 118–119, 157
- Touch Tab menu option 157
- Toy Effect setting for Creative Control mode 45
- Toy Pop setting for Creative Control mode 45
- Travel Date menu option 158
- Tripod socket 7
- T setting for time exposure 31
- TV Connection menu option 162

## U

- UHS Speed Class 3
  - requirement for SD card for recording 4K video 5, 173
- Up button
  - functions of 94–95
- USB Mode menu option 162

## V

- Version Display menu option 163–164
- Video Divide menu option 133–134
- Video files

- playing in camera 18
- saving single frame from 18
- Video recording
  - autofocus options for 173–174
  - duration limits for 5
  - effects of Mode dial position on 166–167
  - general procedures for 166–168, 179–180
  - range of shutter speed settings available 173
  - taking still pictures during 176
  - using Creative Video mode 167–168
  - using external audio recorder 177
  - using physical controls of camera during 177–179
  - using touch screen during 177
- Viera Link menu option 162
- Virtual function buttons 119
  - functions that cannot be assigned to 114
- Vivid Sunset Glow scene setting 35

## W

- Warm Glowing Nightscape scene setting 36
- WD TV Live media device 190
- White balance 96–99
  - adjusting after shooting for Raw images 98
  - adjusting with color axes 98
  - comparison chart 98–99
  - list of preset options 96
  - setting by color temperature 97
  - setting custom value manually 96–97

- White balance bracketing 71–72
  - incompatibility with other settings 72
  - setting up from white balance adjustment screen 72, 98
- White balance comparison chart 99
- Wi-Fi/Charging Lamp 6, 119
- Wi-Fi features of camera
  - connecting to smartphone or tablet 183–184
  - controlling camera with smartphone or tablet 185–186, 200
  - sending images and videos to smartphone or tablet 186–187
  - sending images to a computer 189–190
  - sending images to printers and other devices 190
  - uploading images to social media sites 187, 188
  - viewing images on TV 190
- Wi-Fi menu option 159, 183, 189, 190
- Wind Noise Canceller option on Motion Picture menu 176
- Windows Movie Maker software 18
- World Time menu option 159

## Z

- Zebra pattern menu option 148–149
- Zhiyun Crane-M Gimbal 197
- Zoom lever 90
  - using to navigate quickly through menus 50, 199
- Zoom Lever menu option 153