

Index

Symbols

- 1-Area setting for AF Mode 67–68
- 4K Burst option 97
- 4K Burst S/S option 97
 - audio recorded with 98
- 4K Live Cropping option on Motion Picture menu 162–163
- 4K Photo Bulk Saving menu option 122–123
- 4K Photo editing
 - extracting still image from burst 98
- 4K Photo menu option 71
- 4K Photo shooting 71, 96–98
- 4K Pre-burst option 97
- 4K video format 165
- 4K video recording
 - requirement of high-speed memory card for 4, 5, 165
- 49-Area setting for AF Mode 65–66

A

- AC adapter
 - flap covering port for attaching cord to camera 8, 189
 - Panasonic model no. DMW-AC10 189–190
- Adobe Camera Raw software 57
- Adobe Premiere Elements software 17
- AF/AE Lock Hold menu option 133
- AF/AE Lock option 106–107, 132–133
 - inability to lock exposure in Manual exposure mode 132
- AF Assist Lamp menu option 113, 135–136
- AF Assist/Self-timer lamp 113, 135
- AF Macro option for focus mode 93
- AF+MF menu option 136
- AF Mode menu option 11, 63–68
 - moving focus frame on display 68–69
- AF Mode option on Motion Picture menu 166
- AF-On option 106, 107, 133, 134
- AFS/AFF/AFC menu option 12, 68
 - incompatibility with other settings 69
- AFS/AFF/AFC option on Motion Picture menu 166
- AF Tracking setting for AF Mode 64–65
 - incompatibility with other settings 65
- Anker 40-watt desktop USB charger 188
- Aperture
 - effect of setting on depth of field 24–25
 - range of available settings 23, 26
 - dependent on zoom level of lens 25–26
 - setting with control dial or control ring 25
- Aperture Priority mode 24–26

- Aperture Priority mode (movies) 160
- Appetizing Food scene setting 35–36
- Artistic Nightscape scene setting 34, 194
- Aspect Ratio menu option 54
 - relationship to resolution 54
- Autofocus option for focus mode 93
- Auto ISO 58
 - not available for video recording in Manual Exposure video mode 166
 - using with Manual exposure mode 28, 193
- Auto LVF/Monitor Off menu option 154
- Auto Power Off menu option 154
- Auto Power Off (Wi-Fi) menu option 154
- Auto Review menu option 114, 144
- Auto setting for flash mode 91
- Auto with Red Eye setting for flash mode 91
- AVCHD files
 - locating on memory card 164, 174
- AVCHD video format 164

B

- Baby
 - adding name and age to image 83
- Back button focus 106, 133
 - using instead of shutter button for autofocus 133–134
- Backlight compensation 19, 20
- Backlit Softness scene setting 32
- Battery
 - charging 3
 - length of time for full charge 4
 - generic replacement 189
 - Panasonic model no. DMW-BLG10PP 188
 - inserting into camera 3
- Battery charger, external
 - Batmax model 189
 - Panasonic model no. DMW-BTC9 189
- Beauty Retouch menu option 119–120
- Beep menu option 152–153
- Bleach Bypass setting for Creative Control mode 43
- Blurred background
 - achieving with aperture setting 24–25
 - methods of achieving 25
- Bracket menu option 71–73
- Bright Blue Sky scene setting 33
- Burst Rate menu option 71
- Burst shooting 95–96
 - general procedure 13
 - incompatibility with other settings 96

C

- Calendar index screen 16, 114
- Cases
 - Case Logic TBC403 188
 - Eagle Creek Waist Pack 188
 - Lowepro Rezo 110 AW 188
- Center Marker menu option 140

Charging/Wi-Fi lamp 4, 89
 Clear in Backlight scene setting 32
 Clear Night Portrait scene setting 35
 Clear Nightscape scene setting 34
 Clear Portrait scene setting 32
 Clear Retouch menu option 124
 Clear Sports Shot scene setting 36
 Clock Set menu option 8, 151
 Color temperature ratings of various light sources 59
 Color tone
 adjusting in Intelligent Auto Plus mode 22
 Color tone adjustment for Monochrome Photo Style 51
 Continuous AF option on Motion Picture menu 166
 Continuous shooting. See Burst shooting
 Control dial 89–90
 changing function of 89, 146
 default assignments of 89
 miscellaneous functions of 90
 possible assignments for 89
 Control ring 112–113
 assigning a function to 146
 default functions of 112
 possible assignments for 112
 Controls on back of camera 6, 86
 Controls on top of camera 6, 85
 Cool Night Sky scene setting 34
 Creative Control mode 36–46
 incompatibility of other settings with 38
 making adjustments to settings 39
 using touch screen icons for adjustments 39
 selecting setting 37–38
 using control ring or control dial to select 38
 using with Raw setting for Quality 38
 Creative Video mode
 using for recording movies 160–161
 Cropping menu option 128
 Cross Process setting for Creative Control mode 43
 Custom menu 131–151
 Custom mode 46, 132
 Custom Multi setting of AF Mode 66–67
 creating a focus area with all available zones 67, 193
 Custom Set Memory menu option 131–132
 Cute Dessert scene setting 36

D

Date and time
 setting in camera 8, 151
 Daylight Saving Time
 setting for 152
 DC Coupler
 Panasonic model number DMW-DCC11 189–190
 Defocus control option
 using in Creative Control mode 39
 using in Intelligent Auto Plus mode 21–22
 Deleting images 104
 Demo Mode menu option 158

Dial Guide menu option 142–143
 Diffraction Compensation menu option 80
 incompatibility with other settings 80
 Diffraction Compensation option on Motion Picture menu 168
 Digital Zoom menu option 81
 incompatibility with other settings 81
 Digital Zoom option on Motion Picture menu 168
 Direct Focus Area menu option 64, 65, 136
 Display button 87
 miscellaneous functions of 89
 using to navigate quickly through menus 193
 Display screens
 playback mode 88
 shooting mode 87–88
 Distinct Scenery scene setting 33
 Down button
 function of 94
 miscellaneous functions of 103
 DPOF (Digital Print Order Format) 129
 Drive Mode options 94–103
 turning off all drive mode settings 94
 using in Intelligent Auto mode 12–13
 Dynamic Monochrome setting for Creative Control mode 41

E

Economy menu option 154
 Electronic shutter
 advantages of 78
 Enlarging image in playback mode 16, 115
 returning image to normal size 16, 115
 Exposure bracketing 72–73
 incompatibility with other settings 73
 setting individual shots or burst 72–73
 setting order of exposures 72
 using in Creative Control mode 39
 using in Intelligent Auto Plus mode 21
 Exposure compensation 90–91
 adjusting in Creative Control mode 39
 adjusting in Intelligent Auto Plus mode 21
 limited adjustment range for movies 161
 using when recording movies 171
 Exposure Compensation Reset menu option 157
 Exposure Meter menu option 23, 25, 142
 Exposure Mode option on Motion Picture menu 160–161, 166
 Expressive setting for Creative Control mode 39
 Extended ISO menu option 80
 not effective for movie recording 166
 Extended Optical Zoom 55–56
 incompatibility with other settings 55
 relationship to Picture Size setting 55–56
 External audio recorder
 using for video recording 169–170
 External audio recorders
 Shure VP83 191

- Tascam DR-40 191
- Tascam DR-100MkII 191
- using for video recording 191
- Zoom H1 191
- Zoom H6 191

External flash units

- LumoPro LP180 190
- using with ZS70 camera 190
- Yongnuo YN-560 IV 190

Eye sensor 86

- setting sensitivity of 146

- Eye Sensor AF menu option 135

- Eye Sensor menu option 86, 146

F

- Face/Eye Detection setting for AF Mode 11, 64

- changing face camera focuses on 64

- Face Recognition Edit menu option 130

- Face Recognition menu option 82–83

- Fantasy setting for Creative Control mode 45

- Favorite menu option 129

- Fill-flash 91–92

- Filter effect adjustment for Monochrome Photo Style 51

- Filter Settings menu option 53–54

- using with Quality set to Raw 54, 193

- Filter Settings option on Motion Picture menu 162, 171

- Firmware 156–157

- updating 157

Flash

- diffusing 193

- in general 7, 91, 112

- using in Intelligent Auto Plus mode 22

- Flash Adjustment menu option 79

- Flashing highlights in playback mode 88, 140

- Flash mode options 91–93

- Flicker Decrease option on Motion Picture menu 168

- Fn1 button 103

- functions of 103

- Fn2 button

- functions of 104

- Fn3 button

- functions of 104–105

- Fn4 button 86

- using as LVF button 105

Focus

- general techniques 11–12, 93–94

- Focus Area Set option 108

Focus frame

- moving on display 68–69, 108, 136

- during movie recording 171

- Focus mode options 93–94

- for movie recording 171

- Focus/Release Priority menu option 136

- effect on burst shooting 96, 136

- Focus Stacking option 101–102

- using with macro photography 183

- Forced Off setting for flash mode 93

- Forced On setting for flash mode 91–92

- Forced On with Red Eye setting for flash mode 92

- Format menu option 158

- Freeze Animal Motion scene setting 36

- Function buttons 103–109

- assigning functions to for playback mode 109, 145

- assigning function to for recording mode 103, 105–109, 133, 144

- default assignments for 105–106

- list of possible assignments for 105–106

- Function Button Set menu option 105, 144–145

G

- Geotagging option 117–118, 179

- Glistening Water scene setting 34

- Glittering Illuminations scene setting 34

- Guide Line menu option 140

H

- Half Press Release menu option 134

- Handheld Night Shot scene setting 35

- HDMI Mode (Play) menu option 155

- HDMI port 7

- using to connect camera to HDTV with cable 187

- HDR (high dynamic range) photography 75

- using Manual exposure mode for 27

- HDR menu option 75–76

- High Dynamic setting for Creative Control mode 42

- High Key setting for Creative Control mode 40

- Highlight menu option 88, 140

- High Speed Video menu option 161, 166

Histogram

- moving on display 141–142

- playback mode 139

- recording mode 139

- Histogram menu option 139–140

I

- i.Dynamic menu option 73–74

- i.Dynamic option on Motion Picture menu 167

- i.Handheld Night Shot menu option 74

- iHDR menu option 75

- Impressive Art setting for Creative Control mode 42

- Index screens in playback mode 15–16, 114

- Intelligent Auto mode 18–20

- settings unavailable with 19

- Intelligent Auto Plus mode 13–14, 20–22

- features of 14, 20–22

- selecting 13

- settings unavailable with 14

- Intelligent ISO setting 58

- incompatibility with other settings 58–59

- Interlaced video formats 165

- i.Resolution menu option 74

- i.Resolution option on Motion Picture menu 167

Irfanview software program 38, 54
 ISO. See Sensitivity
 ISO Increments menu option 80
 ISO Limit Set menu option 58, 79–80
 not effective for video recording 80
 ISO values above 3200
 how to set 80
 i.Zoom menu option 80–81
 incompatibility with other settings 81
 i.Zoom option on Motion Picture menu 168

J

JPEG files 57–58
 compression of 57
 Jump Snap feature 178

K

Kelvin units 59

L

Language
 setting in camera 8
 Language menu option 156
 LCD screen
 adjusting brightness and other settings 153, 154
 features of 109
 rotating for self-portraits 109, 147
 switching view between LCD and viewfinder 105, 146–147
 tilting for low-angle or overhead shots 109–110
 Left button
 function of 93
 Lens
 minimum focus distance 183
 specifications of 7, 113
 Lens Position Resume menu option 145
 Lens Retraction menu option 87, 145
 Level Gauge Adjustment menu option 158
 Level Shot option on Motion Picture menu 167
 Light Composition menu option 123–124
 Live View Mode menu option 153
 conflict of Ec030fps setting with digital zoom 81, 153
 Location Logging menu option 117–119
 Locking exposure 70, 106–107, 132–133
 Locking focus 106–107, 132–133
 LoiLoScope software
 where to download 3
 Low Key setting for Creative Control mode 40
 LumoPro optical slave flash 27
 LVF button 86
 LVF Display Style menu option 143
 LVF/Monitor Switch menu option 86, 146

M

Macro photography 182–183
 using Focus Stacking feature with 183

 using Post Focus feature with 183
 Macro Zoom option for focus mode 93
 Manfrotto BeFree tripods 192
 Manual exposure mode 27–28
 icons on screen 28
 reasons for using 27
 using Auto ISO with 28, 193
 using for HDR images 27
 Manual Exposure mode (movies) 160–161
 range of available shutter speeds 160–161
 Manual focus 93–94
 using in conjunction with autofocus 136
 Mechanical shutter
 advantages of 78
 Memory card
 inserting into camera 5
 requirement of UHS Speed Class 3 for 4K video recording 4
 types of 4
 Menu Background menu option 155
 Menu Guide menu option 37, 150
 Menu Information menu option 156
 Menu Resume menu option 155
 Menu screens
 dimmed items as unavailable 49
 navigating in 48–49
 Menu/Set button
 functions of 103
 Menu systems
 listing of 48
 navigating among 48
 Metering Mode menu option 69–70
 incompatibility with other settings 70
 Metering Mode option on Motion Picture menu 167
 MF Assist Display menu option 137
 MF Assist menu option 93–94, 137
 incompatibility with other settings 137
 MF Guide menu option 137–138
 M/FT menu option 155
 Microphone 86
 Miniature setting for Creative Control mode 44
 behavior for movie recording 171
 Mode dial 86
 Monitor Display menu option 153
 Monitor Display Style menu option 143
 Monitor Luminance menu option 154
 Monochrome Live View menu option 142
 Monochrome scene setting 36
 Monochrome setting for Creative Control mode 41
 Monochrome setting for Photo Style
 available adjustments for 51
 Mophie PowerStation XL portable USB power supply 189
 Motion picture button 86
 Motion Picture menu 162–169
 relationship to Recording menu 162
 Movie recording
 choosing exposure mode for 160–161

- effects of position of mode dial on 159–161
- focus constantly adjusted when autofocus turned on 166
- limits on recording length 5
- overview of general procedure 14–15, 159–161
- recommendations for 172
- shooting still images during recording 169
- using Creative Video mode 160
- using physical controls during recording 170
- Movies
 - editing in camera 126, 173
 - editing on computer 174
 - editing with computer 17
 - saving still frames from 17, 173
- MP4 video format 164
- N**
- No Memory Card error message 4
- Number Reset menu option 157
- O**
- Old Days setting for Creative Control mode 40
- One Point Color setting for Creative Control mode 45–46
- One Push AE option 108
- Online Manual menu option 151
- On/off button 85
- P**
- Panasonic Image App 117–118, 175
- Panasonic Lumix Club 179, 180
- Panasonic Lumix DC-ZS70/TZ90 camera
 - features lacking 1
 - features of 1
 - items included with in box 3
 - usefulness of this book for 1
- Panorama mode 29–30
- Panoramas
 - creating 29
 - direction of 29, 78
 - playback in camera 30
 - shooting with filter effects 30
 - size of 29, 78
- Panorama Settings menu option 78
- Peaking menu option 138–139
- Pet
 - adding name and age to image 83
- Photo Collage feature 180
- Photoflex Lite-Dome XS softbox 191
- PHOTOfunSTUDIO software 17, 83, 125, 174, 181
 - where to download 3
- Photomatix Pro software 76
- Photo Style menu option 50–52
 - adjusting parameters for 50–51
 - comparison chart 52
 - incompatibility with other settings 51–52
 - saving a custom setting 52
 - using with Raw setting for Quality 51
- Photo Style option on Motion Picture menu 162
- PictBridge printing protocol 7, 154
- Picture Size menu option 55–56
 - incompatibility with other settings 55
- Picture Sort menu option 130
- Pinpoint AF Display menu option 68, 135
- Pinpoint AF Time menu option 68, 135
- Pinpoint setting for AF Mode 68
- Playback
 - movies
 - general procedure 16–17, 172
 - still images
 - general procedures 15–16, 114
- Playback button 87
- Playback Menu 115–130
- Playback Mode menu option 116–117
- Pole aerial photography 191
- Post Focus option 99–100
 - incompatibility with other settings 100
 - using with macro photography 183
- Preview option for function button 28, 107
- Printing images directly from camera 129–130
- Print Set menu option 129–130
- Profile Setup menu option 83
- Program mode 22–24
- Program mode (movies) 160
- Program Shift 23
 - incompatibility with other settings 23
- Progressive video formats 165
- Protect menu option 130
- Q**
- Quality menu option 56–58
 - distinguished from Picture Size option 56
- Quick AF menu option 134
- Quick Menu 83–84
 - activating with Fn3 button 105
- QuickTime video software 17
- R**
- Raw & Fine setting for Quality 57–58
 - setting Picture Size for 55
- Raw format 56–57
 - ability to alter settings after images captured 56–57
 - incompatibility with other settings 49, 56
- Raw images
 - converting to JPEG in camera 120–122
- Raw Processing menu option 120–122
- Recording Area menu option 143
- Recording Format option on Motion Picture menu 164
- Recording menu
 - using in Intelligent Auto mode 20, 49
 - using in Intelligent Auto Plus mode 20
- Recording modes
 - list of 18
- Recording Quality option on Motion Picture menu 165

Red Eye Reduction settings for flash mode 79
 Red-eye Removal menu option 79
 Red icon indicating writing to memory card 5, 96
 Relaxing Tone scene setting 32
 Remaining Display menu option 143
 Reset menu option 157
 Resetting camera to default settings 157
 Reset Wi-Fi Settings menu option 158
 Resize menu option 127
 Restore to Default option for function button 108
 Retro setting for Creative Control mode 40
 Right button
 function of 91
 Ring/Dial Set menu option 89, 112, 146
 Romantic Sunset Glow scene setting 33
 Rotate Display menu option 129
 Rotate menu option 128
 Rough Monochrome setting for Creative Control mode 41

S

Scene detection 19
 Scene mode 30–36
 incompatibility with other settings 32
 selecting scene type 30–31, 31
 using with Quality set to Raw 32
 Scene Switch menu option 31
 SD card
 capacity of 4
 SD cards
 in general 4
 SDHC card
 capacity of 4
 SDXC card
 capacity of 4
 Self Shot menu option 109, 147–149
 Self-timer 102–103
 general procedure for using 12–13, 102, 193
 incompatibility with other settings 103
 setting to remain active after camera powered off and back on 102–103, 157
 Self Timer Auto Off menu option 157
 Self-timer menu option 73
 Sensitivity (ISO) 55–56
 effects of setting of 6400 59
 in general 58
 making numerical setting for 58, 59
 settings available for movie recording 161, 166, 171
 Sensitivity (ISO) option on Motion Picture menu 166
 Sepia setting for Creative Control mode 41
 Settings
 saving with Custom mode 46, 131–132
 Setup menu 151–158
 Shutter AF menu option 133–134
 Shutter button 85
 Shutter Priority mode 26–27
 incompatibility with other settings 27
 Shutter Priority mode (movies) 160
 range of available shutter speeds 160
 Shutter speed
 range of available settings 23, 24, 26, 28, 78
 setting by turning control dial or control ring 26
 using setting to freeze or blur motion 26
 Shutter Type menu option 78–79
 Silent Mode menu option 132
 Silent Operation option on Motion Picture menu 168
 works even if touch screen turned off 149, 168, 172
 Silky Monochrome setting for Creative Control mode 42
 Silkipix software 57
 where to download 3
 Silky Skin scene setting 32
 Simultaneous Record Without Filter menu option 53–54
 Slide Show menu option 115–116
 Slow-motion video footage
 using 60p format to produce 165
 using High Speed Video option to produce 161
 Slow Sync setting for flash mode 92
 Slow Sync with Red Eye setting for flash mode 92–93
 Snap Movie option on Motion Picture menu 164
 combining movies with Panasonic Image App 164, 179–180
 Soft Focus setting for Creative Control mode 45
 Soft Image of a Flower scene setting 35
 Speaker
 location of on camera 7
 Spot metering option
 moving spot metering area on display 69, 193
 Stabilizer menu option 81–82
 incompatibility with other settings 81–82
 Stabilizer option on Motion Picture menu 168
 Star Filter setting for Creative Control mode 45
 Stealth iPole XL selfie stick 191
 Step-by-step guides
 adding location data to images 117
 connecting camera to smartphone or tablet 175
 recording motion pictures in Intelligent Auto mode 14
 saving still frame from movie 173
 sending images to computer by Wi-Fi 181
 taking pictures in Intelligent Auto mode 9
 uploading images to social networks 180
 using 4K Live Cropping feature 163
 using Custom Multi setting for AF Mode 66
 using external audio recorder for movie recording 169
 using Snap Movie feature 164
 using the 4K Photo Bulk Saving option 122
 using the Video Divide option 173
 Step zoom feature 113
 Stop Motion Animation menu option 77–78
 Stop Motion Video menu option 78, 127
 Street photography 187
 Sunshine setting for Creative Control mode 46
 Sweet Child's Face scene setting 33

T

Tables

- Default assignments for control dial 89
- Default functions of control ring 112
- Possible function button assignments for recording mode 105
- Recommended settings for shooting in Intelligent Auto Mode 9
- Results of burst shooting tests 96
- Shutter speed equivalents 27
- use of camera controls for video recording 170
- Text Stamp menu option 125
 - using to imprint name on image 83, 125
- Time Lapse Shot menu option 76–77
- Time Lapse Video menu option 77, 127
- Time zone
 - setting 151–152
- Title Edit menu option 125
- Touch AE option 108
- Touch AF menu option 64, 65–66, 149–150
- Touch Pad AF menu option 150
- Touch screen
 - uses of 110–111
 - using to control filter effects 110–111
- Touch screen features
 - using during movie recording 172
- Touch Screen menu option 149
- Touch Scroll menu option 114, 150
- Touch Settings menu option 149–150
- Touch Shutter option
 - using during movie recording 172
- Touch Tab icons 111
- Touch Tab menu option 149
- Toy Effect setting for Creative Control mode 43
- Toy Pop setting for Creative Control mode 43
- Tracking focus 11–12, 64–65
- Travel Date menu option 152
- Tripod socket 8
- TV Connection menu option 155

U

- UHS Speed Class 3
 - requirement for SD card for recording 4K video 4, 5
- Ultra-HD video format. See 4K video format
- Up button
 - functions of 90–91
- USB Mode menu option 154–155
- USB port 7

V

- Version Display menu option 156–157
- Video Divide menu option 126
- Viera Link menu option 155
- Viewfinder 86
 - adjusting brightness and other settings 153

- switching view between viewfinder and LCD screen 105, 146–147

- Viewfinder menu option 153
- Virtual function button
 - assignments not available for 106
- Vivid Sunset Glow scene setting 33

W

- Warm Glowing Nightscape scene setting 34
- WD TV Live media device 182
- White balance 59–63
 - adjusting after shooting for Raw images 62
 - adjusting with color axes 61
 - comparison chart 62
 - list of preset options 60
 - setting by color temperature 60–61
 - setting custom value manually 60
- White balance bracketing 62–63, 73
 - incompatibility with other settings 63, 73
- Wi-Fi features of camera 175–182
 - connecting to smartphone or tablet 175–177
 - controlling camera with smartphone or tablet 177–178
 - Jump Snap feature 178
 - sending images and videos to smartphone or tablet 178–179
 - sending images to a computer wirelessly 181
 - sending images to printers and other devices 181
 - uploading images to social media sites 180–181
 - viewing images on TV 182
- Wi-Fi menu option 152
- World Time menu option 151–152

Z

- Zebra pattern menu option 141–142
- Zhiyun Crane-M gimbal 192
- Zoom lens
 - using for telephoto shots 183–186
 - minimizing motion blur 186
- Zoom lever 85
 - assigning step zoom operation to 145
 - using to navigate quickly through menus 193
- Zoom Lever menu option 145