

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Inserting the Memory Card	4
Introduction to Main Controls	5
Top of Camera	6
Back of Camera	6
Front of Camera	7
Right Side of Camera	7
Left Side of Camera	7
Bottom of Camera	8
Setting the Date, Time, and Language	8
CHAPTER 2: BASIC OPERATIONS	9
Taking Pictures	9
Fully Automatic: Intelligent Auto Mode	9
Variations from Fully Automatic	11
Focus	11
Drive Mode	12
Intelligent Auto Plus Mode	13
Motion Picture Recording	14
Basic Playback	15
Playing Movies	16
CHAPTER 3: THE RECORDING MODES FOR STILL PHOTOS	18
Choosing a Recording Mode	18
Intelligent Auto Mode	18
Intelligent Auto Plus Mode	20
Using the Up Button: Defocus Control and Exposure Compensation	21
Using the Left Button: Color Control	22
Program Mode	22
Aperture Priority Mode	24
Shutter Priority Mode	26
Manual Exposure Mode	27
Panorama Mode	29
Scene Mode	30
Creative Control Mode	36
Custom Mode: C Position on Mode Dial	47
CHAPTER 4: THE RECORDING MENU AND THE QUICK MENU	48
The Recording Menu	48
Photo Style	50
Filter Settings	53
Aspect Ratio	54
Picture Size	55
Extended Optical Zoom	55

Quality 56

Sensitivity (ISO) 58

White Balance 59

AF Mode 63

 Face/Eye Detection 64

 AF Tracking 64

 49-Area 65

 Custom Multi 66

 1-Area 67

 Pinpoint 68

 Moving the Focus Frame or Focus Area 68

AFS/AFF/AFC 69

Metering Mode 69

Burst Rate 71

4K Photo 71

Bracket 71

Self-timer 73

Intelligent Dynamic 73

Intelligent Resolution 74

iHandheld Night Shot 74

iHDR 75

HDR 75

Time Lapse Shot 76

Stop Motion Animation 77

Panorama Settings 78

Shutter Type 78

Flash Adjustment 79

Red-eye Removal 79

ISO Limit Set 79

ISO Increments 80

Extended ISO 80

Diffraction Compensation 80

Intelligent Zoom 80

Digital Zoom 81

Stabilizer 81

Face Recognition 82

Profile Setup 83

Quick Menu 83

CHAPTER 5: PHYSICAL CONTROLS

Items on Top of Camera 85

 Shutter Button 85

 Zoom Lever 85

 On/Off Button 85

 Mode Dial 86

 Motion Picture Button 86

 Microphone 86

Controls on Back of Camera 86

 Viewfinder, Eye Sensor, LVF Button, and Diopter Adjustment Wheel 86

 Playback Button 87

 Display Button 87

 Charging/Wi-Fi Connection Lamp 89

 Control dial 89

 Menu/Set Button and Direction Buttons 90

 Direction Buttons 90

 Up Button: Exposure Compensation 90

Right Button: Flash Mode	91
Left Button: Focus Mode	93
Autofocus	93
AF Macro	93
Macro Zoom	93
Manual Focus	93
Down Button: Drive Mode	94
Burst Shooting	95
4K Photo	96
4K Burst	97
4K Burst S/S	97
4K Pre-burst	97
Extracting a 4K Photo Still Image	98
Post Focus	99
Focus Stacking	101
Self-timer	102
Center Button: Menu/Set	103
Function Buttons	103
Fn1/4K Photo Button	103
Fn2/Post Focus Button	104
Fn3/Delete/Q.Menu/Cancel Button	104
Fn4/LVF Button	105
Assigning Functions to Function Buttons	105
AF/AE Lock	106
AF-On	107
Preview	107
One Push AE	108
Touch AE	108
Focus Area Set	108
Restore to Default	108
Assigning Option to Function Button for Playback Mode	109
LCD Monitor	109
Using the Touch Screen	110
Items on Front of Camera	112
Built-in Flash Unit	112
Control Ring	112
Step Zoom	113
AF Assist/Self-timer Lamp	113
Lens	113

CHAPTER 6: PLAYBACK

114

Normal Playback	114
Index View and Enlarging Images	114
The Playback Menu	115
Slide Show	115
[Play] All	116
[Play] Picture Only/Video Only	116
Playback Mode	116
Location Logging	117
Beauty Retouch	119
Raw Processing	120
4K Photo Bulk Saving	122
Light Composition	123
Clear Retouch	124
Title Edit	125
Text Stamp	125

Video Divide	126
Time Lapse Video	127
Stop Motion Video	127
Resize	127
Cropping	128
Rotate	128
Rotate Display.	129
Favorite	129
Print Set	129
Protect.	130
Face Recognition Edit.	130
Picture Sort	130

CHAPTER 7: THE CUSTOM MENU AND THE SETUP MENU 131

The Custom Menu	131
Custom Set Memory	131
Silent Mode	132
AF/AE Lock	132
AF/AE Lock Hold	133
Shutter AF.	133
Half Press Release.	134
Quick AF.	134
Eye Sensor AF.	135
Pinpoint AF Time	135
Pinpoint AF Display.	135
AF Assist Lamp	135
Direct Focus Area	136
Focus/Release Priority	136
AF+MF.	136
Manual Focus (MF) Assist.	137
MF Assist Display	137
MF Guide	137
Peaking	138
Histogram.	139
Guide Line.	140
Center Marker.	141
Highlight	141
Zebra Pattern	141
Monochrome Live View	142
Exposure Meter	142
Dial Guide.	142
LVF Display Style	143
Monitor Display Style.	143
Recording Area	143
Remaining Display	143
Auto Review.	144
Function Button Set	144
Zoom Lever	145
Lens Position Resume	145
Lens Retraction	145
Ring/Dial Set	146
Eye Sensor.	146
Self Shot.	147
Soft Skin.	147
Filter Select	147
Background Control	148

Slimming Mode	148
Shutter	148
Countdown/Shots	148
Touch Settings	149
Touch Screen.	149
Touch Tab	149
Touch AF	149
Touch Pad AF.	150
Touch Scroll	150
Menu Guide.	150
The Setup Menu	151
Online Manual	151
Clock Set	151
World Time	151
Travel Date	152
Wi-Fi	152
Beep.	152
Live View Mode	153
Monitor Display/Viewfinder	153
Monitor Luminance.	154
Economy	154
Auto Power Off	154
Auto Power Off (Wi-Fi)	154
Auto LVF/Monitor Off	154
USB Mode.	154
TV Connection	155
m/ft	155
Menu Resume.	155
Menu Background	155
Menu Information	156
Language	156
Version Display	156
Exposure Compensation Reset.	157
Self Timer Auto Off	157
Number Reset.	157
Reset.	157
Reset Wi-Fi Settings.	158
Level Gauge Adjustment	158
Demo Mode.	158
Format.	158

CHAPTER 8: MOTION PICTURES

159

Basics of ZS70 Videography	159
High Speed Video Recording	161
Making Other Settings When Recording Movies.	162
The Motion Picture Menu	162
Photo Style.	162
Filter Settings	162
4K Live Cropping.	162
Snap Movie.	164
Recording Format	164
Recording Quality	165
Exposure Mode	166
High Speed Video	166
Sensitivity (ISO)	166
AF Mode	166

AFS/AFF/AFC	166
Continuous AF	166
Level Shot	167
Metering Mode	167
Intelligent Dynamic	167
Intelligent Resolution	167
Diffraction Compensation	168
Intelligent Zoom	168
Digital Zoom	168
Stabilizer	168
Flicker Decrease	168
Silent Operation	168
Wind Noise Canceller	169
Zoom Mic	169
Recording Still Images During Video Recording	169
Using External Audio Recorder	169
Physical Controls	170
Using the Touch Screen During Movie Recording	172
Recommendations for Recording Movies	172
Motion Picture Playback and Editing	172
Editing with a Computer	174

CHAPTER 9: WI-FI AND OTHER TOPICS 175

Using Wi-Fi Features	175
Connecting to a Smartphone or Tablet	175
Controlling the Camera with a Smartphone or Tablet	177
Sending Images and Videos to a Smartphone or Tablet	178
Uploading Images by Wi-Fi to Social Networks	180
Connecting to a Computer to Transfer Images Wirelessly	181
Sending Images to Other Devices	182
Viewing Images Wirelessly on TV	182
Macro (Closeup) Shooting	182
Using the Zoom Lens for Telephoto Shots	183
Street Photography	187
Connecting Camera to HDTV with HDMI Cable	187

APPENDIX A: ACCESSORIES 188

Cases	188
Batteries and Chargers	188
AC Adapter	189
External Flash Units	190
External Audio Recorders	191
Equipment for Pole Aerial Photography	191
Gimbal	192
Tripods	192

APPENDIX B: QUICK TIPS 193

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 195

Photography Books	195
Websites	195
Reviews of the ZS70	195