

# Index

## Symbols

- 4K Output Select menu option 190
  - using to record video with no memory card in camera 190
- 4K video
  - in general 204
- 24p/60p Output menu option 188
- 24p video format 205

## A

- AC adapter
  - channel for inserting cord into camera 12, 165
  - Sony model no. AC-UUD12 244
  - Sony model number AC-PW20 12, 245
- Access lamp 11, 162
- Access Point Settings menu option 229, 238
- Adobe Bridge CC software
  - reading location data with 236
- Adobe Camera Raw software 93
- Adobe Premiere Elements software 21
- Adobe Premiere Pro software 21, 227
- AEL button 11, 159
  - assigning an option to 139, 159
  - using as test button with wireless flash setup 81, 159
  - using to enlarge an image in playback mode 159
- AEL Hold option for control button 136, 159
- AEL Toggle option for control button 136
- AEL w/Shutter menu option 76–77
  - effect on continuous shooting exposure adjustments 53, 77, 255
- AF Area Auto Clear menu option 69
- AF Area Registration menu option 68–69
- AF Drive Speed menu option 114, 208
  - using to affect speed of pull-focus effect 162, 208
- AF Illuminator menu option 67, 153
- AF Illuminator/Self-timer Lamp 11, 153
  - disabling use of 67, 153
- AF/MF Control Hold option for control button 133–134, 152
  - using for autofocus in manual focus mode 152
- AF/MF Control Toggle option for control button 134
- AF-On option for control button 68, 135
- AF Tracking Sensitivity menu option 114, 208
- AF w/Shutter menu option 68, 135
- Airplane Mode menu option 228, 238
- Anti Motion Blur setting 38
- Aperture
  - avoidance of narrow settings 23, 29

- range of available settings 11, 23, 25, 27, 29, 32
  - relationship to depth of field 26
- Aperture click switch 13, 27, 148
  - turning off clicks during video recording 148, 202
- Aperture Priority exposure mode (Movies) 202
- Aperture Priority mode 26–28
- Aperture ring 9, 148
  - disagreement of ring setting with actual setting 148
  - setting intermediate f-stop values 26, 148
- Area Setting menu option 194
- Aspect Ratio menu option 49–50
  - incompatibility with other settings 50
- Atomos Shogun 4K video recorder 190, 254
  - procedure for recording to from RX10 IV 222–223
  - recording video with no memory card in camera 190, 204, 223
- Audio Level Display menu option 115, 210
- Audio Out Timing menu option 115, 210
- Audio Recording Level menu option 115, 209
- Audio Recording menu option 115, 209
- Audio Signals menu option 143
- Auto Dual Recording menu option 114, 207, 223
  - incompatibility with other settings 162, 256
- Autoflash setting for Flash Mode 78
  - unavailable in some shooting modes 18
- Auto ISO
  - setting minimum and maximum values for 72
  - using with Manual exposure mode 73
  - using with Manual Exposure mode for video recording 204
- Automatic autofocus 15, 150
- Auto Mode menu option 16, 23, 52
- Auto Object Framing menu option 111–112
  - incompatibility with other settings 112
- Auto Review menu option 20, 130, 166
- Auto Slow Shutter menu option 114, 208
- Autumn Leaves setting for Creative Style 94
- AVCHD video format 205

## B

- Back button focus 68, 135, 152
- Backlight correction
  - using Superior Auto mode for 24
- Battery
  - charging 3–4
    - length of time for full charge 4
  - inserting into camera 3
  - Sony Model No. NP-FW50 3
  - Vivitar replacement 244
  - Wasabi Power replacement 244
- Battery chargers and power supplies
  - Anker 40-watt desktop USB charger 245
  - Mophie PowerStation XL USB battery 245
  - Sony Model No. AC-UUD12
    - using as AC adapter to power camera 3
    - using to charge the battery 4
  - Sony model no. NPA-MQZ1K 245–246

- Vivitar external charger 244
  - Battery compartment 12, 165
    - channel in door for AC adapter cord 165
  - Birds in flight photography
    - settings for 257
  - Bit rate for video recording 205, 206
  - Black Gamma setting for Picture Profile 103
  - Black Level setting for Picture Profile 103
  - Bluetooth features of camera
    - in general 235
  - Bluetooth Settings menu option 235, 239
  - Blurred background
    - achieving with aperture setting 26
  - Bokeh. See Blurred background
  - Bracket Order menu option 59
  - Bracket Settings menu option 58–59
  - Bright Monitoring option for control button 138
  - BULB setting for shutter speed 32
  - B/W setting for Creative Style 94
- ## C
- Cable release
    - using to trigger shutter 251
  - Calendar index screen in playback mode 167
  - Camera Settings1 menu
    - effects of settings on movie recording 216–217
  - Camera Settings2 menu
    - movie-related options 201–213
  - Camera sounds
    - silencing 143
  - Cases
    - Crumpler 6 Million Dollar Home Bag 243
    - Lowepro Inverse 100 AW beltpack 244
    - Sony LCJ-RXJ 244
    - VanGoddy Laurel 243
  - Center button 10, 158
    - assigning an option to 139, 158
    - using to activate Center Lock-on AF tracking frame 158
    - using to activate movable focus frame 158
    - using to magnify manual focus display 158
  - Center Lock-on AF menu option 67
    - incompatibility with other settings 67, 68
    - using touch screen with 67
  - Center setting for Focus Area 63–64
  - Center setting for Metering Mode menu option 75, 76
  - Clean HDMI signal, outputting 12, 163, 189
  - Clear Image Zoom 119
    - incompatibility with other settings 121
  - Clear setting for Creative Style 94
  - Color Depth setting for Picture Profile 104
  - Color Mode setting for Picture Profile 103
  - Color Phase setting for Picture Profile 103
  - Color Space menu option 51
  - Color temperature
    - in general 84
    - using to set white balance 85
  - Conflicting settings
    - error messages for 256
  - Continuous autofocus 15, 150
  - Continuous shooting 18, 53–55
    - advantages of using 53, 255
    - available actions while buffer emptying 54
    - incompatibility with other settings 55, 255
    - in general 53
    - playback of continuous shots 54–55, 172–173
    - using flash with 54
  - Continuous Shooting setting for Drive Mode
    - with autoexposure adjustments 53, 255
    - with autofocus adjustments 53, 255
  - Contrast
    - adjusting 91
  - Contrast detection autofocus 70
  - Control buttons
    - using while recording video 218
  - Control dial 10, 159–160
    - icon on shooting screen indicating current function of 160
    - locking operation of 142, 157
    - using to activate Program Shift 25
    - using to change panorama direction 39, 51
    - using to move among enlarged images in playback mode 160
    - using to select scene type 34, 52
    - using to set shutter speed 28, 30, 159
  - Controls/items on bottom of camera 12
  - Controls on back of camera 10
  - Controls on front of camera 11
  - Controls on left side of camera 11
  - Controls on right side of camera 12
  - Controls on top of camera 9, 108
  - Control wheel 10, 157–158
    - assigning a function to 130
    - locking operation of 142, 157
    - using while recording video 218
  - Control with Smartphone menu option 233, 238
  - Copyright Info menu option 194
  - Creative Style comparison charts 93
  - Creative Style menu option 91–95
    - adjusting contrast, saturation, and sharpness 91–92
    - compared to Scene mode settings 94–95
    - incompatibility with other settings 93
    - saving adjusted settings 92–93
    - using with images in Raw format 93
  - CTRL for HDMI menu option 190
  - Custom Button 1 10, 145
    - assigning an option to 132–133
    - assigning an option to for playback mode 140
  - Custom Button 2 10, 145
    - assigning an option to 138
    - assigning an option to for playback mode 140
  - Custom button 3/Delete button 10, 157
    - assigning an option to 139, 157
    - using to delete images 157, 169
    - using to reset location of movable focus frame 157

- Custom Key (Playback) menu option 139–140
  - list of options that can be assigned 140
- Custom Key (Shooting) menu option 130–139
  - items that can be used during video recording 219
- Custom white balance
  - how to set 85–86

## D

- Date and time
  - setting 8, 193
- Date format adjustment 8, 193
- Date/Time Setup menu option 193
- DaVinci Resolve software 257
- Day for night shooting for movies 204
- Daylight Savings Time adjustment 8, 193, 194
- Deactivate Monitor option for control button 138
- Deep setting for Creative Style 94
- Delete Confirmation menu option 182
- Delete menu option 170
- Delete Registered AF Area menu option 69
- Deleting images
  - using C3/Delete button 169
  - using Delete menu option 170
- Demo Mode menu option 184
- Detail setting for Picture Profile 104
- Dial/Wheel Lock menu option 142, 157
- Diffraction
  - avoiding 28
- Digital Print Order Format (DPOF) function 176–177
- Digital Zoom 119
  - incompatibility with other settings 121
- Dimmed items on menu screen
  - meaning of 45–46
- Diopter adjustment wheel 10, 160
- Direction buttons
  - in general 158
- Direct manual focus (DMF) 15–16, 150
  - need to half-press shutter button when using MF Assist with 150
- Display button
  - using during video recording 225
  - using to switch among display screens 159
- Display Button menu option 123–125
- Display Continuous AF Area menu option 69
- Display Continuous Shooting Group menu option 172–173
- Display MAC Address menu option 238–239
- Display Media Info menu option 197
- Display panel 10, 147
- Display panel illumination button 147
- Display Quality menu option 182
- Display Rotation menu option 173
- Display screens
  - playback mode 168
  - shooting mode 123–125
- Down button 159
  - assigning an option to 139

- Drive mode menu option 52–58
  - using in Intelligent Auto mode 18
- DRO/Auto HDR menu option 88–91
  - effect of DRO setting on Raw images 90–91
  - incompatibility with other settings 90, 91
- DRO bracketing 58

## E

- Edit Device Name menu option 239–240
- Editing movies 227
- Electronic shutter 116–117
- Enlarge Image menu option 174
- Enlarge Initial Magnification menu option 174–175
- Enlarge Initial Position menu option 175
- Enlarging image in playback mode 167–168
  - using the AEL button for 20, 167
  - using the touch screen for 21, 168
  - using the zoom lever for 20, 167
- Entire Screen Average setting for Metering Mode 75–76
- Expand Flexible Spot setting for Focus Area 65
- Exposure bracketing
  - changing order of exposures 57
  - continuous 56–57
    - using flash with 57
  - incompatibility with other settings 58
  - single 57
    - using self-timer with 58
- Exposure compensation
  - procedure for using 145–146
    - using in Manual exposure mode 31
    - using with motion picture recording 218
- Exposure compensation dial 10, 145
  - relationship of setting to other settings 71
    - using while recording video 218
- Exposure Compensation menu option 70–71
- Exposure Compensation Setting menu option 83
- Exposure Mode (HFR) menu option 113, 204
- Exposure Mode (Movies) menu option 113, 201–204
  - selecting setting from Function menu 201
- Exposure Settings Guide menu option 29, 128
- Exposure Standard Adjustment menu option 77–78
- External flash
  - LumoPro LP180 248
  - Neewer NW320 247–248
  - Sony HVL-F20M 246
    - using as wireless flash controller 81, 246
  - Sony HVL-F32M 82, 247
    - using as wireless flash controller or remote 81, 247
  - Sony HVL-F43M 247
    - using as wireless flash controller or remote unit 81, 247
  - Sony HVL-F45RM 247, 248
  - Sony HVL-F60M 82, 247
    - using Manual exposure mode with 33, 248
  - Yongnuo YN560-IV 248
- External LCD monitor
  - Sony model no. CLM-FHD5 252

## External microphones

- Rode VideoMic Pro 254
- Sony model no. ECM-CG50 254
- Sony model no. ECM-GZ1M 253
- Sony model no. ECM-W1M 253
- Sony model no. ECM-XYST1M 253–254
- Sony model no. XLR-K2M 253

Eye AF option for control button 135

Eye-Fi card 6

Eye sensor 10, 160

**F**

## Face detection 110

- incompatibility with other settings 110
- relationship to Focus Area setting 110
- using in Intelligent Auto mode 16
- using touch screen with 110

Face Detection (Registered Faces) 109–110

Face Registration menu option 111

Fadeout effect for video recording 203

Fade to white effect for movie recording 204

File Format menu option 113, 204–205

File Number menu option 195

Fill-flash setting for flash mode 17, 79

## Filters

- using with RX10 IV 246

Final Cut Express software 21

Final Cut Pro software 21

Finder Color Temperature menu option 180

Finder/Monitor menu option 125

- using to black out LCD monitor 138

## Firmware

- displaying current version 198
- updating 198

## Flash

- diffusing 256
- general procedure for using 9, 17–18, 153
- incompatibility with other settings 17
- using with continuous shooting 17–18

Flash Compensation menu option 82–83

Flashing aperture or shutter speed value

- indication of inability to set normal exposure 27, 29

Flashing parts of image in playback mode 169

Flashing settings in Manual exposure mode 31

Flash Mode menu option 17–18, 78–82

Flash Off setting for Flash Mode 78

- unavailable in some shooting modes 18

Flash pop-up button 145

- requirement to pop up flash before using 17, 145

Flash shoe adapter, Sony model no. ADP-MAA 247

Flash synchronization speed 28, 32, 82

Flexible Spot setting for Focus Area 64–65

Focus Area menu option 62–66

- incompatibility with other settings 66, 162

## Focus frame

- moving around on display 64–65

using touch screen 64

Focus hold button 12, 135, 163–164

assigning an option to 139, 163

assigning an option to for playback mode 140

assigning Zoom Assist option to 164

Focus Hold option for control button 12, 135–136, 163–164

using for pull-focus effect 136, 164

Focus Magnification Time menu option 106–107, 152

Focus Magnifier menu option 105–106

compared to MF Assist option 106

operation for movie recording 106, 225

using touch screen with 106

using with manual focus 151

## Focus mode

selecting 15–16

Focus mode dial 11, 149

using during video recording 217–218

## Focus modes

list of 15

Focus range limiter switch 12, 36, 164

using for video recording 225

Focus range of lens 35–36, 255–256

Focus Ring Rotate menu option 109

Focus Standard option for control button 67, 134

assigning to Center button 139, 158

Folder Name menu option 197

Format menu option 195

For Viewfinder display screen 124, 155

Front lens ring 9, 148–149

Function button 10, 154–157

assigning an option to for playback mode 140, 157

using for Send to Smartphone option 231

using to lock operation of Control wheel and dial 157

using while recording video 218

Function menu 154–155

assigning options to 140–141

using to select Scene mode scene types 34, 52

using to select Superior Auto mode 24, 52

Function Menu Settings menu option 140–141, 154

**G**

Gamma Display Assist menu option 180–181

Gamma setting for Picture Profile 103

Graphic Display screen 123

Grid Line menu option 127

**H**

Hand-held Twilight setting 37

HDMI Information Display menu option 188–189

HDMI port 12, 163

connecting camera to HDTV 163

HDMI Resolution menu option 188

HDMI Settings menu option 188–190

HDR (high dynamic range) photography 89–90

using Manual exposure mode for 33, 90

HDR Painting setting for Picture Effect 98

Headphones jack 12, 163  
Hensel Strobe Wizard Plus flash trigger 249  
HFR Settings menu option 113–114, 206  
High Contrast Monochrome setting for Picture Effect 97  
High Frame Rate (HFR) recording procedure 219–221  
High ISO Noise Reduction menu option 51  
  incompatibility with other settings 51  
Highlight setting for Metering Mode menu option 76  
Histogram  
  playback mode 168–169  
  shooting mode 124

**I**

Icons for stills, movies, and HFR on menu screens 46  
Illustration setting for Picture Effect 100  
Image Data Converter software  
  location for downloading 3  
Image Index menu option 171–172  
Image Size (Dual Recording) menu option 114, 207  
Image Size menu option 48  
  incompatibility with other settings 49  
  relationship to zoom range 119  
Imaging Edge software 12, 190–192  
  features of 3  
  location for downloading 3  
  reading location data with 236  
  using for remote control of camera from computer 190–192  
  using to process Raw files 47, 90–91, 93  
iMovie software 21, 227  
In-Camera Guide option for control button 137  
Index screens in playback mode 21, 166–167  
Infrared photography 242  
Initial Focus Magnification menu option 107  
Intelligent Auto mode 22–23  
  incompatibility with other settings 22  
Interlaced video formats: 60i 206  
ISO Auto Minimum Shutter Speed menu option 74  
ISO menu option 71–73  
  effect of setting in Manual exposure mode 30–32  
  incompatibility with other settings 73  
  native values 73  
  range of values available 71  
  setting minimum and maximum values for Auto ISO 72

**J**

JPEG images 46

**K**

Kelvin units for color temperature 84  
Knee setting for Picture Profile 103

**L**

Landscape setting for Creative Style 94  
Landscape setting for Scene mode 36  
Language menu option 193

Large dotted focus frame 121  
LCD monitor 10, 160–161  
  switching between viewfinder and 125  
  tilting features of 160–161  
  touch pad features of 162  
  touch screen features of 161–162  
Left button 159  
  assigning a function to 139  
Lens  
  focal length range of 11  
Lens hood 256  
Lens Ring Setup menu option 9, 141, 241  
Level display screen  
  using with panoramas 40  
Light setting for Creative Style 94  
Live View Display menu option 27, 29, 31, 128–129  
  effect on Picture Effect settings 129  
  effect on viewing Creative Style settings 91  
  incompatibility with other settings 129  
  setting during video recording 225  
  using with external flash units 129, 248  
Location Information Link Setting menu option 235, 239  
Lock-on AF setting for Focus Area 65–66  
Long Exposure Noise Reduction menu option 32, 51  
  incompatibility with other settings 51

**M**

Macro setting 35–36  
  using manual focus with 36  
Manfrotto BeFree tripod 254  
Manual exposure mode 29–33  
  uses for 33  
  using Auto ISO with 31–32, 73  
  using exposure compensation in 31  
Manual Exposure mode (Movies) 203–204  
  range of available shutter speeds 203  
  using Auto ISO with 204  
Manual focus 16, 151–153  
  general use of 16  
  reasons for using 16  
  using autofocus with 134, 152  
Manual Shift 32–33, 136  
Marker Display menu option 116, 211–212  
Marker Settings menu option 116, 212  
Mechanical shutter 116–117  
Memory card  
  capacity for holding images and videos 6, 49, 201  
  formatting 7, 195  
  inserting into camera 7  
  operating camera without 4, 223  
  special requirements for some video formats 5, 200, 204, 220  
  speed requirements 6  
  types and capacities of 4–6  
Memory card compartment 12  
Memory menu option 60

Memory Recall mode 41–43

Memory Stick memory cards  
using in DSC-RX10 IV camera 5

Menu button 10, 154

Menu systems  
listing of 44  
navigating among 44–45

Metering Mode menu option 75–76  
incompatibility with other settings 76

MF Assist menu option 107–108, 151  
compared to Focus Magnifier 107  
need to half-press shutter button when using with DMF 107, 150  
not available for movie recording 108, 225  
using touch screen with 107

Microphone, built-in 9, 147

Microphone jack 12, 163

Micro-SD card  
using in DSC-RX10 IV camera 5

Miniature Effect setting for Picture Effect 99

M.M. (metered manual) indicator 30  
relationship to ISO setting 30

Mode dial 9, 147  
cannot take stills without video with dial set to Movie position 147  
effects of position on recording movies 214–215

Mode Dial Guide menu option 33, 181–183

Monitor Brightness menu option 179–180

Moon, photographing 242

Motion Interval Adjustment menu option 176, 227

Motion pictures  
editing with computer 227

Motion Shot feature 226–227  
adjusting interval for 227  
incompatibility with other settings 227

Movie button 10, 153–154  
limiting function to Movie mode 141–142, 153–154

Movie Button menu option 141–142, 153–154, 213–214

MOVIE option for control button 137

Movie recording  
adjusting sound volume for 209  
in PASM shooting modes 214–215  
overview of general procedure 19–20, 200–201  
summary of options for 224–225  
time limit on recording length 20, 200  
to external video recorder 222–224

Movie w/Shutter menu option 116, 189, 213

Multi Battery Adaptor, Sony model no. NPA-MQZ1K 12

Multi Frame Noise Reduction (MFNR) 72–73  
incompatibility with other settings 73

Multi Interface Shoe 9, 147

Multi port 12, 163

Multi setting for Metering Mode menu option 75, 76

My Menu system 198–199  
adding items to 199

## N

Network menu 236–240

Neutral setting for Creative Style 94

New Folder menu option 196

NFC active area on camera 12, 165, 232

NFC (near field communication) protocol 165  
using to connect camera to smartphone or tablet 232

Night Portrait setting 38

Night Scene setting for Creative Style 94

Night Scene setting for Scene mode 37

NO CARD error message 4, 117

Not Set option for control button 138

NTSC/PAL Selector menu option 183

NTSC video system 183

## O

Off setting for Picture Effect 95

On/off switch 9, 145

Optical zoom 119

Overlay icon in Superior Auto mode 24

## P

PAL video system 183

Panel illumination button 10

Panorama Direction menu option 39, 51  
using Control dial to change panorama direction 39, 51

Panoramas  
creating 38–41  
playback in camera 41

Panorama Size menu option 39, 51

Partial Color setting for Picture Effect 97  
adjusting range of colors for 97

PC Remote Settings menu option 191–192, 192–193

Peaking Color menu option 109

Peaking Level menu option 108, 152  
using with DMF 108, 152

Phase Detection Area menu option 70

Phase detection autofocus 70

Photo Capture menu option 177–178, 223, 242, 257

Photoflex LiteDome XS softbox 249

Photomatix Pro software 33

Picture Effect menu option 95–100  
adjusting parameters 95  
incompatibility with other settings 95, 100

Picture Profile comparison chart 102

Picture Profile menu option 100–104  
adjusting parameters 102–104  
characteristics of preset settings 101  
incompatibility with other settings 104

Playback  
movies  
general procedure 21, 225–226  
setting audio volume for 181

still images  
general procedures 20–21, 166–168

Playback button 10, 153  
 Playback menu 169–178  
 Playback option for control button 138  
 PlayMemories Home software 21, 227  
   location for downloading 3, 227, 228  
   reading location data with 236  
 PlayMemories Mobile app 230, 233, 234, 235  
 Pop Color setting for Picture Effect 96  
 Portrait setting for Creative Style 94  
 Portrait setting for Scene mode 35  
 Posterization setting for Picture Effect 96  
 Power Save Start Time menu option 183  
 Pre-AF menu option 68, 135  
 Printing images directly from camera 176–177  
 Priority Set in Auto White Balance menu option 87  
 Program Auto exposure mode (Movies) 202  
 Program mode 24–25  
 Program Shift 25  
   incompatibility with other settings 25  
   not available for video recording 225  
 Progressive video formats: 60p, 30p, etc. 205–206  
 Protect menu option 175–176  
 Proxy Recording menu option 114, 207  
 Pull-focus effect  
   using touch screen for 162

**Q**

Quality (Dual Recording) menu option 114, 207  
 Quality menu option 46–48  
 Quick Navi system 155–156

**R**

Range of Zoom Assist menu option 118, 137  
 Raw format 46–48  
   ability to alter settings after images captured 47  
   incompatibility with other settings 47, 48  
 Raw & JPEG option for Quality menu option 47–48  
 Rear lens ring 9, 148–149  
 Rear Sync setting for Flash Mode 80  
 Recall Custom Hold 1, 2, 3 options for control button 133, 255  
 Recall menu option 59  
 Rec Control menu option 189  
 Record Setting menu option 113, 205–206  
 Recover Image Database menu option 197  
 Red Eye Reduction menu option 83  
 Register AF Area + AF On option for control button 135  
 Register AF Area Hold option for control button 69, 134–135  
   incompatibility with other settings 69  
 Register AF Area Toggle option for control button 135  
 Register Custom Shooting Settings menu option 60–62, 255  
   storing settings to Recall Custom Hold slots 60–62  
 Release w/o Card menu option 4, 117–118  
 Remote Camera Control software  
   location for downloading 3  
   replaced by Imaging Edge software 190

Remote control of camera from computer 190–192  
 Remote controls  
   Sony model no. RM-SPR1 251  
   Sony model no. RMT-VP1K 250  
     using to reset time code 250  
   Sony model no. RM-VPR1 249  
   Vello Shutterboss II for Sony 251  
   Vello Shutterboss III for Sony 251  
 Reset EV Compensation menu option 71  
 Reset Network Settings menu option 240  
 Resetting camera settings 198  
 Retro Photo setting for Picture Effect 96–97  
 Rich-tone Monochrome setting for Picture Effect 98–99  
 Right button 159  
   assigning an option to 139  
 Rotate menu option 174  
 Rotating images in playback mode 174

## S

Saturation  
   adjusting 91  
 Saturation setting for Picture Profile 103  
 Saving still frame from movie 177–178  
 Scene mode 33–38  
   incompatibility with other settings 33  
   methods for selecting a scene setting 33–34  
   using Control dial to select scene setting 52  
 Scene recognition feature 22–23  
 Scene Selection menu option 33–34, 52  
   using Control dial to select scene type 52  
 SD card. See Memory card  
 Select REC Folder menu option 196  
 Self-timer 18, 55–56  
   incompatibility with other settings 56  
   using with exposure bracketing 257  
 Self-timer (Continuous) 56  
   incompatibility with other settings 56  
 Self-timer During Bracket menu option 58–59  
 Send to Computer menu option 229–230, 237  
 Send to Smartphone Function menu option 230, 236–237  
 Send to Smartphone option for control button 157, 231  
 Sensor plane indicator 9, 148  
 Sepia setting for Creative Style 94  
 Set File Name menu option 196  
 Setting Reset menu option 198  
 Setup menu 179–198  
 Sharpness  
   adjusting 91  
 Shooting modes  
   list of 22  
 Shutter button 9, 144  
   using to start and stop movie recording 144, 213  
 Shutter Priority exposure mode (Movies) 202–203  
   range of available shutter speeds 202–203  
 Shutter Priority mode 28–29  
 Shutter speed

- range of available settings 23, 25, 27, 28, 32
- Shutter Type menu option 116–117
  - incompatibility with other settings 117
- Single shooting setting for Drive Mode 52–53
- Single-shot autofocus 15, 149–150
- Slide Show menu option 173–174
- S-Log2 gamma curve 101
  - viewing movies on display screen 180–181
- S-Log3 gamma curve 101
  - viewing movies on display screen 180–181
- Slow-motion video
  - using 60p or 120p setting to achieve 205
- Slow Sync setting for Flash Mode 79–80
- Smart Teleconverter option for control button 137–138
  - incompatibility with other settings 138
- Smart Zoom 119
- Smile/Face Detection menu option 16, 109–110
- Smile Shutter 110
- Soft Focus setting for Picture Effect 98, 151
- Soft High-key setting for Picture Effect 97
- Soft Skin Effect menu option 104–105
  - using in Intelligent Auto mode 16
- Sony DSC-RX10 IV camera
  - features of 1
  - items included with 3
- Sony user's guide for RX10 IV
  - location for downloading 3
- Sony Video Light, HVL-LBPC 213, 252–253
- Sony Wireless Radio Commander, FA-WRC1M 248–249
  - using for wireless flash 82
- Sony Wireless Radio Receiver, FA-WRR1 248–249
  - using for wireless flash 82
- Specify Printing menu option 176–177
- Sports Action setting 35
- Spot AEL Hold option for control button 136
- Spot AEL Toggle option for control button 136–137
- Spot focus feature for movie recording 162
- Spot Metering Point menu option 76
- Spot setting for Metering Mode menu option 75, 76
  - coordinating with focus frame setting 75, 76
  - observing effects on display screen 75
- SSID/PW Reset menu option 239
- Standard setting for Creative Style 94
- SteadyShot (Movies) menu option 115, 210
  - cropping of video frame with 211
  - incompatibility with other settings 211
- SteadyShot (Still Images) menu option 118
- Step-by-step guides
  - connecting with NFC 232
  - high frame rate (HFR) video recording 219
  - receive location information from smartphone via Bluetooth 235
  - sending images to a computer 228
  - sending images to a smartphone 230
  - taking pictures in Intelligent Auto mode 13
  - using a smartphone or tablet as a remote control 233
  - using Sony's light-based wireless flash system 81

- using Sony's radio-based wireless flash system 82
- Step zoom 122, 240–241
  - not available for movie recording 122, 225
- Still images
  - capturing during video recording 207, 213, 223
- Street photography 241–242
- Sunset setting for Creative Style 94
- Sunset setting for Scene mode 36–37
- Superior Auto mode 16, 23–24
  - use of multiple-shot processing in 24
- Sweep Panorama mode 38–41
  - incompatibility with other settings 39
  - using exposure compensation with 40
- Switch V/H AF Area menu option 66

## T

- Tables
  - behavior of RX10 IV for video recording in various shooting modes 215
  - Camera Settings1 menu items that can be adjusted during video recording 216
  - results of RX10 IV continuous shooting tests 54
  - settings for recording to Atomos Shogun video recorder 222
  - suggested Camera Settings2 menu settings for movie recording in Auto mode 19
  - suggested control assignments for movie recording 224
  - suggested menu settings for recording movies in Movie mode 224
  - suggested settings for Camera Settings1 menu in Intelligent Auto mode 14
  - suggested settings for shooting panoramas 40–48
  - zoom ranges at various image sizes 121
- TC Format menu option 187
- TC Make menu option 188
- TC Output menu option 189
- TC Preset menu option 187
- TC Run menu option 187
- TC/UB Display Setting menu option 186–187
- TC/UB Settings menu option 185–188
  - incompatibility with other settings 185
- Tethered shooting 12, 190–192, 257
- Tile Menu menu option 181
- Time code
  - in general 186
  - resetting 250
- Time-lapse photography 256–257
  - with external intervalometer 192, 257
  - with Imaging Edge software 192, 257
- Time zone
  - changing for travel 194
  - setting 194
- Touch Operation menu option 16, 184
- Touch Pad Settings menu option 162, 184–185
  - using Relative setting with Focus Area set to Wide 185
- Touch screen features of camera 10, 161–162, 184
  - tapping screen to magnify image in playback mode 162,



- 184
- tapping screen to magnify it with manual focus 162, 184
  - during video recording 218, 225
- touch focus features 16, 62–63, 161–162, 184–185
  - not available in Sweep Panorama mode 41
  - when recording movies 162, 218
- touch pad features 162, 184–185
  - setting area of screen to use as pad 162
- Toy Camera setting for Picture Effect 95–96
- Tripod socket 165
- Tv notation for time value or shutter speed 29

## U

- UB Preset menu option 187
- UB Time Record menu option 187, 188
- USB Connection menu option 190–192
- USB LUN Setting menu option 192
- USB Power Supply menu option 192
- User bit
  - in general 187
  - using to display current time 188

## V

- Version menu option 198
- VGA setting for Image Size
  - available only with 4:3 aspect ratio 48
- Video editing software
  - web address of list by Sony 204, 227
- Video files
  - locations on memory cards 221
- Video Light Mode menu option 116, 213
- Video recording. *See* Movie recording
- Viewfinder 10
  - adjusting for user's vision 160
  - switching between LCD monitor and 125, 160
- Viewfinder Brightness menu option 180
- View Mode menu option 20, 171
- View on TV menu option 237
- Vivid setting for Creative Style 94
- Volume Settings menu option 181

## W

- Watercolor setting for Picture Effect 99
- WD TV Live media player 237

- White balance bracketing 58
  - changing order of exposures 58
- White balance comparison chart 87
- White Balance menu option 84–87
  - adjusting after shooting for Raw images 87
  - adjusting with color axes 86
  - setting a custom white balance 85–86
  - setting using color temperature value 85
- Wide setting for Focus Area 62
- Wi-Fi Settings menu option 238–239
- Wind Noise Reduction menu option 115, 210
- Windows Movie Maker software 21, 227
- Wireless setting for Flash Mode 81–82
  - Sony's light-based system 81–82
  - Sony's radio-based system 82
- WPS button on router 229
- WPS Push menu option 229, 238
- Write Date menu option 143

## X

- XAVC S 4K video format 204
  - requirement for using certain type of memory card 204
- XAVC S HD video format 205
  - requirement of using certain type of memory card with 205

## Y

- Yongnuo flash trigger and receiver, RF603N II 248

## Z

- Zebra menu option 125–127
- Zoom Assist option for control button 118, 137, 240
  - assigning to Focus Hold button 164
- Zoom Function on Ring menu option 122
- Zoom lens
  - rule of thumb for choosing shutter speed for telephoto shots 240
  - using telephoto power of 240
  - ways to avoid image blur at telephoto settings 240
- Zoom lever 9, 144–145
- Zoom Ring Rotate menu option 122, 241
- Zoom Setting menu option 118–121
- Zoom Speed menu option 121, 241