

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Choosing and Inserting a Memory Card	4
Setting the Date, Time, and Language	7
CHAPTER 2: BASIC OPERATIONS	9
Introduction to Main Controls	9
Top of Camera	9
Back of Camera	10
Front of Camera	11
Left Side of Camera	11
Right Side of Camera	12
Bottom of Camera	12
Taking Pictures in Intelligent Auto Mode	13
Variations from Fully Automatic	15
Focus	15
Focus Modes	15
Other Settings	16
Flash	17
Drive Mode: Self-Timer and Continuous Shooting	18
Overview of Movie Recording	19
Viewing Pictures	20
Review While in Shooting Mode	20
Reviewing Images in Playback Mode	20
Playing Movies	21
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	22
Intelligent Auto Mode	22
Superior Auto Mode	23
Program Mode	24
Aperture Priority Mode	26
Shutter Priority Mode	28
Manual Exposure Mode	29
Scene Mode	33
Portrait	35
Sports Action	35
Macro	35
Landscape	36
Sunset	36
Night Scene	37
Hand-Held Twilight	37
Night Portrait	38
Anti Motion Blur	38
Sweep Panorama Mode	38
Memory Recall Mode	41

CHAPTER 4: THE CAMERA SETTINGS1 MENU

44

Quality	46
Image Size	48
Aspect Ratio	49
Panorama Size and Panorama Direction	51
Long Exposure Noise Reduction	51
High ISO Noise Reduction	51
Color Space	51
Auto Mode	52
Scene Selection	52
Drive Mode.	52
Single Shooting	52
Continuous Shooting	53
Self-Timer	55
Self-Timer (Continuous)	56
Continuous Exposure Bracketing	56
Single Exposure Bracketing	57
White Balance Bracketing	58
DRO Bracketing	58
Bracket Settings	58
Recall	59
Memory	60
Register Custom Shooting Settings.	60
Focus Area	62
Wide	63
Flexible Spot	64
Expand Flexible Spot	65
Lock-on AF	65
Switch Vertical/Horizontal AF Area	66
AF Illuminator	67
Center Lock-on AF	67
AF w/Shutter.	68
Pre-AF	68
AF Area Registration.	68
Delete Registered AF Area.	69
AF Area Auto Clear.	69
Display Continuous AF Area.	69
Phase Detection Area	70
Exposure Compensation	70
Reset EV Compensation	71
ISO	71
Multi Frame Noise Reduction	72
ISO Auto Minimum Shutter Speed	74
Metering Mode	75
Spot Metering Point	76
AEL with Shutter	76
Exposure Standard Adjustment.	77
Flash Mode.	78
Flash Off.	78
Autoflash	78
Fill-Flash	79
Slow Sync	79
Rear Sync	80
Wireless	81
Using Sony's Light-Based Wireless Protocol.	81
Using Sony's Radio-Based Flash System	82

Flash Compensation 82

Exposure Compensation Setting 83

Red Eye Reduction 83

White Balance 84

Priority Set in Auto White Balance 87

DRO/Auto HDR 88

Creative Style 91

 Adjusting Contrast, Saturation, and Sharpness 91

 Standard 94

 Vivid 94

 Neutral 94

 Clear 94

 Deep 94

 Light 94

 Portrait 94

 Landscape 94

 Sunset 94

 Night Scene 94

 Autumn Leaves 94

 B/W 94

 Sepia 94

Picture Effect 95

 Off 95

 Toy Camera 95

 Pop Color 96

 Posterization 96

 Retro Photo 96

 Soft High-Key 97

 Partial Color 97

 High Contrast Monochrome 97

 Soft Focus 98

 HDR Painting 98

 Rich-Tone Monochrome 98

 Miniature Effect 99

 Watercolor 99

 Illustration 100

Picture Profile 100

Soft Skin Effect 104

Focus Magnifier 105

Focus Magnification Time 106

Initial Focus Magnification 107

MF Assist 107

Peaking Level 108

Peaking Color 109

Focus Ring Rotate 109

Smile/Face Detection 109

 Face Detection On (Registered Faces) 109

 Face Detection On 110

 Smile Shutter 110

Face Registration 111

Auto Object Framing 111

CHAPTER 5: THE CAMERA SETTINGS2 MENU

Exposure Mode (Movies) 113

Exposure Mode (HFR) 113

File Format 113

Record Setting	113
HFR Settings	113
Quality (Dual Recording)	114
Image Size (Dual Recording)	114
Auto Dual Recording	114
Proxy Recording	114
AF Drive Speed	114
AF Tracking Sensitivity	114
Auto Slow Shutter	114
Audio Recording	115
Audio Recording Level	115
Audio Level Display	115
Audio Out Timing	115
Wind Noise Reduction	115
SteadyShot (Movies)	115
Marker Display	116
Marker Settings	116
Video Light Mode	116
Movie w/Shutter	116
Shutter Type	116
Release without Card	117
SteadyShot (Still Images)	118
Range of Zoom Assist	118
Zoom Setting	118
Zoom Speed	121
Zoom Ring Rotate	122
Zoom Function on Ring	122
Display Button	123
Finder/Monitor	125
Zebra	125
Grid Line	127
Rule of Thirds Grid	127
Square Grid	127
Diagonal Plus Square Grid	128
Exposure Settings Guide	128
Live View Display	128
Auto Review	130
Custom Key (Shooting)	130
Control Wheel	131
Custom Button 1	132
Recall Custom Hold 1, 2, and 3	133
AF/MF Control Hold	133
AF/MF Control Toggle	134
Focus Standard	134
Register AF Area Hold/Register AF Area Toggle/Register AF Area + AF On	134
Eye AF	135
AF-On	135
Focus Hold	135
AEL Hold	136
AEL Toggle	136
Spot AEL Hold	136
Spot AEL Toggle	136
In-Camera Guide	137
Movie	137
Zoom Assist	137
Smart Teleconverter	137
Bright Monitoring	138

- Deactivate Monitor 138
- Playback 138
- Not Set 138
- Custom Button 2 138
- Custom Button 3 139
- Center Button 139
- Left Button 139
- Right Button 139
- Down Button 139
- AEL Button 139
- Focus Hold Button 139
- Custom Key (Playback) 139
- Function Menu Settings 140
- Lens Ring Setup 141
- Movie Button 141
- Dial/Wheel Lock 142
- Audio Signals 143
- Write Date 143

CHAPTER 6: PHYSICAL CONTROLS 144

- Shutter Button 144
- Zoom Lever 144
- On/Off Switch 145
- Flash Pop-up Button 145
- Custom Button 1 145
- Custom Button 2 145
- Exposure Compensation Dial 145
- Display Panel and Display Panel Illumination Button 147
- Mode Dial 147
- Multi Interface Shoe 147
- Microphone 147
- Sensor Plane Indicator 148
- Aperture Ring and Aperture Click Switch 148
- Front and Rear Lens Rings 148
- Focus Mode Dial 149
 - Single-Shot AF 149
 - Automatic AF 150
 - Continuous AF 150
 - Direct Manual Focus 150
 - Manual Focus 151
- AF Illuminator/Self-Timer Lamp 153
- Built-in Flash 153
- Playback Button 153
- Movie Button 153
- Menu Button 154
- Function Button 154
 - Function Menu 154
 - Quick Navi System 155
 - Dial/Wheel Lock 157
 - Send to Smartphone 157
- Custom 3/Delete Button 157
- Control Wheel and Its Buttons 157
 - Control Wheel 157
 - Center Button 158
 - Direction Buttons 158
 - Up Button: Display 159

Left Button	159
Right Button	159
Down Button.	159
AEL Button	159
Control Dial	159
Viewfinder and Eye Sensor	160
Diopter Adjustment Wheel	160
LCD Monitor	160
Tilting Features.	160
Touch Screen Features.	161
Access Lamp	162
Ports for Audio, HDMI, and Other Connections	163
Focus Hold Button.	163
Focus Range Limiter Switch	164
Right Side of Camera	164
Bottom of Camera	165

CHAPTER 7: PLAYBACK AND PRINTING

166

Normal Playback.	166
Index View and Enlarging Images.	166
Playback Display Screens	168
Deleting Images with the Delete Button	169
Playback Menu.	169
Delete	170
View Mode	171
Image Index.	171
Display Continuous Shooting Group	172
Display Rotation	173
Slide Show	173
Rotate	174
Enlarge Image.	174
Enlarge Initial Magnification	174
Enlarge Initial Position	175
Protect.	175
Motion Interval Adjustment	176
Specify Printing	176
Photo Capture	177

CHAPTER 8: THE SETUP MENU AND MY MENU

179

Setup Menu	179
Monitor Brightness	179
Viewfinder Brightness	180
Finder Color Temperature	180
Gamma Display Assist	180
Volume Settings	181
Tile Menu	181
Mode Dial Guide	181
Delete Confirmation	182
Display Quality	182
Power Save Start Time	183
NTSC/PAL Selector	183
Touch Operation	184
Touch Pad Settings	184
Demo Mode.	185
TC/UB (Time Code/User Bit) Settings	185

TC/UB Display Setting	186
TC Preset	187
UB Preset	187
TC Format	187
TC Run	187
TC Make	188
UB Time Record	188
HDMI Settings.	188
HDMI Resolution.	188
24p/60p Output	188
HDMI Information Display.	188
TC Output	189
Rec Control.	189
CTRL for HDMI	190
4K Output Select	190
Memory Card + HDMI	190
HDMI Only (30p)	190
HDMI Only (24p)	190
HDMI Only (25p)	190
USB Connection	190
USB LUN Setting	192
USB Power Supply	192
PC Remote Settings.	192
Language	193
Date/Time Setup	193
Area Setting.	194
Copyright Info	194
Format.	195
File Number	195
Set File Name	196
Select REC Folder	196
New Folder	196
Folder Name	197
Recover Image Database.	197
Display Media Info	197
Version	198
Setting Reset	198
My Menu	198

CHAPTER 9: MOTION PICTURES

Movie-Making Overview	200
Details of Settings for Shooting Movies	201
Movie-Related Menu Options	201
Exposure Mode (Movies)	201
Program Auto	202
Aperture Priority	202
Shutter Priority	202
Manual Exposure	203
Exposure Mode (HFR)	204
File Format	204
XAVC S 4K	204
XAVC S HD.	205
AVCHD.	205
Record Setting	205
XAVC S 4K	205
XAVC S HD.	205

AVCHD	206
HFR Settings	206
Quality (Dual Recording)	207
Image Size (Dual Recording)	207
Auto Dual Recording	207
Proxy Recording	207
AF Drive Speed.	208
AF Tracking Sensitivity.	208
Auto Slow Shutter	208
Audio Recording.	209
Audio Recording Level	209
Audio Level Display	210
Audio Out Timing	210
Wind Noise Reduction.	210
SteadyShot (Movies).	210
Marker Display	211
Marker Settings	212
Video Light Mode	213
Movie w/Shutter	213
Movie Button.	213
Effects of Mode Dial Position on Recording Movies	214
Effects of Camera Settings1 Menu Settings on Recording Movies	216
Effects of Physical Controls When Recording Movies	217
High Frame Rate Recording	219
Recording to an External Video Recorder.	222
Shooting Still Images During Video Recording.	223
Summary of Options for Recording Movies	224
Other Settings and Controls for Movies	225
Movie Playback	225
Motion Shot Feature	226
Editing Movies	227

CHAPTER 10: WI-FI, BLUETOOTH, AND OTHER TOPICS

228

Wi-Fi Features	228
Sending Images to a Computer	228
Sending Images to a Smartphone	230
Connecting with NFC.	232
Using a Smartphone or Tablet as a Remote Control	233
Bluetooth Features	235
The Network Menu	236
Send to Smartphone Function.	236
Send to Computer	237
View on TV	237
Control with Smartphone	238
Airplane Mode	238
Wi-Fi Settings	238
WPS Push.	238
Access Point Settings	238
Display MAC Address	238
SSID/PW Reset	239
Bluetooth Settings	239
Location Information Link Setting	239
Edit Device Name.	239
Reset Network Settings.	240
Other Topics	240
Using the Zoom Lens.	240

Street Photography 241
 Infrared Photography 242
 Photographing the Moon 242

APPENDIX A: ACCESSORIES 243

Cases 243
 Batteries and Chargers 244
 AC Adapters and Other Power Sources 244
 Add-On Filters and Lenses 246
 External Flash Units and Flash Triggers 246
 Remote Controls 250
 Cable Release 251
 Sony Video Light 252
 External LCD Monitor 252
 External Microphones 253
 External Video Recorder 254
 Tripods 254

APPENDIX B: QUICK TIPS 255

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 258

Websites and Videos 258
 Digital Photography Review 258
 Reviews and Demonstrations of the RX10 IV 258
 White Knight Press 258
 The Official Sony Site 258
 Other Resources 259

Index 261