

Index

Symbols

1-Area setting for AF Mode 112–113
1 Shot Raw + JPG option for function button 158
1 Shot Spot Metering option for function button 158
2d-curtain flash. See Flash Synchro setting for Flash Mode
4K Burst setting for 4K Photo option 91
4K Burst (S/S) setting for 4K Photo option
recording of audio with 90
4K Down Convert sub-option for HDMI Recording Output
option 190
4K Live Cropping option on Motion Picture menu 178
4K Photo Bulk Saving menu option 129
4K Photo menu option 60
4K Photo setting for drive mode dial 89–92
advantages of 90
combining 4K Photo bursts into a light composition
129–130
effect on Picture Size menu options 55
extracting a still image from 4K burst 92–93
incompatibility with other settings 90
requirement of high-speed memory card 90
using autofocus with 91
4K Pre-burst setting for 4K Photo option 91
4K video recording
in general 90
size of video frame 90
49-Area setting for AF Mode 110

A

AC adapter
connecting to camera 121
generic models 213–214
Panasonic model no. DMW-AC10 213
Activate menu option
using to activate V-Log L option 173
AF/AE Lock button 100
AF/AE Lock Hold menu option 140
Incompatibility with other settings 140
AF/AE Lock menu option 139
inability to lock exposure in Manual exposure mode 140
AF/AE Lock option for function button 156
incompatibility with other settings 156
AF+AE option for Touch AF 164
AF Assist Lamp menu option 121, 142
AF assist/self-timer lamp 121
disabling operation of 121

AFC setting for focus mode lever 12
AF Macro option for Macro Mode 114, 209
AF+MF menu option 144
effect during remote operation of camera by Wi-Fi 204
AF Mode settings 108–114
list of 108
using in Intelligent Auto mode 12
AF-On menu option 140
AF-On option for function button 156
AFS/AFF menu option 58
incompatibility with other settings 58
using in Intelligent Auto mode 13
AFS/AFF option on Motion Picture menu 184
AFS/AFF setting for focus mode lever 99
AF Sensitivity menu option 143
AF Tracking setting for AF Mode 109–110
incompatibility with other settings 110
Aperture
range of available settings 24, 27, 121
dependent on zoom level of lens 27
relationship to depth of field 26
Aperture bracketing 62
incompatibility with other settings 62
Aperture Priority mode 25–27
Aperture Priority mode (movies) 175
Appetizing Food scene setting 36
Artistic Nightscape scene setting 35
Aspect ratio
relationship to focal length range 121
relationship to image size 54
Aspect Ratio menu option 54–55
relationship to resolution 54
using for 4K Photo images 90
Atomos Shogun video recorder 194–195, 216
Auto Exposure Compensation menu option 75
Autofocus system
adjusting speed of 143–144
Auto ISO setting
using in Manual exposure mode 30, 104, 218
Auto LVF/Monitor Off menu option 169
Auto Review menu option 152–153
AVCHD files
locating on memory card 180, 200
AVCHD video format 180–181

B

Back button focus 140
Backlight compensation 22
Backlit Softness scene setting 34
Battery
charging 3
generic replacement 213
Panasonic model no. DMW-BLC12PP 213
Battery charger, external
Panasonic model no. DE-A79 3
Beep menu option 167

Bit Mode sub-option for HDMI Recording Output option 189
 Bit rate for video recording 181
 Bleach Bypass setting for Creative Control mode 44
 Blurred background
 using wide aperture to achieve 26
 Bracket menu option 60–64
 incompatibility with other settings 64
 Bright Blue Sky scene setting 34
 BULB setting for shutter speed 30
 incompatibility with other settings 30
 Burst Rate menu option 60
 Burst shooting setting for drive mode dial 88–89
 factors affecting speed of 89
 general procedure 14
 H option 88
 incompatibility with other settings 89
 L option 88
 M option 88
 remaining images indicator on shooting screen 88
 selecting speed of 88

C

C4K setting for Recording Quality for movies 172
 aspect ratio of 183
 how to set 183
 Calendar index screen in playback mode 123
 Cases
 Crumpler 6 Million Dollar Home Bag 212
 Lowepro Inverse 100 AW 212
 VanGoddy Laurel 212
 Center Marker menu option 148
 Cinelike D option for Photo Style 177
 Cinelike V option for Photo Style 177
 Cinema (24.00 Hz) setting for System Frequency 172
 Clear in Backlight scene setting 34
 Clear Night Portrait scene setting 36
 Clear Nightscape scene setting 35
 Clear Portrait scene setting 33
 Clear Retouch menu option 130–131
 Clear Sports Shot scene setting 37
 Clock Set menu option 166
 Color Bars option on Motion Picture menu 194
 Color Space menu option 80
 incompatibility with other settings 80
 Color temperature 105
 Color temperature ratings of various light sources 105
 Color tone
 adjusting in Intelligent Auto Plus mode 15, 23–24
 Color tone adjustment for Monochrome Photo Style 51
 Communication Light menu option 76
 Constant Preview menu option 29, 150
 Continuous AF option on Motion Picture menu 185
 Controls on back of camera 6–7, 99–119
 Controls on bottom of camera 8, 121
 Controls on front of camera 7, 120–121
 Controls on left side of camera 8, 119–120

Controls on right side of camera 7, 120
 Controls on top of camera 6, 84–99
 Cool Night Sky scene setting 35
 Count Up sub-option for Time Code option 188
 Creative Control mode 37–47
 incompatibility with other settings 39
 making adjustments to settings 39
 selecting setting 39–41
 similarity to Filter Settings menu option 37
 using for video recording 39, 176
 using touch screen icons with 39–40
 using with Raw setting for Quality 39, 219
 Creative Video mode 181–182
 Cropping menu option 134
 incompatibility with other settings 134
 Cross Process setting for Creative Control mode 43
 Cursor Button Lock option for function button 158
 Custom menu 138–165
 Custom mode 46
 Custom Multi setting of AF Mode 111–112
 Custom Set Memory menu option 138–139
 Cute Dessert scene setting 37

D

Date and time
 displaying on screen 102
 setting 9, 166
 Date format adjustment 166
 DaVinci Resolve software
 using to grade V-Log L video footage 177
 Defocus control option
 using in Creative Control mode 39
 using in Intelligent Auto Plus mode 14, 23
 Delete Confirmation menu option 137
 Deleting images 115
 Demo Mode menu option 173
 Depth from Defocus system 1
 Depth of field
 relationship to aperture setting 26
 Dial Operation Switch option for function button 119, 158, 162
 list of available settings for dials 162
 Dial Operation Switch Setup menu option 119, 162
 Dial Settings menu option 119, 162
 Diffraction Compensation menu option 79
 incompatibility with other settings 79
 Diffraction Compensation option on Motion Picture menu 186
 Digital Zoom menu option 79–80
 incompatibility with other settings 80
 Digital Zoom option on Motion Picture menu 187
 Dimmed items on menu screens
 meaning of 49
 Diopter adjustment dial 116
 Direct Focus Area menu option 114, 143
 Direction buttons 103–115

Display button 100–103
using to navigate quickly through menus 49, 219
using to switch among display screens 100
using to switch dial used for ISO and ISO limit adjustments 102, 103
using to switch exposure compensation and flash compensation adjustments 86, 103
using to switch Highlight Shadow display screens 65, 103
using to test wireless flash setup 77, 103

Display screens
playback mode 102
recording mode 100–102

Distinct Scenery scene setting 34

Dolly Zoom option on Motion Picture menu 178

Down button
functions of 114–115

DPOF (Digital Print Order Format) printing 136

Drive Mode dial 88–99
using in Intelligent Auto mode 13–14, 22

Drop-frame or non-drop-frame time code
selecting 189

Duration Time sub-option for Auto Review menu option 152–153

Dynamic Monochrome setting for Creative Control mode 42

E

Economy menu option 169

Enlarging image in playback mode 17–18, 123
returning image to normal size 123

E-Stabilization (Video) menu option 80–81

Exposure bracketing 60–61
adjusting while setting exposure compensation 86, 105
using for HDR images 60
using in Intelligent Auto Plus mode 23

Exposure compensation 86
adjusting in Creative Control mode 39
adjusting in Intelligent Auto Plus mode 14
and video recording 176
limited adjustment range for movies 176
not available in Manual exposure mode 30
retaining value after camera powered off 171
switching functions of front and rear dials for adjustments 86
using in Intelligent Auto Plus mode 23

Exposure Compensation Reset menu option 86, 171

Exposure Meter menu option 25, 27, 150

Exposure Mode option on Motion Picture menu 175–176, 183

Expressive setting for Creative Control mode 40

Extended ISO menu option 78–79

External flash units
LumoPro LP180 214
Panasonic DMW-FL200L 214
Panasonic DMW-FL360L 214
Panasonic DMW-FL580L 214
Yongnuo YN560-IV 215

External video recorder
recording video to 194–195

Extra Optical Zoom 55–56
incompatibility with other settings 55
relationship to Picture Size setting 55

Eye sensor 7, 116

Eye Sensor AF menu option 141–142

Eye Sensor menu option 163
LVF/Monitor Switch sub-option 163
Sensitivity sub-option 163

F

Face/Eye Detection setting for AF Mode 12, 109
changing eye or face camera focuses on 109

Face Recognition Edit menu option 137

Face Recognition menu option 81–82

Fadeout effect for video recording 175–176

Fantasy setting for Creative Control mode 45

Fast-motion video
using Slow/Quick option to produce 177–178
using Variable Frame Rate menu option to produce 183

Favorite menu option 135

Fill-flash 72–73

Filter effect adjustment for Monochrome Photo Style 51

Filters
using with FZ2500 216

Filter Settings menu option 53–54
compared to Creative Control mode 53
selecting a setting 53
settings unavailable for video recording 198
using with Quality set to Raw 54, 219

Filter Settings option on Motion Picture menu
settings not available for video recording 177

Fine setting for Quality 57

Firing Mode menu option 72
available only with built-in flash unit 72

Firmware version
displaying 171
updating 171

Flash Adjustment menu option 75

Flash, built-in unit 87
diffusing 218
using in Intelligent Auto mode 11
using in Intelligent Auto Plus mode 24

Flashing highlights in playback mode 148–149

Flash menu option 71–77
incompatibility with other settings 71

Flash Mode menu option 72–74

Flash release switch 6

Flash shoe. See Hot shoe

Flash Synchro setting for Flash Mode 74–75
incompatibility with other settings 75

Flicker Decrease option on Motion Picture menu 190

Focus
general techniques 12–13

Focus Area Set option for function button 114, 158

Focus bracketing 62–63
 compared to Post Focus feature 63
F
 Focus frame
 moving around on display 114
 Focus mode lever 99
 Focus/Release Priority menu option 143
 effect on burst shooting 89, 143
 Focus ring 88
 Focus Stacking option 94–96
 incompatibility with other settings 96
 Forced On setting for Flash Mode 72–73
 Forced On with Red Eye setting for Flash Mode 73
 Format menu option 173
 Free Run setting for Time Code 188
 Freeze Animal Motion scene setting 37
 Front dial 85
 using to adjust flash compensation 86
 using to adjust ISO limit setting 78
 using to navigate among menu systems 48, 219
 Function buttons
 assigning functions to for playback mode 159
 assigning functions to for recording mode 159
 Fn1 button
 default assignment of 119
 Fn2 button
 default assignment of 119
 Fn3 button
 default assignment of 119
 Fn4 button 85–86
 using to adjust exposure compensation 86
 Fn5 button
 functions of 100
 using to add markers to 4K Burst (S/S) sequence 91
 Fn6 button
 functions of 115–116
 Fn7 button
 functions of 116
 Function Button Set menu option 153–159

G

Geotagging. See Location Logging menu option
 Glistening Water scene setting 34
 Glittering Illuminations scene setting 35
 Google Drive
 uploading images to 220
 Guide Line menu option 148

H

Half Press Release menu option 141
 Handheld Night Shot scene setting 36
 HDMI connection to TV
 setting output resolution for 169
 HDMI port 120
 outputting time code through 189
 HDMI Recording Control sub-option for HDMI Recording
 Output Option 190

HDMI Recording Output option on Motion Picture Menu
 189–190
 HDMI Time Code Output sub-option for Time Code option
 189
 HDR menu option 67–69
 making settings for 68
 Headphones port 120
 Headphone Volume menu option 167
 High Dynamic setting for Creative Control mode 43
 High Key setting for Creative Control mode 41
 Highlight menu option 148–149
 Highlight Shadow menu option 65
 saving a custom setting 65
 Highlight Shadow option on Motion Picture menu 185
 Histogram
 moving on display 147
 playback mode 102
 shooting mode 146–147
 Histogram menu option 146–147
 Hot shoe 87

I

i.Dynamic (Intelligent Dynamic) menu option 66
 i.Dynamic option on Motion Picture menu 185
 i.Handheld Night Shot menu option 67
 iHDR menu option 67
 Image numbers
 resetting 171
 iMovie software 200
 Impressive Art setting for Creative Control mode 42
 Index screens in playback mode 17, 122–123
 Info Display sub-option for HDMI Recording Output option
 189
 Intelligent Auto mode 20–22
 settings unavailable with 21
 switching to Intelligent Auto Plus mode 21
 Intelligent Auto Plus mode 14–15, 22–24
 features of 23–24
 selecting 22
 settings unavailable with 15, 22
 Intelligent ISO setting 104
 incompatibility with other settings 28, 104
 Interlaced video formats 181
 Interval timer. See Time Lapse/Stop Motion Animation setting
 for drive mode dial
 i.Resolution (Intelligent Resolution) menu option 66–67
 incompatibility with other settings 66–67
 relationship to iZoom option 79
 i.Resolution option on Motion Picture menu 186
 Irfanview software program 33, 39
 ISO. See Sensitivity (ISO)
 ISO Increments menu option 78
 ISO Limit Set menu option 78, 104
 adjusting ISO limit with front dial 78
 i.Zoom (Intelligent Zoom) menu option 79
 incompatibility with other settings 79

i.Zoom option on Motion Picture menu 187

J

JPEG files 57
compression of 57
size of 57
Jump Snap feature 204

K

Kelvin units 105
Key icon in playback mode for protected image or video 136

L

Language
setting 9, 170
Language menu option 170
LCD monitor 116–119
adjusting brightness, contrast, colors of 168
setting display quality of 167
switching between viewfinder and 116, 163
tilting and swiveling features of 116–117
Left button
functions of 108–114
Lens
focal length range of 7
minimum focus distance 121, 209
retraction in playback mode 100, 161
specifications of 121
Lens cap
attaching to camera 5
Lens hood
using 5
Lens Position Resume menu option 161
Lens Retraction menu option 161
Level Gauge Adjustment menu option 172
Level gauge, displaying 101
Level Shot option on Motion Picture menu 185
incompatibility with other settings 185
Light Composition menu option 129–130
Live View Mode menu option 167–168
Location Logging menu option 125–126
Locking exposure 58, 139–140
Locking focus 100, 139–140
LoiLoScope2 software
where to download 3
Long Shutter Noise Reduction menu option 79
incompatibility with other settings 79
Low Key setting for Creative Control mode 41
Luminance Level option on Motion Picture menu 187
LVF button
function of 116, 163
LVF Display Style menu option 151
LVF/Monitor Switch sub-option of Eye Sensor menu option 163

M

Macro Mode options 114, 209
Macro photography 209–210
using Focus Stacking with 210
using Post Focus feature with 210
Macro Zoom option for Macro Mode 114
incompatibility with other settings 114
Manfrotto BeFree tripod 216
Manual exposure mode 28–30
icons on screen 29
reasons for using 28
using Auto ISO with 30, 218
using for HDR images 28
Manual Exposure mode (movies) 175–176
Auto ISO not available with 176
range of available shutter speeds 175
Manual Flash Adjustment menu option 75
Manual focus
aids to focusing 99–100
general procedure for using 13, 99–100
options for magnifying screen 13, 144–145
using autofocus in manual focus mode 140
using in conjunction with autofocus 144
Master Pedestal Level option on Motion Picture menu 186
Memory card
capacity for storing images and videos 4
considerations for choosing 4
inserting into camera 5
requirement of UHS Speed Class 3 for 4K video recording 4,
5
types of 4
Memory card compartment 120
Menu Background menu option 170
Menu Guide menu option 165
Menu Information menu option 170
Menu Resume menu option 48, 170
Menu screens
navigating through 49
Menu/Set button
functions of 115
Menu systems
listing of 48
navigating among 48
Metering Mode menu option 58–59
incompatibility with other settings 59
Metering Mode option on Motion Picture menu 185
MF Assist Display menu option 145
MF Assist frame
activating with Left button 114
MF Assist menu option 144–145
incompatibility with other settings 144, 145
not available for movie recording 145
MF Guide menu option 145
MF (Manual focus) setting for focus mode lever 99
M/FT menu option 170
Microphone, built-in 87

MIcrophone Directivity Adjustment option for function button 192
 MIcrophone, external
 Panasonic model no. DMW-MS2 192, 215
 port for 120
 Rode Videomic Pro 215
 Microphone Level Adjustment option on Motion Picture menu 191–192
 Microphone Level Display option on Motion Picture menu 191
 MIcrophone Level Limiter option on Motion Picture menu 193
 Miniature setting for Creative Control mode 44–45
 Mode dial 85
 cannot take still images with dial set to Creative Video position 85
 using to select recording mode 20
 Monitor Display menu option 168
 Monitor Display Style menu option 151
 Monitor Information Display menu option 151
 Monitor Luminance menu option 168
 Monochrome Live View menu option 150
 incompatibility with other settings 150
 Monochrome scene setting 37
 Monochrome setting for Creative Control mode 41
 Monochrome setting for Photo Style
 available adjustments for 51
 Mophie PowerStation XL portable USB power supply 214
 Motion picture button 85
 preventing accidental movie recording 163
 Motion Picture menu 176–194
 items in common with Recording menu 176
 Movie recording. See Video recording
 Movies
 adjusting volume for playback 199
 editing on computer 199–200
 file names and locations 200
 saving single frame from 18, 200
 MOV video format 181
 MP4 (LPCM) video format 181
 MP4 video format 181
 locating MP4 files on memory card 180, 200
 MTS files for AVCHD video 180–181
 Multiple Exposure menu option 69–70
 using Overlay option with existing Raw image 70

N

ND Filter switch 119–120
 Neutral density filter, built-in 120
 Noise Reduction for External MIcrophone option on Motion Picture menu 193
 No Memory Card error message 3
 NTSC video system 172
 Number Reset menu option 171

O

Old Days setting for Creative Control mode 40
 One Point Color setting for Creative Control mode 46
 One Push AE option for function button 157
 Online Manual menu option 165–166
 On-monitor Information display screen 151
 adjusting settings after pressing Q.Menu button 151
 On/Off switch 84–85

P

PAL video system 172
 Panasonic AC Adapter, model no. DMW-AC10 213
 Panasonic DC Coupler, model no. DMW-DCC8 213
 Panasonic Image App 201–206
 internet address for support information 207
 using for adding location data to images 125–126
 Panasonic Lumix Club 206–207
 internet address for 207
 Panasonic Lumix DMC-FZ2500 camera
 features of 1
 items included in box 3
 Panasonic user's guide for FZ2500 camera
 download link 166
 Panorama mode 30–31
 Panoramas
 creating 31
 direction of 31
 playback in camera 31
 size of 31, 70
 Panorama Settings menu option 70
 Peaking menu option 145–146
 using in Intelligent Auto mode 13
 Photo Collage feature of Panasonic Image App 206
 PHOTOfunSTUDIO software 82, 131, 132
 where to download 3
 Photomatix Pro software 68–69
 Photo Style menu option 50–52
 adjusting parameters for 50–51
 comparison chart 52
 incompatibility with other settings 51–52
 list of settings 50
 saving a custom setting 52
 using when recording movies 52
 using with Raw setting for Quality 51
 using with Scene mode 52
 Photo Style option on Motion Picture menu 177
 PictBridge printing protocol 136, 169
 PIcture Mode option on Motion PIcture menu 184
 incompatibility with other settings 184
 Picture Size menu option 55–56
 effect of 4K Photo option on 55
 incompatibility with other settings 55
 relationship to aspect ratio setting 55
 Picture Size setting for panoramas 31
 Picture Sort menu option 137
 Pinpoint AF Display menu option 113, 142

Pinpoint AF Time menu option 113, 142
Pinpoint setting for AF Mode 113
Playback
 movies
 general procedure 18, 199
 still images
 general procedures 17, 122–123
 using touch screen for 122, 165
Playback button 100
Playback menu 123–137
Playback Mode menu option 125
Playback Operation Priority sub-option for Auto Review menu option 152
Post Focus option for drive mode 93–94
 incompatibility with other settings 96
 viewing demo of with Demo Mode menu option 173
Preview option for function button 156
Printing images directly from camera 136
Print Set menu option 136
Profile Setup menu option 82
Program mode 24–25
Program mode (movies) 175
Program Shift 24–25
 incompatibility with other settings 25
Progressive video formats 181
Protect menu option 136

Q

Q.Menu menu option 161–162
Quality menu option 56–58
 distinguished from Picture Size option 56
Quick AF menu option 141
 incompatibility with other settings 141
Quick Menu 82–83
 customizing 161–162

R

Raw & Fine setting for Quality 57–58
 setting Picture Size for 55
Raw Processing menu option 126–129
 settings that can be adjusted with 128–129
Raw setting for Quality 56–57
 ability to alter settings after images captured 57–58
 incompatibility with other settings 56
 size of image files 57
Raw & Standard setting for Quality 57–58
 setting Picture Size for 55
Rear-curtain flash 74
Rear dial 87
 default assignments of 87
Recording Area menu option 152
Recording Format option on Motion Picture menu 180–181
Recording modes
 list of 20
Recording Quality option on Motion Picture menu 181–183
 C4K setting 183

settings available for AVCHD format 181–182
settings available for MOV format 183
settings available for MP4 format 182
settings available for MP4 (LPCM) format 182
Rec Run setting for Time Code 188
Red-eye Removal menu option 77
Red icon indicating writing to memory card 5
 displayed after burst shooting 89
Relaxing Tone scene setting 34
Remote control, wired
 generic model 216
 Panasonic DMW-RSL1 215–216
 using for video recording 176
Remote port 120
Reset menu option 172
Resetting camera settings 172
Reset Wi-Fi Settings menu option 172
Resize menu option 134
 incompatibility with other settings 134
Restore to Default option for function button 159
Retro setting for Creative Control mode 40
Right button
 functions of 105–108
Romantic Sunset Glow scene setting 34
Rotate Display menu option 135
 relationship to Rotate menu option 135
Rotate menu option 134–135
Rotation direction of front and rear dials
 changing 162
Rough Monochrome setting for Creative Control mode 42

S

Saving custom settings to C mode on mode dial 138–139
Scene detection 21
Scene mode 31–37
 incompatibility with other settings 31, 33, 176
 methods for selecting a scene setting 32–33
 using with Quality set to Raw 33
Sekonic C-700 Color Meter 106
Self-timer menu option 64
Self-timer setting for drive mode dial 96
 general procedure for using 14, 96
 incompatibility with other settings 96
 taking multiple shots with 96
Sensitivity (ISO) 103–104
 available values 78, 103
 effects of setting of 25600 104
 incompatibility with other settings 103
 in general 103
 making numerical setting for 78
 setting interpolated values 78
 settings available for video recording 103, 176, 198
 setting values lower or higher than normal range 78–79
Sepia setting for Creative Control mode 41
Setup menu 165–173
Shooting menu. See Recording menu

- Shooting modes. See Recording modes
- Shutter AF menu option 140–141
- Shutter button 84
- using to start and stop video recording 84, 176
- Shutter Priority mode 27–28
- incompatibility with other settings 28
- Shutter Priority mode (movies) 175
- range of available shutter speeds 175
- Shutter speed
- range of available settings 24, 25, 27, 28, 29, 30, 71
 - range of available settings for video recording 175
 - setting in Manual exposure mode 29
 - using setting to freeze or blur motion 27–28
- Shutter Type menu option 71
- Silent Mode menu option 71, 139
- Silent Operation option on Motion Picture menu 190–191, 198
- Silky Monochrome setting for Creative Control mode 42
- Silkypix software
- using to process Raw images 57
 - where to download 3
- Silky Skin scene setting 33
- Simultaneous Record Without Filter menu option 53
- Single shooting setting for drive mode dial 88
- Sleep Mode menu option 169
- Sleep Mode (Wi-Fi) menu option 169
- Slide Show menu option 123–124
- Slow-motion video footage
- using 60p format to produce 182
 - using Slow/Quick option to produce 177–178
 - using Variable Frame Rate menu option to produce 183–184
- Slow/Quick option on Motion Picture Menu 177–178
- Slow Sync setting for Flash Mode 73
- incompatibility with other settings 73
- Slow Sync with Red Eye setting for Flash Mode 73–74
- Slow Zoom Button Setting menu option 160
- Slow Zoom function 119
- Slow Zoom Speed menu option 160
- Slow Zoom T and Slow Zoom W options for function button 158
- Snap Movie option on Motion Picture menu 180
- combining movies with Panasonic Image App 180, 206
- Soft Focus setting for Creative Control mode 45
- Soft Image of a Flower scene setting 36
- Soft Zoom menu option 160–161
- Sound Output option on Motion Picture menu 190
- Sounds made by camera
- turning off 139, 167
- Special Microphone option on Motion Picture menu 192
- Spot metering option 58
- moving spot metering area on display 59
- SS/Gain Operation option on Motion Picture menu 193–194
- Stabilizer menu option 80–81
- incompatibility with other settings 80–81
- Stabilizer option on Motion Picture menu 187
- Standard setting for Quality 57
- Star Filter setting for Creative Control mode 45–46
- Status lamp 85
- Step-by-step guides
- adding location data to images 125
 - connecting camera to smartphone or tablet 201
 - recording motion pictures in Intelligent Auto mode 16
 - saving still frame from motion picture 200
 - sending images to a computer 207
 - taking pictures in Intelligent Auto Mode 10
 - uploading images to social networks 206
 - using 4K Live Cropping feature 179
 - using Custom Multi setting for AF Mode 111
 - using Snap Movie feature 180
 - using the Video Divide option 199
- Step zoom function for zoom lever 160
- Step zoom function for zoom ring 88, 160
- Stop Motion Video menu option 133–134
- Street photography 211
- Sunshine setting for Creative Control mode 46–47
- Sweet Child's Face scene setting 34
- Synchro Scan option on Motion Picture menu 187
- System Frequency Menu Option 172
- relationship to Recording Quality setting for movies 181
- ## T
- Tables
- default assignments for rear dial 87
 - function button assignments for recording mode 154
 - Recommended settings for shooting in Intelligent Auto Mode 11
 - results of burst shooting tests 89
 - settings for recording to external video recorder 195
 - Shutter speed equivalents 28
 - use of camera controls for video recording 196
- Text Stamp menu option 132
- Time code
- outputting through HDMI port 189
- Time Code Display sub-option for Time Code option 188
- Time Code Mode sub-option for Time Code option 189
- Time Code option on Motion Picture menu 188–189
- incompatibility with other settings 188
- Time Code Value sub-option for Time Code option 188
- Time Lapse/Animation menu option 64
- Time Lapse/Stop Motion Animation setting for drive mode dial 96–99
- incompatibility with other settings 97
 - using for stop motion animation 98–99
 - using for time lapse photography 97–98
- Time Lapse Video menu option 133
- Time zone
- setting 166
- Title Edit menu option 131
- Touch AE option for function button 157
- Touch AF menu option 117, 164
- Touch Pad AF menu option 164–165
- Touch screen features 117–119

in general 117
using during video recording 198
Touch screen icons 117–118
Touch Screen menu option 117, 163–164
Touch Scroll menu option 117, 165
Touch Settings menu option 163–165
Touch tab icons 118
Touch Tab menu option 117, 164
Toy Effect setting for Creative Control mode 43
Toy Pop setting for Creative Control mode 44
Tracking autofocus
 using in Intelligent Auto mode 12
Travel Date menu option 166–167
Tripods
 Manfrotto BeFree MKBFRA4-BH 216
 Manfrotto BeFree model no. MKBFRC4-BH 216
TV Connection menu option 169–170

U

Up button
 functions of 103–104
USB Mode menu option 169
USB port 120

V

Variable Frame Rate option on Motion Picture menu 183–184
 incompatibility with other settings 183–184
Version Display menu option 171
Video Button menu option 162–163
Video Divide menu option 132–133, 199–200
Video-Priority Display menu option 152
Video recording
 autofocus options for 184
 effects of Mode dial position on 174–176
 general procedures for 174–176, 198
 range of aperture settings available 175
 range of shutter speed settings available 175
 taking still pictures during 176, 184, 194
 using Creative Video mode 175–176
 using external video recorder 194–195
 using physical controls of camera during 195–198
 using touch screen during 198
Viera Link menu option 169–170
Viewfinder 116
 switching between LCD monitor and 116, 163
Virtual function buttons 118
 functions that cannot be assigned to 159
Vivid Sunset Glow scene setting 34

V-Log L option for Photo Style for movies 177
 activating 173

W

Warm Glowing Nightscape scene setting 35
WD TV Live media device 209
White balance 105–108
 adjusting after shooting for Raw images 107
 adjusting with color axes 107
 comparison chart 107–108
 list of preset options 105
 setting by color temperature 106
 setting custom value manually 105–106
White balance bracketing 63–64, 107
 incompatibility with other settings 64, 105
 setting up from white balance adjustment screen 107
 using with flash 64
White balance comparison chart 108
Wi-Fi connection
 blue light indicating initiation 85
Wi-Fi features of camera
 connecting to smartphone or tablet 201–203
 controlling camera with smartphone or tablet 203–204
Jump Snap feature 204
 sending images and videos to smartphone or tablet 204–205
 sending images to a computer 207–208
 sending images to printers and other devices 208
 uploading images to social media sites 206–207
 viewing images on TV 208–209
Wi-Fi menu option 167
Wind Noise Canceller/Wind Cut option on Motion Picture menu 193
Wireless Channel menu option 76
Wireless menu option 75–76
Wireless Setup menu option 76–77
World Time menu option 166

Z

Zebra pattern menu option 149–150
Zoom lens
 tips for using effectively 210–211
Zoom lever 84
 using to navigate quickly through menus 49, 84, 219
Zoom Lever menu option 160
Zoom Microphone option on Motion Picture menu 193
Zoom ring 87–88
Zoom Ring menu option 160