

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Inserting the Memory Card	3
Lens Cap and Lens Hood	5
Introduction to Main Controls	5
Top of Camera	6
Back of Camera	6
Front of Camera	7
Right Side of Camera	7
Left Side of Camera	8
Bottom of Camera	8
Setting the Date, Time, and Language	9
CHAPTER 2: BASIC OPERATIONS	10
Taking Pictures	10
Fully Automatic: Intelligent Auto Mode	10
Variations from Fully Automatic	12
Focus	12
Manual Focus	13
Drive Mode	13
Intelligent Auto Plus Mode	14
Motion Picture Recording	15
Basic Playback	17
Playing Movies	18
CHAPTER 3: THE RECORDING MODES	20
Choosing a Recording Mode	20
Intelligent Auto Mode	20
Intelligent Auto Plus Mode	22
Program Mode	24
Aperture Priority Mode	25
Shutter Priority Mode	27
Manual Exposure Mode	28
Panorama Mode	30
Scene Mode	31
Creative Control Mode	37
Custom Mode: C Position on Mode Dial	47
CHAPTER 4: THE RECORDING MENU AND THE QUICK MENU	48
The Recording Menu	48
Photo Style	50
Filter Settings	53
Aspect Ratio	54
Picture Size	55

- Extra Optical Zoom . . . . . 55
- Quality. . . . . 56
- AFS/AFF. . . . . 58
- Metering Mode . . . . . 58
- Burst Rate . . . . . 60
- 4K Photo. . . . . 60
- Bracket . . . . . 60
  - Exposure Bracket . . . . . 60
  - Aperture Bracket. . . . . 62
  - Focus Bracket . . . . . 62
  - White Balance Bracket. . . . . 63
- Self-timer . . . . . 64
- Time Lapse/Animation . . . . . 64
- Highlight Shadow . . . . . 65
- Intelligent Dynamic. . . . . 66
- Intelligent Resolution. . . . . 66
- iHandheld Night Shot . . . . . 67
- iHDR. . . . . 67
- HDR . . . . . 67
- Multiple Exposure . . . . . 69
- Panorama Settings . . . . . 70
- Shutter Type . . . . . 71
- Flash. . . . . 71
  - Firing Mode . . . . . 72
  - Flash Mode. . . . . 72
  - Flash Synchro . . . . . 74
  - Flash Adjustment . . . . . 75
  - Auto Exposure Compensation . . . . . 75
  - Manual Flash Adjustment . . . . . 75
  - Wireless. . . . . 75
  - Wireless Channel. . . . . 76
  - Communication Light . . . . . 76
  - Wireless Setup . . . . . 76
- Red-eye Removal . . . . . 77
- ISO Limit Set . . . . . 78
- ISO Increments . . . . . 78
- Extended ISO . . . . . 78
- Long Shutter Noise Reduction . . . . . 79
- Diffraction Compensation . . . . . 79
- Intelligent Zoom . . . . . 79
- Digital Zoom . . . . . 79
- Color Space . . . . . 80
- Stabilizer . . . . . 80
- Face Recognition . . . . . 81
- Profile Setup . . . . . 82
- Quick Menu . . . . . 82

## CHAPTER 5: PHYSICAL CONTROLS

- Controls on Top of Camera . . . . . 84
  - Shutter Button . . . . . 84
  - Zoom Lever . . . . . 84
  - On/Off Switch. . . . . 84
  - Status Lamp. . . . . 85
  - Mode Dial . . . . . 85
  - Front Dial . . . . . 85
  - Motion Picture Button . . . . . 85

Fn4 Button . . . . .	85
Rear Dial . . . . .	87
Built-in Flash Unit and Flash Release Switch . . . . .	87
Hot Shoe . . . . .	87
Built-In Microphone . . . . .	87
Zoom Ring . . . . .	87
Focus Ring . . . . .	88
Drive Mode Dial . . . . .	88
Burst Shooting . . . . .	88
4K Photo . . . . .	89
4K Burst . . . . .	91
4K Burst (S/S) . . . . .	91
4K Pre-burst . . . . .	91
Extracting a 4K Photo Still Image . . . . .	91
Post Focus . . . . .	93
Focus Stacking . . . . .	94
Self-timer . . . . .	96
Time Lapse Shot/Stop Motion Animation . . . . .	96
Time Lapse Shot . . . . .	97
Stop Motion Animation . . . . .	98
Controls on Back of Camera . . . . .	99
Focus Mode Lever . . . . .	99
AFS/AFF . . . . .	99
AFC . . . . .	99
Manual Focus . . . . .	99
AF/AE Lock Button . . . . .	100
Fn5 Button . . . . .	100
Playback Button . . . . .	100
Display Button . . . . .	100
Menu/Set Button and Direction Buttons . . . . .	103
Direction Buttons . . . . .	103
Up Button: ISO . . . . .	103
Right Button: White Balance . . . . .	105
Left Button: AF Mode . . . . .	108
Face/Eye Detection . . . . .	109
AF Tracking . . . . .	109
49-Area . . . . .	110
Custom Multi . . . . .	111
1-Area . . . . .	112
Pinpoint . . . . .	113
Moving the Focus Frame or Focus Area . . . . .	114
Use of Left Button in Manual Focus Mode . . . . .	114
Down Button: Macro Mode . . . . .	114
AF Macro . . . . .	114
Macro Zoom . . . . .	114
Center Button: Menu/Set . . . . .	115
Fn6/Delete/Cancel Button . . . . .	115
Viewfinder, Eye Sensor, Diopter Adjustment Dial, and Fn7 Button . . . . .	116
LCD Monitor . . . . .	116
Using the Touch Screen . . . . .	117
Items on Left Side of Camera . . . . .	119
Function buttons Fn1, Fn2, and Fn3 . . . . .	119
ND Filter Switch . . . . .	119
Ports for Microphone, Headphones, HDMI, and USB . . . . .	120
Items on Right Side of Camera . . . . .	120
Items on Front of Camera . . . . .	120
AF Assist/Self-timer Lamp . . . . .	121

Lens . . . . . 121  
 Items on Bottom of Camera . . . . . 121

## CHAPTER 6: PLAYBACK 122

Normal Playback . . . . . 122  
 Index View and Enlarging Images . . . . . 122  
 The Playback Menu . . . . . 123  
     Slide Show . . . . . 123  
         [Play] All . . . . . 124  
         [Play] Picture Only/Video Only . . . . . 124  
     Playback Mode . . . . . 125  
     Location Logging . . . . . 125  
     Raw Processing . . . . . 126  
     4K Photo Bulk Saving . . . . . 129  
     Light Composition . . . . . 129  
     Clear Retouch . . . . . 130  
     Title Edit . . . . . 131  
     Text Stamp . . . . . 132  
     Video Divide . . . . . 132  
     Time Lapse Video . . . . . 133  
     Stop Motion Video . . . . . 133  
     Resize . . . . . 134  
     Cropping . . . . . 134  
     Rotate . . . . . 134  
     Rotate Display . . . . . 135  
     Favorite . . . . . 135  
     Print Set . . . . . 136  
     Protect . . . . . 136  
     Face Recognition Edit . . . . . 137  
     Picture Sort . . . . . 137  
     Delete Confirmation . . . . . 137

## CHAPTER 7: THE CUSTOM MENU AND THE SETUP MENU 138

The Custom Menu . . . . . 138  
     Custom Set Memory . . . . . 138  
     Silent Mode . . . . . 139  
     AF/AE Lock . . . . . 139  
     AF/AE Lock Hold . . . . . 140  
     Shutter AF . . . . . 140  
     Half Press Release . . . . . 141  
     Quick AF . . . . . 141  
     Eye Sensor AF . . . . . 141  
     Pinpoint AF Time . . . . . 142  
     Pinpoint AF Display . . . . . 142  
     AF Assist Lamp . . . . . 142  
     Direct Focus Area . . . . . 143  
     Focus/Release Priority . . . . . 143  
     AF Sensitivity . . . . . 143  
     AF+MF . . . . . 144  
     Manual Focus (MF) Assist and MF Assist Display . . . . . 144  
     MF Guide . . . . . 145  
     Peaking . . . . . 145  
     Histogram . . . . . 146  
     Guide Line . . . . . 148  
     Center Marker . . . . . 148

Highlight . . . . .	148
Zebra Pattern . . . . .	149
Monochrome Live View . . . . .	150
Constant Preview . . . . .	150
Exposure Meter . . . . .	150
LVF Display Style . . . . .	151
Monitor Display Style . . . . .	151
Monitor Information Display . . . . .	151
Recording Area . . . . .	152
Video-Priority Display . . . . .	152
Auto Review . . . . .	152
Function Button Set . . . . .	153
AF/AE Lock . . . . .	156
AF-On . . . . .	156
Preview . . . . .	156
One Push AE . . . . .	157
Touch AE . . . . .	157
Focus Area Set . . . . .	158
Slow Zoom T and Slow Zoom W . . . . .	158
1 Shot Raw + JPG . . . . .	158
1 Shot Spot Metering . . . . .	158
Cursor Button Lock . . . . .	158
Dial Operation Switch . . . . .	158
Restore to Default . . . . .	159
Assigning Options to Function Buttons for Playback Mode . . . . .	159
Zoom Lever . . . . .	160
Zoom Ring . . . . .	160
Slow Zoom Button Setting . . . . .	160
Slow Zoom Speed . . . . .	160
Soft Zoom . . . . .	160
Lens Position Resume . . . . .	161
Lens Retraction . . . . .	161
Quick Menu (Q.Menu) . . . . .	161
Dial Settings . . . . .	162
Video Button . . . . .	162
Eye Sensor . . . . .	163
Touch Settings . . . . .	163
Touch Screen . . . . .	163
Touch Tab . . . . .	164
Touch AF . . . . .	164
Touch Pad AF . . . . .	164
Touch Scroll . . . . .	165
Menu Guide . . . . .	165
The Setup Menu . . . . .	165
Online Manual . . . . .	165
Clock Set . . . . .	166
World Time . . . . .	166
Travel Date . . . . .	166
Wi-Fi . . . . .	167
Beep . . . . .	167
Headphone Volume . . . . .	167
Live View Mode . . . . .	167
Monitor Display . . . . .	168
Monitor Luminance . . . . .	168
Economy . . . . .	169
Sleep Mode . . . . .	169
Sleep Mode (Wi-Fi) . . . . .	169

- Auto LVF/Monitor Off . . . . . 169
- USB Mode . . . . . 169
- TV Connection . . . . . 169
- m/ft . . . . . 170
- Menu Resume. . . . . 170
- Menu Background . . . . . 170
- Menu Information . . . . . 170
- Language . . . . . 170
- Version Display . . . . . 171
- Exposure Compensation Reset. . . . . 171
- Number Reset. . . . . 171
- Reset. . . . . 172
- Reset Wi-Fi Settings. . . . . 172
- System Frequency . . . . . 172
- Level Gauge Adjustment. . . . . 172
- Activate . . . . . 173
- Demo Mode. . . . . 173
- Format. . . . . 173

## CHAPTER 8: MOTION PICTURES 174

- Basics of FZ2500 Videography . . . . . 174
- Making Other Settings When Recording Movies. . . . . 176
- The Motion Picture Menu . . . . . 176
  - Photo Style. . . . . 177
  - Filter Settings . . . . . 177
  - Slow/Quick. . . . . 177
  - Dolly Zoom. . . . . 178
  - 4K Live Cropping. . . . . 178
  - Snap Movie. . . . . 180
  - Recording Format . . . . . 180
    - AVCHD. . . . . 180
    - MP4 . . . . . 181
    - MP4 (LPCM) . . . . . 181
    - MOV . . . . . 181
  - Recording Quality . . . . . 181
    - AVCHD. . . . . 181
    - MP4 . . . . . 182
    - MP4 (LPCM) . . . . . 182
    - MOV . . . . . 183
  - Using the Cinema 4K (C4K) Setting for Recording Quality . . . . . 183
  - Exposure Mode . . . . . 183
  - Variable Frame Rate . . . . . 183
  - AFS/AFF . . . . . 184
  - Picture Mode. . . . . 184
  - Continuous AF. . . . . 185
  - Level Shot . . . . . 185
  - Metering Mode . . . . . 185
  - Highlight Shadow . . . . . 185
  - Intelligent Dynamic . . . . . 185
  - Intelligent Resolution . . . . . 186
  - Diffraction Compensation. . . . . 186
  - Master Pedestal Level . . . . . 186
  - Luminance Level. . . . . 187
  - Synchro Scan. . . . . 187
  - Intelligent Zoom. . . . . 187
  - Digital Zoom . . . . . 187

- Stabilizer . . . . . 187
- Time Code . . . . . 188
  - Time Code Display . . . . . 188
  - Count Up . . . . . 188
  - Time Code Value . . . . . 188
  - Time Code Mode . . . . . 189
  - HDMI Time Code Output . . . . . 189
- HDMI Recording Output. . . . . 189
  - Bit Mode. . . . . 189
  - Info Display . . . . . 189
  - 4K Down Convert . . . . . 190
  - HDMI Recording Control . . . . . 190
- Flicker Decrease . . . . . 190
- Sound Output . . . . . 190
- Silent Operation . . . . . 190
- Microphone Level Display. . . . . 191
- Microphone Level Adjustment . . . . . 191
- Special Microphone . . . . . 192
  - Stereo . . . . . 192
  - Lens Auto . . . . . 192
  - Shotgun . . . . . 192
  - S. Shotgun. . . . . 192
  - Manual . . . . . 192
- Noise Reduction for External Microphone . . . . . 193
- Microphone Level Limiter . . . . . 193
- Wind Noise Canceller/Wind Cut. . . . . 193
- Zoom Microphone. . . . . 193
- SS/Gain Operation. . . . . 193
- Color Bars . . . . . 194
- Recording Still Images During Video Recording . . . . . 194
- Recording to an External Video Recorder. . . . . 194
- Physical Controls. . . . . 195
- Using the Touch Screen During Video Recording . . . . . 198
- Recommendations for Recording Video . . . . . 198
- Motion Picture Playback and Editing . . . . . 199
  - Editing with a Computer . . . . . 200

## CHAPTER 9: WI-FI AND OTHER TOPICS 201

- Using Wi-Fi Features . . . . . 201
  - Connect to a Smartphone or Tablet . . . . . 201
  - Controlling the Camera with a Smartphone or Tablet . . . . . 203
  - Sending Images and Videos to a Smartphone or Tablet . . . . . 204
  - Uploading Images by Wi-Fi to Social Networks . . . . . 206
  - Connecting to a Computer to Transfer Images Wirelessly . . . . . 207
  - Sending Images to Other Devices . . . . . 208
  - Viewing Images Wirelessly on TV. . . . . 208
- Macro (Closeup) Shooting. . . . . 209
  - Using the Zoom Lens. . . . . 210
- Street Photography . . . . . 211

## APPENDIX A: ACCESSORIES 212

- Cases . . . . . 212
- Batteries and Chargers . . . . . 213
- AC Adapter. . . . . 213
- External Flash Units . . . . . 214

External Microphones . . . . .	215
Wired Remote Control. . . . .	215
Tripods . . . . .	216
External Video Recorder. . . . .	217
Filters. . . . .	217

## APPENDIX B: QUICK TIPS 218

## APPENDIX C: RESOURCES FOR FURTHER INFORMATION 221

Photography Books . . . . .	221
Websites . . . . .	221
Digital Photography Review . . . . .	221
Official Panasonic and Related Sites . . . . .	221
Videos . . . . .	222
Written Reviews of the FZ2500. . . . .	222
Other Information . . . . .	222

## **Index 223**