

Index

Symbols

- 1-Area setting for AF Mode 64–65
- 1st-curtain sync 75
- 2nd-curtain sync 75
- 4K Burst setting for 4K Photo option 106
- 4K Burst S/S setting for 4K Photo option 106
 - recording of audio with 107
- 4K Live Cropping option on Creative Video menu 179–180
- 4K Photo Bulk Saving menu option 130
- 4K Photo options 79, 105–109
 - combining 4K Photo bursts into a light composition 109
 - combining 4K Photo bursts into a sequence composition 109
 - extracting a still image from 4K burst 107–108
 - requirement of high-speed memory card 106
- 4K Pre-burst setting for 4K Photo option 106
- 4K video format 105, 175
- 4K video recording
 - requirement of high-speed memory card for 175
- 49-Area setting for AF Mode 62–63

A

- AC adapter
 - Panasonic model no. DMW-AC10 203–204
- Adobe Bridge software 126
 - viewing location data in 192–193
- Adobe Camera Raw software 58
- Adobe Premiere Pro software 186
- AF/AE Lock button 94
- AF/AE Lock Hold menu option 94, 139
- AF/AE Lock menu option 94, 138–139
 - inability to lock exposure in Manual exposure mode 139
 - incompatibility with other settings 139
- AF Area Display menu option 143
- AF Assist Lamp menu option 122, 141
- AF assist/self-timer lamp 122
 - disabling operation of 122
- AF Macro option for focus mode 102, 200
- AF+MF menu option 143–144
- AF Mode menu option 13–14, 60–66
 - moving focus frame on display 66
- AF Mode option on Motion Picture menu 177
- AF-On option for AF/AE Lock button 94, 139
- AFS/AFF/AFC menu option 14, 59
 - incompatibility with other settings 59
- AFS/AFF/AFC option on Motion Picture menu 176

- AF Tracking setting for AF Mode 61–62
 - incompatibility with other settings 62
- Anker 40-watt desktop USB charger 203
- Aperture
 - effect of setting on depth of field 29
 - range of available settings 27, 28, 30
 - dependent on zoom level of lens 29–30
 - relationship to depth of field 28–29
 - setting in Manual exposure mode 31
 - setting with rear dial or control ring 29
- Aperture bracketing 84
- Aperture Priority mode 28–30
- Aperture Priority mode (movies) 171
- Appetizing Food scene setting 39
- Approved Regulations menu option 198
- Artistic Nightscape scene setting 38
- Aspect ratio
 - relationship to image size 55
- Aspect Ratio menu option 55
 - relationship to resolution 55
- Auto Clock Set menu option 199
- Autofocus option for focus mode 102
- Auto ISO 60
 - using with Manual exposure mode 32, 60, 206
 - using with Manual Exposure mode with video recording 176, 206
- Auto LVF/Monitor Off menu option 162
- Auto Review menu option 123, 149
- Auto Transfer menu option 198, 208
- Auto White Balance setting 99
- AVCHD files
 - locating on memory card 174, 186
- AVCHD video format 174

B

- Back button focus 94, 139
 - using instead of shutter button for autofocus 139
- Backlight compensation 23
- Backlit Softness scene setting 36
- Battery
 - generic replacement 203
 - inserting into camera 3
 - length of time to recharge 4
 - Panasonic model no. DMW-BLG10PP 202
 - charging 3–4
 - inserting into camera 3
- Battery charger, external
 - generic model 203
 - Panasonic model no. DMW-BTC9 203
- Beep menu option 162
- Bit rate for video recording 174–175
- Bleach Bypass setting for Creative Control mode 47–48
- Bluetooth features of camera
 - using to turn camera on or off 193
- Bluetooth menu item 198
- Bluetooth menu option 161, 198–199

Blurred background
 achieving with aperture setting 28–29
 methods of achieving 29

Bracket menu option 82–86
 incompatibility with other settings 86

Bright Blue Sky scene setting 37

BULB setting for shutter speed 32

Burst Rate menu option 79

Burst shooting 104–105
 autofocus with 104
 general procedure 16
 incompatibility with other settings 105
 selecting speed of 104
 using 4K Photo options for 206

C

Calendar screen in playback mode 19, 123

Camera sounds
 silencing 162

Cases
 Eagle Creek waist pack 202
 Lowepro Inverse 100 AW 202
 Lowepro Rezo 110 AW 202

Center Marker menu option 153

Center-weighted setting for Metering Mode menu option 70

Clear in Backlight scene setting 36

Clear Night Portrait scene setting 39

Clear Nightscape scene setting 38

Clear Portrait scene setting 36

Clear Retouch menu option 132–133

Clear Sports Shot scene setting 40

Clock Set menu option 160

Color Space menu option 70

Color temperature
 in general 99
 using to set white balance 100–101

Color temperature ratings of various light sources 99

Color tone
 adjusting in Intelligent Auto Plus mode 26

Compression of JPEG images 58

Connecting camera to HDTV
 using micro-HDMI cable 201
 using Wi-Fi option 201

Constant Preview menu option 32, 150

Continuous AF option on Motion Picture menu 176

Contrast
 adjusting 66

Control ring 121–122
 assigning a function to 121–122, 146
 default functions of 121
 possible assignments for 121–122

Controls on back of camera 6–7, 93–121

Controls on front of camera 7, 121–122

Controls on top of camera 6, 91–94

Cool Night Sky scene setting 38

Create a New Folder menu option 166

Creative Control menu 42

Creative Control mode 40–50
 making adjustments to settings 43
 selecting setting 40–42
 using with Raw setting for Quality 42–43, 207

Creative Video menu 178–180

Creative Video mode 171–172

Cropping menu option 134

Cross Process setting for Creative Control mode 47

Custom menu 137–159
 navigating in 137

Custom mode 50–51, 159–160

Custom Multi setting of AF Mode 63–64
 using to create focus area with all focus zones 64, 206

Custom Set Memory menu option 159–160

Custom white balance
 procedure for setting 100

Cute Dessert scene setting 40

D

Date and time
 setting 9–10, 160

DC Coupler
 Panasonic model no. DMW-DCC11 203–204

Defocus control option
 using in Creative Control mode 43
 using in Intelligent Auto Plus mode 17, 26
 using to blur background 17

Deleting images 114–115

Demo Mode menu option 168

Depth of field
 relationship to aperture setting 28–29

Device Name menu option 197

Dial Guide menu option 148

Diffraction Compensation menu option 77
 incompatibility with other settings 77

Diffraction Compensation option on Motion Picture menu 177

Digital Zoom menu option 78
 incompatibility with other settings 78

Digital Zoom option on Motion Picture menu 178

Dimmed items on menu screens 54

Diopter adjustment wheel 94

Direct Focus Area menu option 66, 141–142

Display button 94–97
 miscellaneous functions of 97
 using to display help screens 54, 207

Display screens
 playback mode 95–97
 recording mode 94–95

Distinct Scenery scene setting 37

Down button
 functions of 113

Drive Mode options 103–113
 turning off burst shooting and other settings 103
 using in Intelligent Auto mode 15–16

Dynamic Monochrome setting for Creative Control mode 45

E

Economy menu option 162

Enlarging image in playback mode 19, 124

Exposure bracketing 82–84

selecting individual or burst shots 83

setting from exposure compensation screen 84, 97, 98

setting order of exposures 83

using in Creative Control mode 43

using in Intelligent Auto Plus mode 25

using to create HDR images 82

Exposure compensation 97–98

adjusting in Creative Control mode 43

adjusting in Creative Video mode 97, 183, 206

adjusting in Intelligent Auto Plus mode 16–17, 25

example of use of 98

limited adjustment range for movies 183

retaining value after camera powered off 138

using in Manual exposure mode 32, 97, 206

Exposure Compensation Reset menu option 138

Exposure Meter menu option 155

Exposure Mode menu option for Creative Video mode 171–172, 179

Expressive setting for Creative Control mode 43–44

Extended ISO menu option 138

Extended Optical Zoom 56–57

relationship to Picture Size setting 56

External audio recorders 180, 204

Shure VP83 180, 205

Tascam DR-40 180, 205

Tascam DR-100MkII 180, 204–205

using for video recording 180

Zoom H1 180, 205

Zoom H6 180, 205

External flash units

LumoPro LP180 204

using with ZS200 camera 204

Yongnuo YN-560 IV 204

Eye sensor 93–94

setting sensitivity of 164

Eye Sensor AF menu option 94, 140–141

Eye Sensor menu option 164

F

Face/Eye Detection setting for AF Mode 61, 158

changing eye camera focuses on 61

changing face camera focuses on 61

Face Recognition Edit menu option 127

Face Recognition menu option 157–158

Fade-in and fade-out effects for video recording 172

Fade-in/Fade-out effects with Snap Movie feature 176

Fantasy setting for Creative Control mode 49

File Name Setting menu option 167

Fill-flash setting for Flash Mode. See Forced On setting for Flash Mode

Filter Settings menu option 69–70

using with Quality set to Raw 70, 207

Filter Settings option on Motion Picture menu 177, 183

list of settings not available for video recording 177, 183

Firmware 166

displaying current version 166

Flash Adjustment menu option 76

Flash, built-in unit 93

diffusing 206

using in Intelligent Auto mode 24

using in Intelligent Auto Plus mode 26

Flashing highlights in playback mode 97, 153

Flash menu option 73–76

Flash Mode menu option 73–76

Flash release button 94

Flash Synchro setting for Flash Mode 75–76

incompatibility with other settings 76

Flicker Decrease option on Motion Picture menu 178

Focus

general techniques 13–15

Focus Area Set option for function button 66, 118

Focus bracketing 84–85, 207

compared to Post Focus feature 85

playback of images 85

Focus frame

moving around on display 66, 142, 206

Focus mode options 102–103

Focus/Release Priority menu option 142

effect on burst shooting 104, 142

Focus Stacking option 110–112

incompatibility with other settings 112

Focus Switching for Vertical/Horizontal menu option 142

Folder/File Settings menu option 166

Forced On setting for Flash Mode 74

Forced On with Red Eye setting for Flash Mode 74

Format menu option 168

Freeze Animal Motion scene setting 40

Function buttons 113–119

assigning functions to for playback mode 119, 145

assigning functions to for recording mode 115–118, 145

changing assignment by pressing and holding 113, 115, 144, 207

Fn1/4K Photo button 113–114

miscellaneous functions of 114

Fn2/Post Focus button 114

miscellaneous functions of 114

Fn3/Delete/Q.Menu/Cancel button 114–115

using to delete images 114–115

Fn4/LVF button 115

using to switch between viewfinder and LCD monitor 115

Function Button Set menu option 113, 144–145

G

Gimbal

Zhiyun Crane-M 205

Glistening Water scene setting 38

Glittering Illuminations scene setting 38
 GPS data. See Location data
 Guide Line menu option 152–153

H

Half Press Release menu option 140
 Handheld Night Shot scene setting 38–39
 HDMI Info Display (Rec) menu option 165
 HDMI Mode (Play) menu option 165
 HDMI port 7
 using to connect camera to HDTV 201
 HDMI signal
 outputting from camera 165
 HDR (high dynamic range) photography 86–87
 using Manual exposure mode for 31
 HDR menu option 86–88
 making settings for 87
 HDTV
 connecting camera to with HDMI cable 201
 Help screens in camera 54, 207
 High Dynamic setting for Creative Control mode 46
 High Key setting for Creative Control mode 44
 Highlight menu option 97, 153–154
 Highlight Shadow menu option 71–72
 Highlight Shadow option on Motion Picture menu 177
 High Speed Video menu option 172–173, 179
 High speed video recording 172–173
 requirement of using high-speed memory card for 172
 Histogram
 moving on display 152
 playback mode 96
 shooting mode 152
 Histogram menu option 151–152

I

i.Dynamic menu option 72–73
 i.Dynamic option on Motion Picture menu 177
 i.Handheld Night Shot menu option 23
 iHDR menu option 24
 iMovie software 186
 Impressive Art setting for Creative Control mode 46
 Index screens in playback mode 19, 123
 Intelligent Auto mode 21–24
 general procedure for using 11–16
 settings unavailable with 22
 Intelligent Auto mode menu 23–24
 Intelligent Auto Mode menu option 22, 23
 Intelligent Auto Plus mode 24–26
 features of 16–17
 general procedure for using 16–17
 selecting 16, 22, 24
 settings unavailable with 17, 25
 using exposure compensation in 25
 Intelligent Dynamic. See i.Dynamic
 Intelligent ISO setting 60
 incompatibility with other settings 31, 32, 60

Intelligent Resolution. See i.Resolution
 Intelligent Zoom. See i.Zoom
 Interlaced video formats 175
 Internal memory storage
 absence of in ZS200 camera 4
 i.Resolution menu option 73
 i.Resolution option on Motion Picture menu 177
 Irfanview software program 36, 43, 70, 207
 ISO Auto Upper Limit (Photo) menu option 60, 76–77
 ISO Auto Upper Limit (Video) option on Motion Picture menu 177
 ISO Increments menu option 138
 Items on bottom of camera 8
 Items on front of camera 121–122
 i.Zoom menu option 78
 incompatibility with other settings 78
 i.Zoom option on Motion Picture menu 178

J

JPEG files 58–59
 compression of 58
 Jump Snap feature 190

K

Kelvin units of color temperature 99
 Key icon in playback mode for protected image or video 126

L

Language
 setting 10, 165–166
 Language menu option 165–166
 LCD monitor 119–121
 adjusting brightness of 163–164
 setting display quality of 162–163
 switching between viewfinder and 164
 Left button
 functions of 102–103
 Lens
 minimum focus distance 200
 specifications of 7
 Lens Position Resume menu option 157
 Lens Retraction menu option 94, 157
 Level Gauge Adjustment menu option 167–168
 Level Gauge display screens 95
 Level Shot option on Motion Picture menu 178
 Light Composition menu option 130–131
 Location data
 adding to images using smartphone 192
 Location Logging option on Setup menu 192, 199
 Locking exposure 94
 Locking focus 94
 Locking operation of cursor buttons and touch screen 118, 146–147
 LoiLoScope software
 where to download 3
 Long Shutter Noise Reduction menu option 77

- incompatibility with other settings 77
- Loop Movement Focus Frame menu option 143
- Low Key setting for Creative Control mode 44
- Lumix Club menu option 197
- LVF button 93
- LVF Display Setting menu option 155
- LVF Display Speed menu option 163
 - conflict between Eco30fps setting and Digital Zoom option 163
- LVF/Monitor Display Settings menu option 94, 95, 155–156
- LVF/Monitor Switch menu option 94, 115, 164

M

- Macro photography 199–200
 - using Post Focus feature with 200
- Macro Zoom option for focus mode 102
- Manual exposure mode 31–33
 - displaying effects of settings 32
 - icons on screen 31–32
 - incompatibility with other settings 32
 - reasons for using 31
 - using Auto ISO with 32
 - using exposure compensation in 32
- Manual Exposure mode (movies) 172
 - range of available shutter speeds 172
- Manual focus 102–103
 - general procedure for using 15
 - using autofocus in manual focus mode 94
 - using in conjunction with autofocus 143
 - using in Intelligent Auto mode 15
- Memory card
 - capacity for storing images and videos 5
 - considerations for choosing 4
 - formatting 168
 - inserting into camera 5
 - operating camera without 4
 - requirement of UHS Speed Class 3 for some types of recording 4, 175
 - types of 4
- Menu Guide menu option 40, 157
- Menu/Set button
 - functions of 113
- Menu systems
 - listing of 8, 52
 - navigating among 8–9, 52–53
- Metering Mode menu option 70–71
 - incompatibility with other settings 71
- Metering Mode option on Motion Picture menu 177
- MF Assist Display menu option 144
- MF Assist menu option 103, 144
 - using to enlarge manual focus screen 103
- MF Guide menu option 155
- M/FT menu option 164
- Microphone
 - built-in 93
 - lack of jack for external unit 93

- Miniature setting for Creative Control mode 48
 - using for video recording 183
- Minimum shutter speed menu option 77
- Mode dial 92
 - cannot take still images with dial set to Movie position 92
 - using to select recording mode 92
- Monitor Display menu option 163
- Monitor Display Setting menu option 156
- Monitor Display Speed menu option 162–163
 - conflict between Eco30fps setting and Digital Zoom option 163
- Monitor Luminance menu option 163–164
- Monochrome Live View menu option 149–150
- Monochrome scene setting 40
- Monochrome setting for Creative Control mode 45
- Mophie PowerStation XL portable USB power supply 203
- Motion picture button 92
- Motion Picture menu 173–178
 - list of items in common with Recording menu 173
- Motion picture recording
 - adjusting exposure compensation 172
 - autofocus options 176
 - duration limits for 5, 170
 - effects of mode dial position on 170–172
 - general procedure for 17–18, 170–172
 - general recommendations for 184
 - range of aperture settings available 171
 - range of shutter speed settings available 172
 - taking still pictures during 180
 - using automatic modes 171
 - using Creative Video mode 171–172
 - using external audio recorder 180
 - using PASM modes 170
 - using physical controls of camera during 181–183
 - using the touch screen 183–184
- Motion pictures
 - editing in camera 135–136, 185
 - editing with computer 20, 186
 - saving still frames from 20, 185
- Movie recording. *See* Motion picture recording
- Movies and TV app for Windows 10 186
- MP4 video format 174
 - locating MP4 files on memory card 174, 186
- MTS files for AVCHD video 174, 186
- Multiple Exposure menu option 88–89
 - using Overlay option with existing Raw image 89
- Multiple setting for Metering Mode menu option 70
- My Menu custom menu system 168–169

N

- Network Address menu option 197–198
- New Connection menu option 196
- Noise reduction
 - adjusting 66
- No Memory Card error message 4
- Number Reset menu option 167

O

Old Days setting for Creative Control mode 44
 One Point Color setting for Creative Control mode 49
 One Push AE option for function button 117–118
 Online Manual menu option 159
 On/off switch 91–92
 Operation Lock option for function button 118, 208
 Operation Lock Setting menu option 146–147, 208

P

Panasonic Image App 187–194
 Panasonic Lumix Club 194–195
 Panasonic Lumix DMC-ZS200 camera
 features lacking 1
 features of 1
 items included in box 3
 various model number designations of 1
 Panasonic users manual
 where to download 159
 Panorama mode 33–34
 Panorama mode menu 33
 Direction option 33
 Picture Size option 33
 Panoramas
 creating 33–34
 direction of 33
 playback in camera 34
 shooting with different orientation of camera 34
 shooting with filter effects 34
 size of 33
 PC Connection menu option 197
 Peaking 15
 Peaking menu option 150–151
 Photo Collage feature 193
 PHOTOfunSTUDIO software 127, 195
 where to download 3
 Photomatrix Pro software 31, 87
 Photo Style menu option 66–68
 adjusting parameters for 66–67
 comparison chart 68
 incompatibility with other settings 68
 saving a custom setting 68–69
 using with Raw setting for Quality 67
 Photo Style option on Motion Picture menu 177
 PictBridge protocol 8, 126
 Picture Size menu option 56
 incompatibility with other settings 56
 Picture Sort menu option 136
 Pinpoint AF Display menu option 141
 Pinpoint AF Setting menu option 141
 Pinpoint AF Time menu option 141
 Pinpoint setting for AF Mode 65–66
 not available for video recording 177
 Playback
 movies
 general procedure 20, 184

 panoramas 34
 starting camera in playback mode 92, 208
 still images
 general procedures 18–19, 123–124
 sorting chronologically 136
 using touch screen for 123
 Playback button 94
 using to turn on camera in playback mode 94, 208
 Playback menu 124–136
 Playback Mode menu option 125–126
 Playback on TV menu option 196
 Plural Eyes software 181
 Post Focus option 109–112, 207
 incompatibility with other settings 112
 using for macro photography 200
 Preview option for function button 116–117
 incompatibility with other settings 117
 Priority of Remote Device menu option 197
 Profile Setup menu option 159
 Program Auto mode (movies) 171
 Program mode 26–28
 Program Shift 27
 not available during video recording 28
 Progressive video formats 175
 Protect menu option 126
 Pull-focus effect with Snap Movie feature 176

Q

Q.Menu menu option 145–146
 Quality menu option 57–59
 distinguished from Picture Size option 57
 Quick AF menu option 140
 Quick Menu 89–90
 customizing 145–146

R

Rating menu option 126
 Ratings of images
 assigning with function button 119, 126
 assigning within Panasonic Image App 192
 assigning with menu option 126
 Raw & Fine setting for Quality 58
 setting Picture Size for 56
 Raw format 57–59
 ability to alter settings after images captured 58
 incompatibility with other settings 57
 using with Creative Control or Filter Settings options 42–43
 using with Filter Settings or Photo Style options 207
 using with Photo Style settings 67
 Raw Processing menu option 127–129
 Raw & Standard setting for Quality 58
 setting Picture Size for 56
 Rear-curtain flash 75
 Rear dial 92
 changing function assigned to 146
 default assignments of 92

- possible assignments of 92–93
- using to move quickly through menu screens 207
- Recording Area menu option 156
- Recording Format option on Motion Picture menu 174
- Recording menu 52–89
 - options available in Intelligent Auto mode 24
 - options available in Intelligent Auto Plus mode 24–25
- Recording modes
 - list of 21
- Recording Quality option on Motion Picture menu 174–175
- Record/Playback Switch option for function button 118
- Red-eye Removal menu option 76
- Red icon indicating writing to memory card 5
 - displayed after burst shooting 105
- Relaxing Tone scene setting 37
- Remaining Display menu option 156
- Remote Shooting and View menu option 196
- Remote Wakeup menu option 193, 198
- Reset menu option 167
- Reset Network Settings menu option 167
- Resetting camera settings 167
- Resize menu option 134
 - incompatibility with other settings 134
- Restore to Default option for function button 118
- Retro setting for Creative Control mode 44
- Returning from Sleep Mode menu option 198
- Right button
 - miscellaneous functions of 102
- Ring/Dial Set menu option 121–122, 146
- Romantic Sunset Glow scene setting 37
- Rotate Display menu option 136
 - relationship to Rotate menu option 134
- Rotate menu option 134–135
- Rough Monochrome setting for Creative Control mode 45

S

- Saturation
 - adjusting 66
- Scene detection 22–23
- Scene mode 34–40
 - incompatibility with other settings 36
 - selecting scene type 35–36
 - using with Quality set to Raw 36
- SD card
 - capacity of 4
- SDHC card
 - capacity of 4
- SDXC card
 - capacity of 4
- Sekonic C-700 color meter 100
- Select Folder menu option 166
- Self-timer 112–113
 - general procedure for using 15–16, 206
 - incompatibility with other settings 113
 - retaining setting after camera powered off 113, 157
 - taking multiple shots with 113
- Self Timer Auto Off menu option 113, 157
- Self-timer menu option 79, 113
- Send Images Stored in Camera menu option 196
- Send Images While Recording menu option 196
- Sensitivity (ISO) 59–60
 - adjusting during video recording 182–183
 - effects of setting of 12800 60
 - incompatibility with other settings 59
 - in general 59
 - making numerical setting for 60
 - range of available settings 60
 - settings available for video recording 172, 176, 183
 - setting to Auto ISO 60
- Sensitivity (ISO) option on Motion Picture menu 176
- Sensitivity menu option (Eye Sensor) 164
- Sepia setting for Creative Control mode 45
- Sequence Composition menu option 131–132
- Setup menu 159–169
- Sharpness
 - adjusting 66
- Shooting modes. See Recording modes
- Shutter AF menu option 139–140
- Shutter button 91
 - using to start and stop video recording 172
- Shutter Priority mode 30–31
 - incompatibility with other settings 31
- Shutter Priority mode (movies) 171–172
 - range of available shutter speeds 172
- Shutter Remote Control feature of Image App 194
- Shutter speed
 - range of available settings 27, 28, 30, 32
 - setting by turning rear dial or control ring 30
 - setting in Manual exposure mode 31
 - using setting to freeze or blur motion 30
- Shutter Type menu option 81–82
- Silent Mode menu option 81
- Silent Operation option for video recording 183–184
- Silky Monochrome setting for Creative Control mode 46
- Silkipix software
 - using to process Raw images 58, 67–68
 - where to download 3
- Silky Skin scene setting 36
- Simultaneous Record Without Filter menu option 42, 69–70
- Sleep Mode menu option 162
- Sleep Mode (Wi-Fi) menu option 162
- Slide Show menu option 124–125
- Slow-motion video
 - creating using 60p video format 175
 - creating using High Speed Video option 172–173
- Slow Sync setting for Flash Mode 74
 - incompatibility with other settings 75
- Snap Movie option on Motion Picture menu
 - combining movies with Panasonic Image App 193
- Social networks available for uploading images
 - list of 195
- Soft Focus setting for Creative Control mode 49
- Soft Image of a Flower scene setting 39

Sounds made by camera
 silencing 81, 162

Spot setting for Metering Mode menu option 70
 moving spot metering area on display 71

Stabilizer menu option 77–78
 incompatibility with other settings 78

Stabilizer option on Motion Picture menu 177

Star Filter setting for Creative Control mode 49

Starting camera in playback mode 92

Step-by-step guides
 connecting camera to smartphone or tablet 187
 recording motion pictures in Intelligent Auto mode 17
 saving still frame from motion picture 185
 sending images to a computer 195
 taking pictures in Intelligent Auto mode 11
 turning camera on or off using Bluetooth connection 193
 uploading images to social networks 194
 using 4K Live Cropping feature 179
 using Custom Multi setting for AF Mode 63
 using Snap Movie feature 176
 using the 4K Photo Bulk Saving menu option 130
 using the Video Divide option 185

Step zoom function for control ring 122

Step zoom function for zoom lever 149

Stop Motion Animation menu option 80–81

Stop Motion Video menu option 81, 136

Street photography 200–201

Sunshine setting for Creative Control mode 50

Sweet Child's Face scene setting 37

T

Tables
 default assignments for rear dial 92
 default functions of control ring 121
 function button assignments for recording mode 116
 number of images that fit on 64 GB memory card 5
 Recommended settings for shooting in Intelligent Auto Mode 12
 results of burst shooting tests 105
 Shutter speed equivalents 31
 use of camera controls for video recording 181

Text Stamp menu option 133
 incompatibility with other settings 133
 using to imprint name on image 133

Time exposure setting for shutter speed 32–33

Time Lapse Shot menu option 79–80

Time Lapse Video menu option 80, 135

Time zone
 setting 161

Title Edit menu option 127

Touch AE icon 120

Touch AE option for function button 118

Touch AF menu option 66, 147–148, 208

Touch AF/Touch Shutter icon 120

Touch Pad AF menu option 148, 208

Touch screen features 119–121

in general 119
 using during video recording 183–184

Touch screen icons 120–121

Touch Screen menu option 100, 147, 147–148

Touch Settings menu option 119

Touch tab icons 120

Touch Tab menu option 147

Touch Zoom icon 120

Toy Effect setting for Creative Control mode 47

Toy Pop setting for Creative Control mode 47

Tracking focus
 selecting in Intelligent Auto mode 14

Travel Date menu option 161

Tripods
 Manfrotto BeFree MKBFRA4-BH 205
 Manfrotto BeFree model no. MKBFRC4-BH 205

Tripod socket 8

TV Connection menu option 165, 201

U

UHS Speed Class 3 4
 requirement for SD card for recording 4K video 4

Ultra-HD video format. See 4K video format

Up button
 functions of 97–99
 using to switch functions of rear dial and control ring 31

USB Connection menu option 164–165

USB port 7–8

V

Version Display menu option 166

Video Divide menu option 135–136, 185

Video files
 locations on memory cards 174, 186

Video recording. See Motion picture recording

Viera Link menu option 165

Viewfinder 93–94
 adjusting for vision 94
 switching between LCD monitor and 164
 using touch screen with 148

Viewfinder menu option 163

Virtual function buttons 120–121
 functions that cannot be assigned to 116

Vivid Sunset Glow scene setting 37

W

Warm Glowing Nightscape scene setting 38

WD TV Live media device 196

White balance 99–102
 adjusting for Raw files 102
 adjusting using color axes 101
 adjusting with color axes 101
 comparison chart 101–102
 in general 99`
 list of preset options 99
 setting by color temperature 100

- setting custom value manually 100
- White balance bracketing 85–86
 - activating from white balance adjustment screen 86, 101
 - incompatibility with other settings 86
- White balance comparison chart 101–102
- Wi-Fi features of camera 187–199
 - adding location data to images 192
 - assigning ratings to images and videos within Image App 192
 - connecting to smartphone or tablet 187–188
 - controlling camera with smartphone or tablet 189–190, 207
 - Jump Snap feature 190
 - sending images and videos to smartphone or tablet 190–192
 - sending images to a computer 195
 - sending images to printers and other devices 196
 - uploading images to social media sites 194–195
 - viewing images on TV 196
- Wi-Fi Function Lock menu option 197
- Wi-Fi Function menu option 196–197
- Wi-Fi menu option 161, 196–198
- Wi-Fi Network Settings menu option 199
- Wi-Fi Password menu option 197
- Wi-Fi Setup menu option 197–198
- Wind Noise Canceller option on Motion Picture menu 178
- Wireless Connection Lamp menu option 162, 199
- World Time menu option 161

Z

- Zebra Pattern menu option 154
- Zoom lever 91
 - assigning step zoom operation to 149
 - using to navigate quickly through menus 207
- Zoom Lever menu option 149
- Zoom MfC option on Motion Picture menu 178