

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	2
Charging and Inserting the Battery . . . . .	2
Choosing and Inserting a Memory Card . . . . .	3
Setting the Language, Date, and Time . . . . .	7
CHAPTER 2: BASIC OPERATIONS	8
Introduction to Main Controls . . . . .	8
Top of Camera . . . . .	8
Back of Camera . . . . .	8
Front of Camera . . . . .	9
Right Side of Camera . . . . .	9
Left Side of Camera . . . . .	10
Bottom of Camera . . . . .	10
Taking Pictures in Intelligent Auto Mode . . . . .	10
Variations from Fully Automatic . . . . .	13
Focus . . . . .	13
Focus Modes . . . . .	13
Other Settings . . . . .	14
Flash . . . . .	15
Drive Mode: Self-Timer and Continuous Shooting . . . . .	16
Overview of Movie Recording . . . . .	17
Viewing Pictures . . . . .	18
Review While in Shooting Mode . . . . .	18
Reviewing Images in Playback Mode . . . . .	18
Playing Movies . . . . .	19
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	20
Intelligent Auto Mode . . . . .	20
Superior Auto Mode . . . . .	21
Program Mode . . . . .	23

Aperture Priority Mode . . . . .	24
Shutter Priority Mode . . . . .	26
Manual Exposure Mode . . . . .	27
Scene Mode . . . . .	31
Portrait . . . . .	32
Sports Action . . . . .	33
Macro . . . . .	33
Landscape . . . . .	34
Sunset . . . . .	34
Night Scene . . . . .	34
Hand-Held Twilight . . . . .	35
Night Portrait . . . . .	35
Anti Motion Blur . . . . .	36
Pet . . . . .	36
Gourmet . . . . .	36
Fireworks . . . . .	37
High Sensitivity . . . . .	37
Sweep Panorama Mode . . . . .	38
Memory Recall Mode . . . . .	40

## CHAPTER 4: THE CAMERA SETTINGS1 MENU

43

File Format (Still Images) . . . . .	45
JPEG Quality . . . . .	47
JPEG Image Size . . . . .	47
Aspect Ratio . . . . .	49
Panorama Size and Panorama Direction . . . . .	50
Long Exposure Noise Reduction . . . . .	50
High ISO Noise Reduction . . . . .	51
Color Space . . . . .	51
Auto Mode . . . . .	51
Scene Selection . . . . .	51
Drive Mode . . . . .	52
Single Shooting . . . . .	52
Continuous Shooting . . . . .	52
Self-Timer . . . . .	54
Self-Timer (Continuous) . . . . .	55
Continuous Exposure Bracketing . . . . .	56
Single Exposure Bracketing . . . . .	56
White Balance Bracketing . . . . .	57
DRO Bracketing . . . . .	57
Bracket Settings . . . . .	57
Recall . . . . .	58
Memory . . . . .	59
Focus Mode . . . . .	59
Single-Shot AF . . . . .	60
Automatic AF . . . . .	60
Continuous AF . . . . .	60
DMF . . . . .	61
Manual Focus . . . . .	61
Focus Area . . . . .	63
Wide . . . . .	64
Zone . . . . .	64
Center . . . . .	65
Flexible Spot . . . . .	65
Expand Flexible Spot . . . . .	66
Lock-on AF . . . . .	67

Switch Vertical/Horizontal AF Area . . . . .	67
AF Illuminator . . . . .	68
Center Lock-on AF . . . . .	68
Set Face Priority in AF . . . . .	69
Pre-AF . . . . .	71
AF Area Registration . . . . .	71
Delete Registered AF Area . . . . .	71
AF Area Auto Clear . . . . .	71
Display Continuous AF Area . . . . .	72
Phase Detection Area . . . . .	72
Exposure Compensation . . . . .	73
ISO . . . . .	73
Multi Frame Noise Reduction . . . . .	74
ISO Auto Minimum Shutter Speed . . . . .	76
Metering Mode . . . . .	77
Face Priority in Multi Meter . . . . .	78
Spot Metering Point . . . . .	78
AEL with Shutter . . . . .	79
Exposure Standard Adjustment . . . . .	79
Flash Mode . . . . .	80
Flash Off . . . . .	81
Autoflash . . . . .	81
Fill-Flash . . . . .	81
Slow Sync . . . . .	81
Rear Sync . . . . .	82
Flash Compensation . . . . .	83
Red Eye Reduction . . . . .	83
White Balance . . . . .	84
Priority Set in Auto White Balance . . . . .	88
DRO/Auto HDR . . . . .	88
Creative Style . . . . .	91
Adjusting Contrast, Saturation, and Sharpness . . . . .	92
Standard . . . . .	94
Vivid . . . . .	94
Neutral . . . . .	94
Clear . . . . .	94
Deep . . . . .	94
Light . . . . .	94
Portrait . . . . .	94
Landscape . . . . .	94
Sunset . . . . .	94
Night Scene . . . . .	94
Autumn Leaves . . . . .	94
B/W . . . . .	94
Sepia . . . . .	94
Picture Effect . . . . .	95
Off . . . . .	95
Toy Camera . . . . .	95
Pop Color . . . . .	96
Posterization . . . . .	96
Retro Photo . . . . .	96
Soft High-Key . . . . .	97
Partial Color . . . . .	97
High Contrast Monochrome . . . . .	97
Soft Focus . . . . .	98
HDR Painting . . . . .	98
Rich-Tone Monochrome . . . . .	98

Miniature Effect . . . . .	99
Watercolor . . . . .	99
Illustration. . . . .	99
Picture Profile . . . . .	100
Soft Skin Effect. . . . .	104
Focus Magnifier . . . . .	105
Focus Magnification Time . . . . .	107
Initial Focus Magnification . . . . .	107
MF Assist . . . . .	107
Peaking Setting . . . . .	108
Face Registration. . . . .	109
Registered Faces Priority . . . . .	109
Smile Shutter. . . . .	110
Auto Object Framing . . . . .	110
Self-portrait Timer . . . . .	111

## CHAPTER 5: THE CAMERA SETTINGS2 MENU

112

Exposure Mode (Movies) . . . . .	112
Exposure Mode (HFR) . . . . .	112
File Format (Movies) . . . . .	112
Record Setting . . . . .	112
HFR Settings . . . . .	113
Quality (Dual Recording) . . . . .	113
Image Size (Dual Recording) . . . . .	113
Auto Dual Recording . . . . .	113
Proxy Recording . . . . .	113
AF Drive Speed . . . . .	113
AF Tracking Sensitivity. . . . .	113
Auto Slow Shutter . . . . .	113
Audio Recording. . . . .	114
Micref Level . . . . .	114
Wind Noise Reduction. . . . .	114
SteadyShot (Movies). . . . .	114
Marker Display . . . . .	114
Marker Settings . . . . .	114
Movie w/Shutter. . . . .	114
Shutter Type . . . . .	115
Release without Card . . . . .	116
SteadyShot (Still Images) . . . . .	116
Zoom Setting . . . . .	116
Zoom Speed . . . . .	119
Zoom Function on Ring . . . . .	120
Display Button . . . . .	121
Finder/Monitor. . . . .	123
Zebra Setting . . . . .	124
Grid Line . . . . .	125
Rule of Thirds Grid . . . . .	126
Square Grid . . . . .	126
Diagonal Plus Square Grid . . . . .	126
Exposure Settings Guide . . . . .	126
Live View Display . . . . .	127
Auto Review . . . . .	128
Custom Key (Still Images/Movies/Playback) . . . . .	129
Custom Key (Still Images). . . . .	129
Control Ring . . . . .	129
C (Custom) Button . . . . .	130

- AF/MF Control Hold . . . . . 132
- AF/MF Control Toggle . . . . . 132
- Focus Standard . . . . . 133
- Registered AF Area Hold/Registered AF Area Toggle . . . . . 133
- Eye AF . . . . . 133
- AEL Hold. . . . . 133
- AEL Toggle . . . . . 134
- Spot AEL Hold. . . . . 134
- Spot AEL Toggle. . . . . 134
- In-Camera Guide . . . . . 134
- Movie . . . . . 135
- Smart Teleconverter . . . . . 135
- Bright Monitoring. . . . . 135
- Playback. . . . . 136
- Not Set . . . . . 136
- Center Button . . . . . 136
- Left Button . . . . . 136
- Right Button . . . . . 136
- Custom Key (Movies) . . . . . 136
  - Control Ring. . . . . 136
  - Custom Button . . . . . 136
  - Center Button. . . . . 137
  - Left Button . . . . . 137
  - Right Button . . . . . 137
- Custom Key (Playback) . . . . . 137
- Function Menu Settings. . . . . 138
- Av/Tv Rotate . . . . . 139
- Touch Shooting Settings . . . . . 139
  - Touch Shutter. . . . . 139
  - Touch Focus. . . . . 140
- Movie Button . . . . . 140
- Wheel Lock. . . . . 141
- Audio Signals . . . . . 141
- Write Date . . . . . 141

## CHAPTER 6: PHYSICAL CONTROLS

- Mode Dial . . . . . 143
- Shutter Release Button . . . . . 143
- Zoom Lever . . . . . 144
- Power Button . . . . . 144
- AF Illuminator/Self-Timer Lamp. . . . . 144
- Control Ring . . . . . 144
- Electronic Viewfinder . . . . . 146
- Built-in Flash and Flash Pop-up Switch . . . . . 147
- Playback Button . . . . . 147
- Movie Button . . . . . 147
- Menu Button. . . . . 147
- Function Button . . . . . 148
  - Shooting Mode: Function Menu . . . . . 148
  - Quick Navi System . . . . . 149
  - Wheel Lock . . . . . 150
  - AF Area Registration . . . . . 151
  - Playback Mode: Send to Smartphone . . . . . 151
- Custom/Delete Button . . . . . 151
- Control Wheel and Its Buttons . . . . . 151
  - Control Wheel. . . . . 152

Center Button . . . . .	153
Direction Buttons . . . . .	153
Up Button: Display . . . . .	153
Right Button: Flash Mode . . . . .	153
Down Button: Exposure Compensation . . . . .	154
Left Button: Self-Timer/Drive Mode . . . . .	156
LCD Screen: Tilting Features . . . . .	156
LCD Screen: Touch Screen Features . . . . .	157
Ports and Other Items on Right and Left Sides of Camera . . . . .	158

## CHAPTER 7: PLAYBACK AND PRINTING 160

Normal Playback . . . . .	160
Index View and Enlarging Images . . . . .	160
Playback Display Screens . . . . .	162
Deleting Images with the Delete Button . . . . .	163
Playback Menu . . . . .	163
Protect . . . . .	164
Rotate . . . . .	164
Delete . . . . .	165
Rating . . . . .	165
Rating Set (Custom Key) . . . . .	166
Specify Printing . . . . .	166
Beauty Effect . . . . .	167
Photo Capture . . . . .	168
Enlarge Image . . . . .	169
Enlarge Initial Magnification . . . . .	169
Enlarge Initial Position . . . . .	169
Motion Interval Adjustment . . . . .	170
Slide Show . . . . .	170
View Mode . . . . .	171
Image Index . . . . .	172
Display Continuous Shooting Group . . . . .	172
Display Rotation . . . . .	173

## CHAPTER 8: THE SETUP MENU AND MY MENU 174

Setup Menu . . . . .	174
Monitor Brightness . . . . .	174
Viewfinder Brightness . . . . .	175
Finder Color Temperature . . . . .	175
Gamma Display Assist . . . . .	175
Volume Settings . . . . .	176
Tile Menu . . . . .	176
Mode Dial Guide . . . . .	177
Delete Confirmation . . . . .	177
Display Quality . . . . .	177
Auto Monitor Off . . . . .	178
Power Save Start Time . . . . .	178
Function for VF Close . . . . .	178
NTSC/PAL Selector . . . . .	178
Touch Operation . . . . .	179
Touch Panel/Pad . . . . .	179
Touch Pad Settings . . . . .	180
Demo Mode . . . . .	180
TC/UB (Time Code/User Bit) Settings . . . . .	181
TC/UB Display Setting . . . . .	181

TC Preset . . . . .	182
UB Preset . . . . .	183
TC Format . . . . .	183
TC Run . . . . .	183
TC Make . . . . .	183
UB Time Record . . . . .	183
HDMI Settings. . . . .	184
HDMI Resolution. . . . .	184
24p/60p Output . . . . .	184
HDMI Information Display. . . . .	184
TC Output . . . . .	185
Rec Control. . . . .	185
CTRL for HDMI . . . . .	185
HDMI Audio Output . . . . .	185
4K Output Select . . . . .	185
Memory Card + HDMI . . . . .	185
HDMI Only (30p) . . . . .	185
HDMI Only (24p) . . . . .	186
HDMI Only (25p) . . . . .	186
USB Connection . . . . .	186
USB LUN Setting . . . . .	187
USB Power Supply . . . . .	188
PC Remote Settings. . . . .	188
Language . . . . .	188
Date/Time Setup . . . . .	189
Area Setting. . . . .	189
Copyright Info . . . . .	190
Format. . . . .	190
File Number . . . . .	191
Set File Name . . . . .	191
Select REC Folder . . . . .	191
New Folder . . . . .	192
Folder Name . . . . .	192
Recover Image Database. . . . .	192
Display Media Info . . . . .	193
Version . . . . .	193
Setting Reset . . . . .	194
My Menu . . . . .	194

## CHAPTER 9: MOTION PICTURES

Movie-Making Overview . . . . .	196
Details of Settings for Shooting Movies . . . . .	197
Movie-Related Menu Options . . . . .	197
Exposure Mode (Movies) . . . . .	197
Program Auto . . . . .	198
Aperture Priority . . . . .	198
Shutter Priority . . . . .	198
Manual Exposure . . . . .	199
Exposure Mode (HFR) . . . . .	200
File Format (Movies) . . . . .	200
XAVC S 4K . . . . .	200
XAVC S HD. . . . .	200
AVCHD. . . . .	201
Record Setting . . . . .	201
XAVC S 4K . . . . .	201
XAVC S HD. . . . .	201

AVCHD . . . . .	202
HFR Settings . . . . .	202
Quality (Dual Recording) . . . . .	202
Image Size (Dual Recording) . . . . .	203
Auto Dual Recording . . . . .	203
Proxy Recording . . . . .	203
AF Drive Speed. . . . .	203
AF Tracking Sensitivity. . . . .	204
Auto Slow Shutter . . . . .	204
Audio Recording. . . . .	204
Micref Level . . . . .	204
Wind Noise Reduction. . . . .	205
SteadyShot (Movies). . . . .	205
Marker Display . . . . .	206
Marker Settings . . . . .	206
Movie w/Shutter . . . . .	207
Zoom Setting . . . . .	208
Zoom Speed . . . . .	208
Zoom Function on Ring . . . . .	208
Zebra Setting . . . . .	208
Movie Button. . . . .	208
Effects of Mode Dial Position on Recording Movies . . . . .	208
Effects of Camera Settings1 Menu Settings on Recording Movies . . . . .	210
Effects of Physical Controls When Recording Movies . . . . .	212
High Frame Rate Recording . . . . .	214
Recording to an External Video Recorder. . . . .	216
Shooting Still Images During Video Recording. . . . .	217
Summary of Options for Recording Movies . . . . .	218
Other Settings and Controls for Movies . . . . .	219
Movie Playback . . . . .	220
Motion Shot Feature . . . . .	221
Editing Movies . . . . .	221

## CHAPTER 10: WI-FI, BLUETOOTH, AND OTHER TOPICS

222

Wi-Fi Features . . . . .	222
Sending Images to a Computer . . . . .	222
Sending Images to a Smartphone . . . . .	224
Connecting with NFC. . . . .	226
Using a Smartphone or Tablet as a Remote Control . . . . .	227
Bluetooth Features . . . . .	228
Adding Location Information to Images. . . . .	228
The Network Menu . . . . .	230
Send to Smartphone Function. . . . .	230
Send to Computer . . . . .	231
View on TV . . . . .	231
Control with Smartphone . . . . .	231
Airplane Mode . . . . .	232
Wi-Fi Settings . . . . .	232
WPS Push. . . . .	232
Access Point Settings . . . . .	232
Display MAC Address . . . . .	232
SSID/PW Reset . . . . .	233
Bluetooth Settings . . . . .	233
Location Information Link Setting . . . . .	233
Edit Device Name. . . . .	233
Reset Network Settings. . . . .	233



Other Topics . . . . . 234  
    Astrophotography and Digiscoping . . . . . 234  
    Street Photography . . . . . 235  
    Connecting to a Television Set . . . . . 235

APPENDIX A: ACCESSORIES 237

Cases . . . . . 237  
Batteries and Chargers . . . . . 238  
Add-On Filters and Lenses . . . . . 239  
Grips . . . . . 240  
Remote Controls . . . . . 240  
External Flash . . . . . 242  
External Video Recorder . . . . . 243  
External Audio Recorder . . . . . 244  
Tripods . . . . . 244  
External LCD Monitor . . . . . 244  
Gimbal . . . . . 245

APPENDIX B: QUICK TIPS 246

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 249

Websites and Videos . . . . . 249  
    Digital Photography Review . . . . . 249  
    Reviews and Demonstrations of the RX100 VI . . . . . 249  
    White Knight Press . . . . . 249  
    The Official Sony Site . . . . . 249  
Other Resources . . . . . 250

**Index 252**