

# Index

## Symbols

4K Output Select menu item 181–182, 203, 211

4K video

in general 195–196

using as a type of continuous shooting 211

24p, 30p, 60p, and 120p video frame rates 196–197

24p/60p Output menu option 180

120p and 100p video formats

incompatibility with other settings 197

## A

AC adapter

optional type for powering camera through battery compartment 155, 239–240

Sony AC-UUD12 4, 239

Sony NPA-MQZ1K Multi Battery Adaptor Kit 240

Tether Tools Case Relay external power system 239–240

Access lamp 12, 154

behavior during continuous shooting 44

Access Point Settings menu option 230

Adobe Bridge software

viewing location information with 226

Adobe Camera Raw software 35, 91

Adobe Photoshop software

using to process HDR images 88–89

Adobe Premiere CC software 211

AEL Hold option for control button 128–129

AEL Toggle option for control button 128

AEL w/Shutter menu item 76, 143

using with continuous shooting 43, 76

AF Area Auto Clear menu item 67

AF Area Registration menu item 66–67

AF Frame Move Amount menu option 68

AF Illuminator menu item 11, 64, 155

AF Illuminator/Self-timer Lamp 11, 64, 155

controlling operation of 64

AF in Focus Magnifier menu option 101, 102

AF/MF Control Hold option for control button 125–126

using for back button focus 125

AF/MF Control Toggle option for control button 57, 126

AF Micro Adjustment menu option 68–69

AF-ON button 145

general functions of 11

AF On option for control button 128

AF Subject Shift Sensitivity menu option 106, 198

AF Tracking Sensitivity (Still Images) menu option 65

AF Transition Speed menu option 106, 153, 198

using to change speed of pull focus effect 153

AF w/Shutter menu option 66, 143

using with back button focus 128

Airplane Mode menu item 217, 229

Animal Eye Display menu option 64

Anti-Flicker Shooting menu option 104

Aperture

availability of settings when using zoom lens 25

range of available settings

effect of focal length on 25

relationship to depth of field 23–24

Aperture Drive in AF (Still Images) menu option 65–66

Aperture Preview option for control button 131

Aperture Priority exposure mode for movies 193–194

Aperture Priority mode 23–25

APS-C/Super 35mm menu option 39–40, 236

using with lens designed for APS-C sensor 236

reduction in image resolution from 236

using with lens for full-frame camera attached 40

Area Setting menu item 183–184

Aspect ratio menu item 38–39

relationship to JPEG Image Size menu item 37

Asterisk indicating autoexposure lock 29

Astrophotography 234

Atomos Shogun video recorder 196, 210–211, 247

controlling from a7C camera 181

recording video to 182, 210–211

Audio Level Display menu option 107, 199, 200

Audio Out Timing menu option 107, 200

Audio Recording Level menu option 106, 199, 203

Audio Recording menu item 106, 199

Audio Signals menu item 142

using to silence self-timer 45

Auto Area Adjustment menu option 231

Autoflash setting 77–78

Autofocus

using while in manual focus mode 126

Autofocus point

zooming in on in playback mode 165

Auto ISO setting

setting minimum and maximum values for 71–72

setting minimum shutter speed for use with 72–73

using with Manual exposure mode 28, 72, 249

using with Manual Exposure Mode setting for movies 195

Automatic AF setting 15, 54

Auto Power Off Temperature menu item 174–175

Auto Review menu item 121–122, 156

deleting an image in Auto Review 122

Auto Slow Shutter menu item 106, 198–199

works only when Auto ISO is in effect 199

Auto Time Correction menu option 231

Auto Transfer When Shot menu item 228

AverMedia video capture device 181

Av/Tv Rotate menu item 139

AWB Lock Hold option for control button 100, 130

AWB Lock Toggle option for control button 100, 130

**B**

Back button focus feature 66, 125, 128

Battery

charging 3–4

indicator light 4

time for full charge 4

generic replacement 238–239

inserting into camera 4

Sony NP-FZ100 3, 238, 240

Battery charger

generic external charger 238

Sony AC-UUD12 4, 239

using as external power source 3–4, 239

Battery compartment 12, 155

flap in door for AC adapter cord 12, 155

Birds

photographing 250–251

Bit rates of video formats 196

Black and white

Picture Profile setting for 99

shooting in 90, 93, 94, 95

Black Gamma 99

Black Level 98

Blackmagic Design video capture device 180

Blank screen

selecting for LCD monitor 115

Bluetooth Remote Control menu item 231–232, 244

incompatibility with other settings 232

Bluetooth Settings menu item 225–226, 231

Blurred background 23–24

Bokeh 24

Bracket Order menu option 48

Bracket Settings menu item 47–48, 249

Bright Monitoring option for control button 131

incompatibility with other settings 131

Bulb setting for shutter speed 28

incompatibility with other settings 29

using remote control from Imaging Edge Mobile app for 28, 251

**C**

Calendar display of images in playback mode 157

Camera Settings1 menu

effects of settings on recording movies 204–206

Cases for a7C camera

Lowepro Apex 100 AW 238

Lowepro Apex 110 AW 238

Lowepro Passport Sling 238

Ruggard Hunter 25 Holster Bag 238

Catalyst Browse software

using to stabilize recorded movies 215

Center button 150

assigning a function to 133

Focus Standard setting for 150

general functions of 11, 150

using to adjust location of Flexible Spot focus frame 150

using to determine reason for setting conflict 249

using to expand or collapse group of continuous shots 44

using to magnify focus area 150

using to mark or unmark images for Playback menu options 150

using to play a video 150

using to return enlarged image to normal size 150, 157

Center option for focus area 59–60

distinguishing focus frame from Spot metering circle 74

using to focus on off-center subject 60

Center option for metering mode 74, 75

Charge lamp 12, 154

behavior during charging of battery 4

Chromatic Aberration Compensation 41–42

Circulation of Focus Point menu option 68

Clean HDMI signal output 12, 154, 181

Cleaning Mode menu item 175

Clear Image Zoom 110–113

Color Depth 99

Color Mode 99

Color Phase 99

Color Space menu item 41

Color temperature

using to set white balance 84

Color temperatures of various light sources 83

Compression of JPEG files 36

Conflicting settings

identifying 249

Connect During Power Off menu item 218, 228

Continuous AF setting 15, 54–55

only autofocus option available for recording movies 55

Continuous exposure bracketing setting of drive mode. See Exposure bracketing

Continuous Playback for Interval menu option 49–50, 165–166

Continuous Shooting Length menu option 45, 121

Continuous shooting option of drive mode 43–47, 248

displaying images taken in burst 44, 168

displaying indicator showing remaining capacity 121

displaying indicator showing remaining capacity for burst 45

display on monitor during 44

incompatibility with other settings 45, 248

selecting speed of 43

using autoexposure with 43, 248

using autofocus with 43, 248

using flash with 44

Contrast

adjusting 90–91

Control dial 10

assigning to adjust exposure compensation 140

changing assignment to aperture or shutter speed 139

changing rotation direction of 139

general functions of 10

locking operation of 141–142

using to move to other enlarged images 158

Control wheel 149–150

assigning a temporary function to 150  
 assigning to adjust exposure compensation 140, 150  
 changing assignment to shutter speed or aperture 139  
 changing rotation direction of 139  
 general functions of 10–11, 150  
 locking operation of 141–142  
 using for Program Shift 23  
 using to change magnification of enlarged image 157  
 using to move through images in playback mode 150  
 using to set aperture 150  
 using to set shutter speed 150  
**Control with Smartphone** menu item 222–223, 228  
 incompatibility with other settings 228  
**Copyright Info** menu item 184–185  
**Counter** option for movie recording 178  
**Creative Style** comparison charts 92  
**Creative Style** menu item 89–93  
 adjusting contrast, saturation, and sharpness 90–91, 248  
 descriptions of individual settings 92–93  
 saving custom settings 91  
 using with Raw images 91  
**CTRL for HDMI** menu item 181  
**Custom/Delete** button 10, 149  
 assigning function to 133  
 general functions of 10  
 using for In-Camera Guide option 149  
 using to delete images or videos 149, 159  
 using to return movable focus frame to center 149  
**Custom Key (Movies)** menu item 134–135, 202  
 assignments for Center button 135  
 assignments for Custom button 134–135  
 assignments for Down button 135  
 assignments for Left button 135  
 assignments for Right button 135  
 list of possible assignments 134–135  
**Custom Key (Playback)** menu item 135–136  
 list of options that can be assigned 136  
**Custom Key (Still Images)** menu item 122–134, 249  
 list of items that can be assigned to a button 123–125  
**Custom white balance**  
 how to set 84–85

**D**

**Date and Time**  
 setting with Setup menu 7–8, 183  
**Date Imprint** option for printing images 163  
**Date/Time Setup** menu item 7–8, 183  
**DaVinci Resolve** software 250  
**Day for night** movie recording 195  
**Daylight Savings Time**  
 adjusting 8, 183, 184  
**Delete Confirmation** menu item 173  
**Delete** menu item 161  
**Delete Registered AF Area** menu item 67  
 Deleting images or videos 159, 161, 173  
**Depth of field**

relationship to aperture setting 23–24  
**Detail (Picture Profile parameter)** 99  
**Dial/Wheel EV Compensation** menu option 140, 150  
**Dial/Wheel Lock** menu option 10, 141–142, 148  
**Dial/Wheel Setup** menu option 10, 26, 139, 150  
**Digiscoping** 234  
**Digital Zoom** 110–113  
**Dimmed** menu items 33–34  
**Diopter adjustment wheel** 145  
**Display as Group** menu option 44, 168  
**Display button** 11  
 using to cycle through display screens 151  
**Display Button** menu item 114–116  
**Display Continuous AF Area** menu item 55, 67–68  
**Display FTP Result** menu item 228  
**Display Media Information** menu item 188  
**Display My Menu** option for control button 133  
**Display Quality** menu item 174  
**Display Rotation** menu item 161, 169  
**Display screens**  
 for video recording and playback 213  
 playback mode 158  
 shooting mode  
 descriptions of 114–115  
 selecting with Display button menu item 114  
**Display Wi-Fi Info** menu item 230  
**Distortion Compensation** menu option 42  
**DMF (direct manual focus)** 15, 55, 249  
 requirement to hold shutter button down halfway with MF Assist 55  
**Down** button  
 assigning a function to 134, 151  
 using to display index screens in playback mode 11, 151  
 using to open movie playback control panel 151  
**DPOF (Digital Print Order Format)** printing 162–163  
**Drive mode** menu 42–47  
 basic procedure for using 17  
**DRO/Auto HDR** menu item 86–89  
 incompatibility with other settings 89  
**DRO bracketing** setting of drive mode 47  
 incompatibility with other settings 47  
 order not affected by Bracket Order menu setting 47, 48  
 using with self-timer 48  
**DRO (dynamic range optimizer)** setting  
 effect on Raw images 89  
**Drop-frame time code** 179  
**Dummy battery**  
 using to power camera 239–240

**E**

**Edit Device Name** menu item 232  
**Electronic viewfinder** 10, 144  
 adjusting brightness of 172  
 adjusting color temperature 172  
 adjusting frame rate of 116  
 switching between EVF and LCD screen 116, 145

Elgato video capture device 180, 181, 227  
Enlarge Image menu item 164–165  
Enlarge Initial Magnification menu item 165  
Enlarge Initial Position menu item 165  
Enlarging images by pressing AF-ON button 19, 157  
Enlarging images by tapping touch screen 20, 153, 158  
Entire Screen Average option for metering mode 74  
Epiphan video capture device 180  
Expand Flexible Spot setting for focus area 61  
Exposure bracketing  
    continuous 46  
        using with Manual exposure mode 46  
    incompatibility with other settings 47  
    order of bracketed exposures 46  
        changing 48  
    single 46–47  
    using flash with 46  
    using self-timer with 47–48, 249  
Exposure compensation  
    assigning to control wheel or control dial 140  
    limited adjustment range for movies 70, 205, 206–207  
    methods for adjusting 68, 144  
    unavailable in Intelligent Auto mode 70  
    using with Manual exposure mode 28, 70  
Exposure compensation dial 9  
    operation of 69, 70, 144  
Exposure Compensation menu item 68–69  
Exposure Compensation Setting menu option 80  
Exposure Mode (Movies) menu option 105, 192–195  
Exposure Mode (S & Q) menu option 105, 195, 208  
Exposure Settings Guide menu item 22, 24, 26, 119  
Exposure Standard Adjustment menu item 76–77  
Exposure Step menu option 24, 75–76  
External Flash Setting menu option 82–83  
External LCD monitor  
    Neewer LCD Field Monitor 245  
    Sony model no. CLM-FHD5 244–245  
Eye AF option for control button 127  
    compared to Face/Eye Priority in AF menu option 127  
Eye sensor 10, 145  
Eye-Start AF menu option 66, 238

## F

Face/Eye AF Settings menu option 64–65  
    using with tracking autofocus 62  
Face/Eye Frame Display menu option 64  
Face/Eye Priority in AF menu option 64  
    incompatibility with other settings 65  
    relationship to focus area setting 64  
    using with 4K video recording 65  
Face Priority in Multi Metering menu item 75  
Face Registration menu option 104  
Fadeout  
    in-camera effect for movies 193–194, 194, 195  
FEL Lock Hold/Toggle options for control button 129–130  
File/Folder Settings (Still Images) menu item 186

File Format (Movies) menu option 105, 195–196  
File Format (Still Images) menu option 34–36, 114–116  
File Name Format (Movies) menu item 187  
File Number (Movies) menu item 187  
File Number (Still Images) menu item 186  
File Settings (Movie) menu item 187–188  
Fill-flash setting 78  
Finder Color Temperature menu item 172  
Finder Frame Rate menu option 116  
Finder/Monitor menu item 116  
Firmware 188  
    checking for updates 188  
    displaying version 188  
Flash  
    basic procedure for using 16–17  
Flash Compensation menu item 80  
Flashing aperture value  
    meaning of 26  
Flashing areas of image in playback mode  
    indicating areas of overexposure or underexposure 159  
Flashing shutter speed value  
    meaning of 24  
Flash Mode menu item 77–79  
Flash Off setting 77  
Flash synchronization speed 77  
Flash triggers  
    Hensel Strobe Wizard Plus 243  
    Sony Wireless Radio Commander, FA-WRC1M 242–243  
    Sony Wireless Radio Receiver, FA-WRR1 242  
    Yongnuo RF603N II 243  
Flash units  
    Godox TT350 241  
    LumoPro LP180 243  
    Neewer NW320 241  
    Sony F60M 81  
    Sony HVL-F20M 80–81, 241  
    Sony HVL-F28RM 241  
    Sony HVL-F32M 81–82, 241, 242  
    Sony HVL-F43M 81, 82, 241  
    Sony HVL-F45RM 241, 242  
        updating firmware for 82  
    Sony HVL-F60RM 241  
Flexible Spot option for focus area 60–61, 249  
Focus Area Limit menu option 62–63  
Focus area menu item 58–62  
Focus frame  
    changing location of 60–61, 249  
    quickest ways to make changes 60–61  
Focus Frame Color menu option 67  
Focus Hold button on lens 128  
    assigning a control button option to 128, 134  
Focus Hold option for control button 55, 128  
Focusing  
    during video recording 206  
    general procedures for 15–16  
    tracking moving subjects. See Tracking autofocus  
    using touch screen 16

Focus Magnification Time menu item 56, 102  
 Focus Magnifier menu item 100–102  
     assigning to control button 102  
     cannot be used with continuous autofocus 100  
     compared to MF Assist option 101  
     different enlargement factors when APS-C/Super 35mm turned on 101  
     using touch screen with 101, 154, 213  
     using with autofocus 101, 102  
     using with video recording 102, 199, 213  
 Focus mode menu item 53–57  
 Focus point  
     checking in playback mode 165  
 Focus Standard option for control button 60–61, 126, 150  
 Folder Name (Still Images) menu item 186–187  
 Follow Custom (Still Images) option for assignment to control button 134  
 Follow Custom (Still Images or Movie) option for control button 136  
 Format menu item 6–7, 185  
 For Viewfinder display screen 114, 147  
     not available for video recording or in Movie or S & Q Motion mode 115  
     used with Quick Navi system 115  
 Frequency Band menu item 230  
 FTP Function menu item 228  
 FTP Power Save menu item 228  
 FTP Transfer Function menu item 220–222, 228  
 FTP Transfer menu item 228  
 Function button 146–149  
     assigning option to for playback mode 135–136  
     general functions of 10  
     using to activate Send to Smartphone option 149  
     using to navigate through menu screens 146  
     using to register AF area 66–67  
     using with Dial/Wheel Lock menu item 141–142  
     using with Quick Navi system 147–148  
 Function menu 146–147, 248  
     assigning options to 136–138, 146  
     list of options that can be assigned to 136–138  
     using during video recording 207  
     using to adjust settings 146–147  
     using to select Exposure Mode (Movies) settings 193  
 Function Menu Settings menu item 136–138, 146–147  
 Function of Touch Operation menu option 62, 140–141  
 Function Ring (Lens) menu option 140

**G**

Gamma 98–99  
 Gamma Display Assist menu item 172–173  
 Geotagging. See Location information: adding to images using Bluetooth connection  
 GPS information. See Location information  
 Grid Line menu item 118–119  
 Grip, accessory  
     Sony GP-VP2BT 244

**H**

Hauppauge video capture device 181  
 HDMI cable  
     using to connect camera to television set 180  
 HDMI Information Display menu option 180–181  
 HDMI Only menu items 181–182  
 HDMI port 12, 154  
 HDMI Resolution menu option 180  
 HDMI Settings menu item 180–181  
 HDR (high dynamic range) photography 87–90  
 HDR setting in camera 88–89, 250  
     incompatibility with Raw format 250  
 HDR video  
     using HLG gamma curves to create 99  
 Headphones jack 12, 154  
 Help system 130  
 High ISO Noise Reduction menu item 41  
     incompatibility with other settings 41  
 Highlight option for metering mode 74, 75  
 Histogram  
     activating in shooting mode 114, 159  
     playback mode 158–159  
     not available for movies 159  
 HLG (hybrid log-gamma) setting for gamma curve 99

**I**

IBIS (in-body image stabilization) 109, 236  
     using in conjunction with OSS (Optical SteadyShot) 109, 236  
 Icons for menu items for still images or movies 34  
 Image Index menu item 156, 167–168  
 Image Jump menu item 169–170  
 Image sensor 11  
     cleaning to remove dust 175  
     resolution of 11  
 Imaging Edge Mobile app  
     using to add location information to images 225–226  
     using to control camera remotely 222–223  
     using to transfer images to smartphone 217–220  
     using with Movie Edit add-on 215–216  
 Imaging Edge Software 91  
     using to control camera from computer 12, 109, 224–225, 229  
     using to create time-lapse movie 50  
     viewing location information with 226  
     where to download 3  
 Imaging Edge Webcam software 227  
 iMovie software 197, 214–215  
 Import Root Certificate menu item 232  
 In-Camera Guide option for control button 130  
 Index screens of images in playback mode 156–157  
     selecting number of images shown 167–168  
 Initial Focus Magnification menu option 100, 102  
 Initial Focus Magnification (Movies) menu option 106, 199  
 Intelligent Auto Mode 21–22  
     settings unavailable with 21, 62

- Interlaced video formats 196  
Internal memory  
  lack of for Sony a7C 4  
Interval shooting by remote control from computer 225  
Interval Shooting Function menu option 48–50  
  incompatibility with other settings 50  
IPTC Information menu item 184  
ISO  
  basic procedure for setting 71–72  
  effect of setting in Manual exposure mode 27, 72  
  minimum setting of 500 for some Picture Profile settings 72  
  native settings 72  
  range of available settings 71  
    how to limit 72  
  range of available settings for movies 99–100, 205  
  setting minimum and maximum values for Auto ISO 71–72  
ISO Auto Minimum Shutter Speed menu item 72–73  
ISO menu option 71–72  
ISO Range Limit menu option 72  
  relationship to Auto ISO setting 72  
ISO Setting menu option 71–73
- J**
- JPEG images 35–38  
JPEG Image Size menu item 37–38  
  relationship to Smart Zoom feature 113  
JPEG Quality menu item 36–37  
  effect on number of images that fit on memory card 38
- K**
- Kelvin units of color temperature 83  
Knee 99
- L**
- Language  
  selecting on Setup menu 8  
Language menu item 8, 183  
Large focus frame  
  indicating focusing difficulty or non-optical zoom 113  
LCD monitor 151–154  
  ability to rotate up, down, or 180 degrees forward 151–152  
  adjusting brightness of 171–172  
  in general 11, 151  
  setting information display screens for 114–116  
  switching between LCD screen and EVF 116  
  touch features of 11, 58, 152–154, 248–249  
  turning off with Monitor Off display screen option 114, 115  
  using as touch pad 153  
  using when lighting is dim 131  
Left button  
  assigning a function to 133, 151  
Lens Compensation menu item 41–42  
Lenses  
  A-mount category 237–238  
    limitations when used on a7C camera 237–238  
  attaching to a7C camera 3, 155  
  Compatibility with a7C camera 238  
  E-mount category 235–237  
  for APSC-C camera  
    attaching to a7C camera 39–40  
  for APS-C sensor cameras 235–237  
  for full-frame sensor cameras 235  
  for Super 35mm camera 40  
  Meike MK-6.5mm f/2 Circular Fisheye Lens for Sony E 237  
  Sigma 16mm f/1.4 DC DN Contemporary Lens for Sony E 237  
  Sigma 35mm f/1.4 DG HSM Art Lens for Sony E 235  
  Sony 50mm f/1.4 237  
  Sony DT 50mm f/1.8 SAM 237  
  Sony E 16mm–50mm f/3.5–5.6 PZ OSS 236  
  Sony E 16mm f/2.8 236  
  Sony E 18–135mm f/3–f/5.6 235–236  
  Sony E PZ 18–105mm f/4 G OSS 236  
  Sony FE 28–60mm f/4–5.6 9–10, 235  
    minimum focus distance of 10  
    retractable feature of 9–10  
  Sony FE 100mm–400mm f/4.5–5.6 GM OSS 109, 235  
  Sony FE 400mm f/2.8 GM OSS 140  
Lens mount 11, 155  
Lens Mount Adaptor  
  Sony LA-EA3 237  
  Sony LA-EA4 237  
  Sony LA-EA5 237  
Lens release button 11, 155  
Level display screen 115  
Live View Display menu item 25, 26, 27, 120  
  forced to Setting Effect On in some shooting modes 121, 194, 213  
  using when using external flash units 120, 242  
Location information  
  adding to images using Bluetooth connection 225–226  
  viewing 226  
Location Information Link Setting menu option 226, 231  
Locations of still images and videos on memory card 197  
Locking focus 54, 55  
Locking operation of control wheel and control dial 141–142  
Long Exposure Noise Reduction menu item 29, 40–41  
  incompatibility with other settings 40
- M**
- MAC address  
  displaying 230  
Manual exposure mode 26–29  
  using Auto ISO setting with 28–29, 249  
  using exposure compensation with 28  
  using for HDR photography 29  
  using for silhouettes 29  
Manual Exposure mode for movies 194–195  
  using Auto ISO with 195  
Manual focus 15–16, 55–57  
  focusing aids 55–57  
  using autofocus while in manual focus mode 126

- Manual Shift feature 29, 128  
 Marker Display menu item 107, 200, 203  
 Marker Settings menu item 107, 200–201  
 Megapixels  
     used in measuring image size 37  
 Memory buffer  
     icon on display with continuous shooting 44  
 Memory Card + HDMI menu option 181  
 Memory cards  
     capacity for storing images and videos 37–38  
     formatting in camera 6–7  
     inserting into camera 6  
     micro SD cards 5  
     operating camera without card 182, 196  
 Sony Memory Stick cards  
     incompatible with a7C camera 5  
 special requirements for video recording 5–6, 18, 191, 196, 197  
 types of 5–6  
 Memory card slot 12, 154  
 Memory menu item 30–31, 51  
 Memory Recall mode 29–31, 50–51, 248  
 recalling saved settings 50–51  
 Menu button 10, 145–146  
 assigning different button to its function 32, 145  
 using to return enlarged image to normal size 145  
 Menu items  
     dimmed because of conflicting settings 33–34  
     preceded by icons: stills, movies, etc. 34  
 MENU option for assignment to control button 132–133  
 Menus  
     listing of 32  
     navigating through 13, 32–33  
 Metering Mode menu item 73–75  
 MF Assist menu item 56, 101, 102–103  
     compared to Focus Magnifier option 56, 101, 103  
     need to press shutter button halfway when using with DMF 103  
     not available for movies or when using Mount Adaptor 56, 213  
 Microphone, built-in 11, 155  
 Microphones, external  
     jack for plugging into camera 12, 154  
     Rode VideoMic Pro 246  
     Sony ECM-B1M 245–246  
     Sony ECM-CG50 246  
     Sony ECM-GZ1M 245  
     Sony ECM-W1M 245  
     Sony ECM-XYST1M 245  
     Sony XLR-K2M 246  
 Minimum shutter speed  
     setting for use with Auto ISO 72–73  
 M.M. icon for metered manual value 27  
 Mode dial 9, 143–144  
     effects of shooting mode on recording movies 202–204  
 Monitor Brightness menu item 171–172  
 Monitor Off display screen option 114, 115  
 Mophie PowerStation XL portable USB battery 240  
 Movie button 9, 144  
     assigning a function to 144  
     limiting operation to Movie mode 191  
 Movie Edit add-on app  
     using to stabilize recorded movies 215–216  
 Movie option for control button 131  
 Movie position on Mode dial  
     reasons for using 203  
 Movies  
     editing 20, 214–216  
     playback 213–214  
     recording  
         adjusting sound level 199  
         basic procedure 18–19, 192–193, 211–212  
         focus modes available for 206  
         functions that work from control buttons during video recording 207–208  
     location of files 197  
     time limits 19, 192  
     to external video recorder 182, 200, 209–211  
 Movies & TV software for Windows 197, 214–215  
 Movie w/Shutter menu item 108, 143, 202  
 Multi Interface Shoe 9, 144, 241  
 Multi option for metering mode 74  
 My Dial 1 2 3 During Hold options for control button 131–132  
 My Dial 1-2-3 option for control button 132  
 My Dial Settings menu option 10, 131–132, 138–139, 150  
     using to move AF frame 68  
 My Menu 189–190  
     adding items to 189–190
- ## N
- Network menu 227–230  
 New Folder menu item 186  
 NFC area on right side of camera 154–155  
 NFC (near field communication) protocol 154  
     using to connect camera to Android device 219–220  
 NO CARD warning message 4, 108–109  
 Non-drop-frame time code 179  
     selecting 179  
 Non-optical zoom range 110–113  
 Not Set option for assignment to control button 133  
 NTSC/PAL Selector menu item 175
- ## O
- On/off switch 143  
 Optical zoom 110–113  
 OSS (Optical SteadyShot) 109, 236  
 Overheating of camera 174
- ## P
- Pairing (Bluetooth Settings) menu option 231  
 Pairing (PC Remote) menu item 229  
 PC Remote Connect Method menu item 229

- PC Remote Function menu option 229  
PC Remote menu item 229, 250  
PC Save Image Size menu item 229  
Peaking Color menu item 57, 103  
Peaking Display menu option 56, 103  
Peaking Level menu item 56, 103  
Peaking Setting menu item 56–57, 103  
  using with DMF 103  
Phase detection autofocus points 43  
Phase detection autofocus system  
  limits on compatible aperture settings 43  
Photo Capture menu item 164, 211, 234  
  using for bird photography 250–251  
Photomatix software 89  
Picture Effect menu item 93–95  
  comparison chart 95  
  descriptions of individual settings 94–95  
  incompatibility with other settings 93  
  using for movies 205  
Picture Profile menu item 96–100, 250  
  adjusting parameters for a Picture Profile 98–99  
  assigning to a control button for movie recording 205  
  characteristics of 10 preset options 96–97  
  comparison chart 97  
  effect of setting on Raw images 99  
  incompatibility with other settings 99  
  minimum ISO values for some settings 99  
  using S-Log or HLG settings for increased dynamic range in  
    movie recording 98–99  
Picture Profiles comparison chart 97  
Playback  
  images shot with continuous shooting 44, 168  
  jumping through images quickly by numbers or other op-  
    tions 169–170  
  movies  
    basic procedure 20, 213–214  
    changing volume 173, 214  
  selecting still images or videos to view 166–167  
  still images  
    basic procedures 19–20, 156  
Playback button 10, 149  
Playback menu 159–170  
Playback option for assignment to control button 132  
Playback Speed for Interval Shooting menu item 165–166  
PlayMemories Home software 215  
  using to create time-lapse movie 50  
  viewing location information with 226  
  where to download 3, 215  
Power Save Start Time menu item 174  
Power zoom (PZ) lens 111, 113, 236  
  reversing rotation direction of zooming with 113  
Pre-AF menu item 66, 128  
  using with Touch Focus 141  
Printing images directly to printer 162–163  
Priority Set in AF-C menu option 57–58  
  effect on continuous shooting performance 43, 57–58  
Priority Set in AF-S menu option 57  
Priority Set in Auto White Balance menu item 86  
Program Auto exposure mode for Movies 193  
Program mode 22–23  
Program Shift feature 22–23  
  not available for movie recording 213  
Progressive video formats 196  
Protect menu item 160–161  
Proxy Recording menu item 106, 197  
  location of proxy files 197  
Pull focus effect for movie recording 153, 198
- Q**
- Quick Navi system 115, 147–148
- R**
- Rating menu item 161–162  
Rating Set (Custom Key) menu item 162  
Raw + JPEG Save Images menu option 229  
RAW + JPEG Transfer Target menu item 228  
Raw File Type menu option 36  
Raw format 34–36  
  advantages and disadvantages of 34–36  
  compressed vs. uncompressed type 36  
  correcting images taken with bad camera settings 35  
  incompatibility with other settings 35–36  
  size of files 35–36  
Raw & JPEG option for File Format (Still Images) 36  
Rear Sync flash setting 79  
Recall Custom Hold options for control buttons 51–53, 125,  
  248  
Recall menu item 50–51  
Rec Control menu option 181  
  not always available for use 211  
Record Setting menu option 105, 196–197  
Recover Image Database menu item 188  
Red Eye Reduction menu item 82  
  incompatibility with other settings 82  
Register Custom Shooting Settings menu option 51–53, 248  
Registered AF Area Hold option for control button 67, 126  
Registered AF Area Toggle option for control button 67, 126  
Registered Faces Priority menu option 104  
Release without Card menu item 4, 108–109  
Release without Lens menu option 108, 234  
Remaining Images or Video Recording time  
  displaying 188  
Remote control devices  
  JJC BTR-S1 244  
  Sony GP-VPT2BT 110, 231–232, 244  
  Sony RMT-P1BT 110, 231–232, 244  
Remote control of camera from computer 223–225  
  using to save images with no memory card in camera 109  
Remote control of camera from smartphone or tablet 222–  
  223  
Reset EV Compensation menu option 70–71  
Reset Network Settings menu item 232  
Resetting camera settings 189

Resetting network SSID and password 230

Resolution of still images 37–38

Right button

assigning a function to 134, 151

Right/Left Eye Select menu option 64

Rotate menu item 161, 169

## S

Saturation

adjusting 90–91

Saturation (Picture Profile parameter) 99

Save/Load FTP Settings menu item 228

Saving frame from movie in camera 164

Saving settings with Memory Recall mode 29–31

Scene recognition feature 21–22

Security (IPSEC) menu item 232

Sekonic C-700 color meter 84

Select REC Folder menu item 185

Self-timer (Continuous) setting of drive mode 45–46, 249

using to take multiple shots 45

Self-timer During Bracket menu option 48, 249

Self-timer setting of drive mode 45

basic procedure for using 45

incompatibility with other settings 45

silencing beeps 45

using for closeup photography 45

using with exposure bracketing 47–48

Sending images to a computer using FTP 220–222

Sending images to a smartphone 217–220

Sending Target menu option 228

Send to Smartphone Function menu item 217–218, 227–228

Send to Smartphone menu option

activating with Function button 149, 218

Sensor plane indicator 9, 144

Serial number of camera

recording with images 185

Series Counter Reset (Movies) menu item 187

Server Setting menu item 228

Set File Name (Still Images) menu item 186

Setting Reset menu item 189

Setup menu 171–189

Shading Compensation menu option 41

Sharpness

adjusting 90–91

Shooting Interval Priority option for Interval Shooting Function 49

Shooting modes

list of 21

Shot Result Preview option for control button 131

Shoulder strap

attaching to a7C camera 3

Shutter Auto White Balance Lock menu option 100

Shutter button 9, 143

Shutter Priority exposure mode for movies 194

Shutter Priority mode 25–26

Shutter speed

Bulb setting for. See Bulb setting for shutter speed

range of available settings 22, 24, 25, 28

range of available settings for movies 193, 194, 195

Silent Shooting in Interval option for Interval Shooting Function 49

Silent Shooting menu option 108, 142

incompatibility with other settings 108

Single exposure bracketing setting of drive mode 46–47

Single shooting setting for drive mode 42

Single-shot AF setting 15, 53–54

Slide Show menu item 166

Slow and Quick Motion Recording 208–209

Slow-motion video 208–209

creating using 60p or 120p setting 197

Slow Sync flash setting 78–79

Smartphone or tablet

controlling camera with 222–223

transferring images and videos to 217–219

Smart Zoom 110–113

Sony alpha a7C camera

disadvantages of 1

features of 1

items supplied with in box 3

Sony Bravia HDTV 181

Sony DT 16–50mm f/2.8 SAM 237

Sony FE 50mm f/2.8 Macro 235

Sony FE 85mm f/1.8 235

Sony HVL-LBPC video light 201, 202

Sony ILCE-7C camera. See Sony alpha a7C camera

Sony Mount Adaptor. See Lens Mount Adaptor

Sony Shoe Adapter, ADP-MAA 241

Sony user's guide for a7C camera

where to download 3

Sony Wireless Radio Commander 82

updating firmware for 82–83

Sony Wireless Radio Receiver 82

Sounds made by camera

silencing 108, 142

Speaker

location of 9, 144

Specify Printing menu item 162–163

Spot AEL Hold option for control button 129

Spot AEL Toggle option for control button 129

Spot focus for movie recording 141, 153

Spot Metering Point menu item 75

Spot option for metering mode 74, 75

distinguishing spot circle from focus frame 74

linking spot circle to movable focus frame 74, 75

Spotting scope, connecting camera to 234

S & Q Settings menu option 105, 197, 209

SSID/PW Reset menu option 230

Stabilizing movies using software 215–216

SteadyShot menu item 109

SteadyShot Settings menu option 109

Step-by-step guides

adding location information to images 225–226

connecting with NFC 219

- creating time-lapse movie with Interval Shooting Function
    - option 48
  - sending images to a smartphone 217–218
  - sending images to computer using FTP Transfer function 220–221
    - Slow and quick motion recording 208–209
    - taking pictures in Auto mode 13–14
    - using a Bluetooth remote control 231
    - using smartphone as remote control for a7C 222–223
    - using Sony's light-based wireless flash system 81
    - using Sony's radio-based remote flash system 82
  - Still images
    - saving from video recording 164, 211
  - Still Image Save Destination menu option 109, 229
  - Street photography 233–234
    - extracting still frames from 4K video for 233–234
    - using tilting LCD screen for 233
  - Subject Detection menu option 64
    - assigning to control button 127
  - Switch AF Frame Move Hold option for control button 68, 128
  - Switch Focus Area option for control button
    - using in conjunction with Focus Area Limit menu option 63
  - Switch Right/Left Eye option for control button 128
  - Switch Vertical/Horizontal AF Area menu item 63
- T**
- Tables
    - behavior of a7C for video recording in various modes 204
    - Camera Settings1 menu items that affect movies and can be adjusted for movie recording 205
    - number of images that fit on 64 GB memory card 37
    - settings on a7C for recording video to Shogun recorder 210
    - suggested control assignments for movie recording 212
    - suggested menu settings for recording movies in Movie mode 212
    - suggested settings for Auto Mode still images 13
    - suggested settings for movies in Intelligent Auto mode 18
  - TC Format menu option 179
  - TC Make menu option 179
  - TC Output menu option 181
  - TC Preset menu option 178–179
  - TC Run menu option 179
  - TC/UB Display Setting menu option 178, 203
  - TC/UB Settings menu item 177–179
    - unavailable in certain shooting modes 177
  - Telescope, connecting camera to 234
  - Temperature of camera
    - regulating with menu option 174–175
  - Tethered shooting 154, 223–225, 250
  - Time code
    - in general 177
    - options for displaying and recording 178, 179
  - Time-lapse movie 249
    - creating using Sony software 50
    - using Interval Shooting Function option for 48–50, 249
- U**
- UB Preset menu option 179
  - UB Time Record menu option 179
  - Up button. See Display button
  - USB Connection menu item 182
  - USB LUN Setting menu item 182
  - USB port 12, 154
  - USB power bank
    - using to charge battery or power camera 240
  - USB Power Supply menu item 182–183
  - User Bit option for movie recording 178
    - setting to display current time 178, 179
- V**
- Variable bit rate setting for video formats 196
  - Version menu item 188
  - Video Light Mode menu option 107, 201–202
  - Video lights
    - Lume Cube Panel GO 243
    - Sony HVL-LBPC 243
  - View and transfer images on smartphone when camera powered off 218
  - Viewfinder. See Electronic viewfinder
  - Viewfinder Brightness menu item 172
  - VIEW icon on screen to indicate Setting Effect Off 120
  - View Mode menu item 157, 166–167
  - Volume Settings menu item 173
- W**
- Webcam

using a7C camera as 227  
White balance bracketing setting of drive mode 47  
  changing order of exposures 48  
  using with self-timer 48  
White balance comparison chart 86  
White Balance menu item 83–86  
  adjusting setting using Raw software 85  
  adjusting setting with color axes 85, 248  
  available settings 84  
  fixed to Auto in Intelligent Auto mode 86  
Wide option for focus area 58–59  
Wi-Fi Direct Info menu option 229  
Wi-Fi Settings menu item 230–231  
Wind Noise Reduction menu item 107, 200  
Wireless Flalsh menu option 80–81  
  using Sony light-based remote flash system 80–81  
  using Sony's radio-based remote flash system 81–82  
Wireless network settings  
  resetting 230  
Wireless Test Flash option for control button 81, 129  
Wireless tethered shooting 225, 229  
WPS Push menu option 230  
Write Serial Number menu item 185

## X

XAVC S 4K format for movies 195–196, 211  
XAVC S HD format for movies 196

## Z

Zebra Setting menu item 117–118  
  saving custom settings 117–118  
  using with movie recording 117  
Zone focusing 126  
Zone option for focus area 59  
Zooming lens beyond optical zoom range 110–113  
Zoom menu option 110–111  
  assigning to control button 110  
  not available for use with Power Zoom lens 110  
  using with Bluetooth remote control 110  
Zoom Setting menu item 111–113  
Zooom Ring Rotate menu option 113