

# Contents

<b>Acknowledgments</b>	<b>13</b>
<b>Introduction</b>	<b>14</b>
<b>Chapter 1: Preliminary Setup</b>	<b>18</b>
Setting Up the Camera	18
Charging and Inserting the Battery	18
Inserting the Memory Card	20
Setting the Language, Date, and Time	26
<b>Chapter 2: Basic Operations</b>	<b>28</b>
Taking Pictures	28
Fully Automatic—Auto Mode	28
Basic Variations from Fully Automatic	30
Focus	32
Manual Focus	34
Exposure	35
Exposure Compensation	35
Flash	39
Motion Picture Recording	41
Viewing Pictures	42
Review While in Shooting Mode	42
Reviewing Images in Playback Mode	43
Playing Movies	44
<b>Chapter 3: The Shooting Modes</b>	<b>46</b>
Auto Mode	47
Program Mode	48
Shutter Priority Mode	50
Aperture Priority Mode	55
Manual Exposure Mode	60
Scene Modes	62
Night Landscape	64
Night Portrait	65
Backlighting/HDR	66
Smart Portrait	71
SCENE Mode Settings	73
Portrait	74

## PHOTOGRAPHER'S GUIDE TO THE NIKON COOLPIX P500

Landscape	74
Sports	74
Party/Indoor	75
Beach	75
Snow	75
Sunset	76
Dusk/Dawn	76
Close-up	77
Food	78
Museum	79
Fireworks Show	80
Black and White Copy	80
Panorama	81
Easy Panorama	82
Panorama Assist	83
Pet Portrait	85
User Setting Mode	85
<b>Chapter 4: The Shooting Menu</b>	<b>88</b>
Image Quality	93
Image Size	94
Optimize Image	96
Normal	96
Softer	97
Vivid	97
More vivid	98
Portrait	98
Custom	99
Black-and-White	100
White Balance	102
Auto	105
Preset Manual	105
Daylight	106
Incandescent	106
Fluorescent	106
Cloudy	107
Flash	107
ISO Sensitivity	108
Metering	111
Exposure Bracketing	113

## PHOTOGRAPHER'S GUIDE TO THE NIKON COOLPIX P500

AF Area Mode	114
Face Priority	114
Auto	115
Manual	115
Center	116
Subject Tracking	117
Autofocus Mode	118
Flash Exposure Compensation	118
Long Exposure Noise Reduction	119
Active D-Lighting	119
Save User Settings	121
Reset User Settings	121
<b>Chapter 5: Other Controls</b>	<b>122</b>
Power Switch	123
Shutter Release Button	123
Mode Dial	123
Zoom Lever	124
Continuous-shooting Button	125
Flash Release Button	133
Side Zoom Control	133
USB and HDMI Ports	135
Lamp	135
Playback Button	136
Display Button	137
Movie Button and Switch	138
Command Dial	138
Menu Button	139
Trash Button	139
Multi Selector and its Buttons	140
OK Button	141
Direction Buttons	141
Up Button	143
Right Button	143
Down Button	143
Left Button	144
Monitor Button	145
Diopter Adjustment Wheel	145
Swiveling LCD Screen	146

<b>Chapter 6: Playback</b>	<b>147</b>
Normal Playback	147
Index View and Enlarging Images	148
Calendar View	150
Different Playback Screens	151
Viewing Shots Taken in a Sequence	154
The Playback Mode Menu	157
Play Mode	157
Favorite Pictures Mode	158
Auto Sort Mode	160
List by Date Mode	161
The Playback Menu	161
Quick Retouch	162
D-Lighting	164
Skin Softening	164
Filter Effects	164
Print Order	168
Slide Show	169
Protect	171
Rotate Image	172
Hide Image	172
Small Picture	173
Voice Memo	174
Copy	176
Black Border	177
Sequence Display Options	178
Choose Key Picture	178
Favorite Pictures	179
Printing Images from the Camera	179
Printing Directly from the Camera	180
<b>Chapter 7: Setup Menu</b>	<b>182</b>
Welcome Screen	183
Time Zone and Date	184
Monitor Settings	185
Print Date	187
Vibration Reduction	187
Motion Detection	189
AF Assist	191
Red-eye Reduction	191

Digital Zoom	192
Assign Side Zoom Control	194
Sound Settings	195
Auto Off	195
Format	196
Language	197
TV Settings	198
Charge by Computer	199
Reset File Numbering	199
Blink Warning	200
Reset All	200
Firmware Version	201
<b>Chapter 8: Motion Pictures</b>	<b>203</b>
Movie-making Overview	203
Quick Guide to Recording a Movie Clip	204
Still Photo Settings Available for Movies	206
Focus Mode	207
Exposure Compensation	207
Optimize Image	207
White Balance	208
Metering	208
Self-timer	208
Zoom	209
Shutter Release Button: Taking Stills During Video Recording	209
Settings that Are Not Adjustable for Video Recording	209
The Movie Menu	210
Movie Options	210
HS Movie Options	213
Open with HS Footage	216
Autofocus Mode	217
Electronic VR	219
Wind Noise Reduction	219
Movie Playback and Editing	219
Playback	219
Editing	221

<b>Chapter 9: Other Topics</b>	<b>225</b>
Using the Superzoom Lens	225
Macro (Close-up) Shooting	233
Using Flash	237
Other Flash Settings	242
Infrared Photography	243
Street Photography	245
Making 3D Images	249
Connecting to a Television Set	250
<b>APPENDIX A: Accessories</b>	<b>253</b>
Cases	253
Batteries	254
AC Adapter	255
Add-on Filters and Lenses	257
Flash	258
<b>APPENDIX B: Quick Tips</b>	<b>261</b>
<b>APPENDIX C: Resources for Further Information</b>	<b>265</b>
Photography Books	265
Web Sites	265
Digital Photography Review	266
Reviews of the Coolpix P500	266
The Official Nikon Site	267
Flickr Discussion Group	267
<b>Index</b>	<b>268</b>