

Index

Symbols

- 3D images
 - creating 317
- 3D Viewing menu option 233
- 35mm-equivalent zoom range 188

A

- AC adapter/charger 20
 - using to power camera 333
- Adobe Camera Raw software 113, 305
- Adobe Photoshop Elements software 306
- Adobe Photoshop software 306
 - using for HDR processing 169
- AEL Toggle 213
 - using to lock exposure 213
- AF Illuminator menu option 193
- AF Illuminator/Self-timer lamp 201
- AF/MF Control Toggle menu option 137
 - using to change focus mode 214
- Anti Motion Blur setting 60, 80, 310
- Aperture
 - adjusting during video recording 285
 - defined 63
 - limitations on wide settings 68
 - range of available settings 63, 75
- Aperture Priority mode
 - in general 63–67
 - making settings 67
 - using to blur background 66
 - using to control depth of field 64
- Aperture Priority setting for movies 284
- Area Setting menu option 261
- Aspect Ratio
 - relation to Image Size 106
- Aspect Ratio menu option 108

- 1:1 setting 110
- 3:2 setting 109
- 4:3 setting 110
- 16:9 setting 109
- effect in Movie mode 111
- not available in Sweep Shooting mode 111
- Astrophotography 319–323
 - settings for 322
- Audio recording
 - using video recording for 351
- Audio Recording menu option 282
- Audio Signals menu option 268
- Autoflash mode 36, 125
- Autofocus Area menu option 138–139
- Auto ISO 147
 - inability to set in Manual exposure mode 76
 - setting minimum and maximum values for 147
- Auto Portrait Framing menu option 143
- Auto Review option 53, 220, 242
- Auto Rotate option 237
- availability during video recording
 - always active for movie shooting 192
- AVCHD files 276
 - locating on computer 276, 300
- AVCHD format
 - selecting for movie recording 51

B

- Background defocus 40
- Backlight Correction HDR 60
- Battery
 - charging 19
 - charging with USB connection to computer 268
 - extra 332
 - inserting into camera 19
 - NP-BX1 19
 - time for full charge 21
- Battery charger
 - external 332
 - USB 333

- Bit rate for video recording 278
- Black and White option for Creative Style 173
- Bokeh 40, 66
- Bounce flash 200
- Brightness setting 41
- BULB setting 75
 - suggestions for using 352
 - use of cable release with 336

C

- Cable release
 - using with RX100 336
- Canon HF-DC1 and DC2 High-Power Flash 340
- Cases for RX100
 - Case Logic TBC-302 331
 - Kata DW-491 331
 - Lowepro Apex 30 330
 - Lowepro Tahoe 10 331
 - Lowepro Tahoe 30 330
 - Sony LCJ-RXA 329
- Center Autofocus Area option 139
- Center button 28, 212
 - assigning function to 212, 250
 - using for playback of panorama 216
 - using to end slide show 216
 - using to mark images for deletion or protection 216
 - using to play video 215
 - using to return enlarged image to normal size 216
- Center option for Metering Mode 150
- Clear Image Zoom 187–191
 - characteristics of 188
 - incompatibility with other settings 192
 - making settings 189–191
- Clear Image Zoom and Digital Zoom
 - indicators on LCD display 190
 - relationship between 190
- Clock Setup menu 29
 - in general 260
- Color setting 42
- Color Space menu option 194

- Color temperature 153
 - examples of values for light sources 153
- Color Temperature/Filter menu option 155
- Compression of images 111
- Continuous Autofocus menu option 132
- Continuous shooting
 - benefits of 348
 - incompatibility with other settings 116
 - in general 115
 - menu option 117
 - shooting rate 117
 - using for portraits 116
 - using with flash 117
- Contrast
 - adjusting 170
- Control ring 201–202
 - blocking by attachment to tripod 345
 - items that can be assigned to 202
 - table of functions with Standard setting 203
 - using to adjust manual focus 203
 - using to control Program Shift 62
 - using to control zoom 199
 - using to display Function menu 203
 - using to select Scene mode settings 79
 - using to select shutter speed 72
 - using to set aperture 67
 - using to set panorama direction 94, 114
- Control Ring Display menu option 248
- Control Ring menu option 201, 247
- Controls on back of camera 32
- Controls on bottom of camera 33
- Controls on front of camera 32
- Controls on top of camera 31
- Control wheel
 - screen icon showing function 210
 - using to control aperture and shutter speed 74
 - various functions of 210
- Control wheel and its buttons 210–218
- Creative Style chart of sample images 171
- Creative Style menu option 169–172

- adjusting contrast, saturation, and sharpness 170, 350
- availability for video recording 289
- compatibility with RAW quality 171
- incompatibility with shooting modes 171
- making settings 169
- Creative Style settings for Portrait, Landscape, and Sunset
 - differences from similar Scene mode settings 173
- CTRL for HDMI menu option 265
- Custom menu
 - in general 239
- Custom white balance
 - setting 157
 - using stored setting 159

D

- Date
 - imprinting permanently on images 195
- Date and time
 - setting 28, 260
- Date/Time Setup menu option 260
- Daylight Savings Time
 - menu option 29
- Delete button 207
- Delete menu option 230
- Deleting images
 - using Delete button 209, 226
- Demo Mode menu option 271
- Depth of field 64
 - relationship to aperture 64
- Diana camera 175
- Digiscoping 319, 323
- Digital Zoom 187–191
 - availability during video recording 289
 - making settings 189–191
- Direction buttons
 - using for navigation 216
- Direct Manual Focus (DMF) 133
 - disadvantage of using control ring 134
 - suggestions for using 350
 - using for macro photography 303

- using instead of Single-shot Autofocus 134
- Direct Mode for Eye-Fi card 25
- Display button 217
- Display Button (Monitor) menu option 243–244
- Display Card Space menu option 259
- DMF. *See* Direct Manual Focus (DMF)
- Down button
 - functions of 217
 - using to toggle aperture and shutter speed settings 216
- DPOF (Digital Print Order Format) 234
- Drive Mode
 - in general 114
 - use in Intelligent Auto mode 47
- Drive Mode button 114, 219
- Drive Mode menu 47, 115
 - general options 48
- DRO. *See* Dynamic Range Optimizer option
- DRO/Auto HDR menu option 162–168
 - incompatibility with other settings 169
- Drop Sensor menu option 270
- DRO settings
 - and RAW quality 169
- Dynamic range of images 162
- Dynamic Range Optimizer option 162, 162–164
 - recommendations for use 168

E

- Electronic level 244
- Enlarged image
 - returning to normal size with center button 216
- Enlarging images in playback mode 200, 221, 223
- Exposure bracketing 122
 - incompatibility with Auto modes 123
 - making settings 123
 - order of images taken 123
 - using to create HDR image 122
- Exposure compensation
 - availability with mode dial set to M 218
 - when recording movies 293
 - during video recording 293

- example of use 218
- Exposure value (EV) 219
- External battery charger 268
- External flash
 - using with RX100 338–341
- Eye-Fi card
 - Direct Mode 25
 - general description 25
 - menu option for 266

F

- Face Detection On 142
- Face Detection On (Registered Faces) 141
- Face Priority Tracking menu option 253
- Face Registration menu option 254
- Fade in or out during video recording 286
- FH designation for video quality 279
- File Format menu option 50, 276
- File Number menu option 256
- Fill-flash mode 46, 126
- Filter adapter 325, 333
 - Magfilter system 335
- Filters
 - attaching to lens 325
- Fireworks setting 91
- Firmware of camera 268
- Flash
 - diffusing 352
 - general use of 44–46
 - incompatibility with some settings 46
 - use with continuous shooting 117
- Flash button 217
 - using to select flash mode 200
- Flash compensation
 - distinguished from exposure compensation 151
- Flash Compensation menu option 151
- Flashing aperture indicator
 - indication of inability to set 73
- Flash Mode 45, 124–128
- Flash Off menu option 125

- Flash Off mode 47
- Flash unit 200
 - causing to pop up 200
 - holding with finger for bounce flash 200
- Flexible Spot Autofocus Area option 140
 - similarity of focus frame to Spot metering circle 151
- Focusing
 - general procedure 37
- Focus Magnifier menu option 135, 215
- Focus Magnifier Time menu option 135, 253
- Focus Mode menu option 130–137
- Format menu option 255
- Formatting memory card 27
- “Front Sync” option 126, 128
- Function button 205
 - assigning functions to 205, 249
 - table of default settings 250
 - using to rotate images in playback mode 206, 227
- Function Button menu option 249
- Function menu 205
 - with video recording 293
- Function of Center Button menu option 49, 212, 250
 - using to activate Focus Magnifier option 135
- Function of Left Button menu option 251
- Function of Right Button menu option 252
- FX designation for video quality 279

G

- Gourmet setting 83
- Gray card for setting white balance 158
- Grid Line menu option 240
- Grip
 - accessory 335

H

- Hama Cable Release for Digital Cameras 336
- Hand-held Twilight setting 60, 88, 311
- HDMI cable
 - using to connect RX100 to HDTV 327
- HDMI Resolution menu option 265

- HDR menu option 165–166
 - incompatibility with RAW images 169
- HDR Painting setting 182
- HDR photography. *See* High Dynamic Range photography
- Help button 207
 - using to get tips about features 208
 - using with Photo Creativity option 208
- High Contrast Monochrome setting 181
 - using for street photography 316
- High Dynamic Range photography 162
 - using special software for 168
- High ISO Noise Reduction 193
 - incompatibility with RAW quality 193
- High Sensitivity setting 91, 311
 - using for street photography 316
- Histogram 224–225
 - playback mode 224
 - shooting mode 245
- Holga camera 175
- Hoodman Hoodloupe 3.0 344
- Hoya R72 infrared filter 326

I

- Illustration setting 186, 326
- Image capacity
 - number of images that fit on memory card 107
- Image Data Converter software 18, 113
- Image files
 - locating on computer 299
- Image Index menu option 232
- Image Size (Dual Recording) menu option 275, 280
- Image Size menu option 105
 - relation to Aspect Ratio and Quality 105
 - unavailable for RAW images 108
- iMovie software 277
- In-Camera Guide/Delete button 44, 207
- Index screens 221
- Infrared filter
 - attaching to RX100 325
- Infrared photography 324–326

- Initialize menu option 272
- Intelligent Auto mode 56–57
 - limitations on settings 57
 - scene detection 57
 - suggested settings for movie recording 51
 - suggested settings for still images 35
 - using for macro photography 302
 - using for taking pictures 34
 - using for video recording 291
- Interlaced video recording 278
- iPad
 - playing movies on 351
- iPhone
 - playing movies on 351
- iPod
 - playing movies on 351
- ISO 145–148
 - conflicts with other settings 149
 - considerations for setting 76, 146
 - in general 146
 - limitation on setting for movies 284
 - making settings 146–147
 - setting in Manual exposure mode 76
 - setting values higher than 6400 148, 149
 - using high values 307
- iTunes
 - playing movies with 351

J

JPEG files 112

K

Kelvins as measure of color temperature 153

L

Landscape setting for Creative Style 173

Landscape setting for Scene mode 85

Language

setting 30, 269

- Language menu option 269
- Left button
 - assigning function to 251
- Lens adapter 321, 325
- Level, electronic 244
- Locking focus 131
- Lomo camera 175
- Lomography 175
- Long Exposure Noise Reduction 193
- Low-light photography
 - guidelines for choosing settings 313
 - in general 306–312

M

- Macintosh computer
 - photo software compatible with 18
- Macro focus 84
 - focusing distance 303
- Macro photography 301–302
 - suggestions for using 350
- Macro setting 84, 302
- Manual exposure mode
 - in general 73–75
 - making settings 74
 - range of apertures available 75
 - range of shutter speeds available 75
- Manual Exposure mode for movies 286
- Manual focus 134–137
 - reasons for using 134
 - using for macro shots 84
- Meade ETX-90/AT telescope 320
- Memory card
 - capacity for video recording 274
 - determining what size to use 23
 - error message if no card inserted 21
 - formatting when first used 27
 - how to format 27
 - image capacity 23, 107
 - inserting into camera 26
 - need for 21

- reading with external reader 24
 - video capacity 23
- Memory Card Tool menu 27
 - in general 255
- Memory menu option 197
- Memory Recall menu option 196
- Memory Recall shooting mode 98, 197
 - how to use 98
 - items that can be stored 100
 - suggestions for using 349
- Memory Stick card 22
- Menu button 205
- Menu Start menu option 262
- Menu system
 - navigating through 35
 - various menus available 104
- Metering Mode menu option 149–150
- MF Assist menu option 135, 212, 252
- Micro-SD card 22
- Miniature setting 184
- M.M. indicator for Metered Manual 74
- Mode dial 34, 199
 - effect of position on movie recording 287
- Mode Dial Guide 34, 196
 - and Movie mode 283
 - display of Scene Selection menu 77
- Mode Dial Guide menu option 263
- Moon
 - photographing 322
- Movie button 204
 - avoiding accidental presses 204
 - inconvenient location of 16
 - using for movie recording 52
- Movie exposure mode. *See* Movie (final item on Movie menu)
- Movie (final item on Movie menu) 282–286
- Movie menu 50
 - in general 275
- Movie playback 215, 296–297
- Movie playback controls 298
- Movie playback volume 298

- adjusting with down button 219
- Movie recording
 - general overview 50
- Movies
 - adjusting playback volume 55
 - editing with computer 55, 299
 - playback 54
 - playback controls 54
- MP4 files 276
 - locating on computer 300
- Multi Autofocus Area option 138
- Multi Frame Noise Reduction setting 312
 - how to use 148
 - incompatibility with other settings 149
 - using to set ISO higher than 6400 147
- Multi option for Metering Mode 150

N

- New Folder menu option 258
- Night Portrait setting 90, 309
- Night Scene setting 88, 308
 - use of flash with 46
- NTSC video standard 277

O

- Optical slave units
 - using with RX100 338–340
- Optical zoom 188
 - effect of Image Size setting on 189
- Orange light in power button 200
- Overlay mode 60

P

- PAL video standard 277
- Panorama
 - playback using center button 216
 - shooting for larger height 94
- Panorama direction
 - setting with control ring 94

- Panorama Direction menu option 93
- Panoramas
 - playback 96
 - resolution 94
- Panorama Size menu option 93
- Partial Color setting 179
 - adjusting range of colors for 180
- Peaking Color menu option 137, 247
- Peaking Level menu option 136, 246
- Peaking option 136
 - using with Direct Manual Focus 247
- Pet setting 82
- Photo Creativity feature 38–43, 217
 - background defocus 40
 - brightness 41
 - color 42
 - combining settings 44
 - effect on video recording 292
 - how to make settings 39
 - not available with RAW format 39
 - picture effect setting 43
 - resetting defaults 44
 - vividness setting 43
- Photomatrix Pro software 168, 169
- Physical controls
 - effects on video recording 291–293
- Picture Effect chart of sample images 176
- Picture Effect menu option (Playback menu) 236
- Picture Effect menu option (Shooting menu) 43, 174–185
 - availability for video recording 289
 - compatibility with other settings 174
 - incompatibility with other settings 187
 - making settings 174
- Playback
 - general procedures 53, 220
 - movies 296–297
 - selecting still images or movies 222
- Playback button 53, 221
 - using to enter playback mode 228
 - using to turn on camera 200, 204, 228

- using to view images 204
- Playback Display menu option 237
- Playback display screens 223
- Playback menu 228
- Playing movies 54
- PlayMemories Home software 267
 - installing 18
- Pop Color setting 177
- Portrait setting for Creative Style 173
- Portrait setting for Scene mode 79, 301
- Posterization setting 178
- Power button 200
- Power Saving Start Time menu option 265
- Program Auto setting for movies 283
- Program mode 61
 - limitation on shutter speed 61
 - use of flash with 47
- Program Shift 61
 - reasons for using 62
- Progressive video recording 278
- Protect menu option 233
- PS designation for video quality 279

Q

- Quality menu option 111
- Question mark button 207
- QuickTime software 277

R

- RAW and JPEG settings
 - considerations for choosing 112
- RAW & JPEG setting 113
 - effect of Image Size setting 114
- RAW quality 111
 - ability to alter settings after shooting 112
 - adjustments to images 305
 - advantages and drawbacks 304
 - disadvantages of using 113
 - general considerations for using 304–305
 - settings incompatible with 304

- unavailability of other settings 113
- Rear Sync menu option 126–127
- Record Setting menu option 277
- Recover Image Database menu option 258
- Red Eye Reduction menu option 239
- Resetting camera to default settings 272
- Resolution of images 105
- Retro Photo setting 179
- Rich-tone Monochrome setting 183
- Right button
 - assigning function to 252
- Rotating images
 - using Function button 206, 227
 - using Playback Display menu option 237
- S**
- Saturation
 - adjusting 170
- Scene detection 57
- Scene mode
 - general characteristics 76
 - limitations on settings 77
 - making settings 77
- Scene mode settings
 - changing with control ring 79, 196
 - effect on video recording 291
- Scene Selection menu option 77, 196
- Scene Selection screen
 - getting access through Shooting menu 78
- SD cards
 - varieties of 22
- SDHC card 22
- SDXC card 22
 - compatibility with computers 25
- Sekonic Prodigy color temperature meter 156
- Selecting still images or movies for playback 229, 297
- Select REC Folder menu option 257
- Self-portrait timer 120
- Self-timer
 - making settings 119

- setting 48
- uses for 119
- using to avoid camera shake 352
- Self-timer (Continuous) 122
- Self-timer lamp 201
- Setup menu
 - in general 261
- Sharpness
 - adjusting 170
- Shooting menu
 - effects of settings on video recording 288
 - items that are “grayed-out” 104
 - navigating and selecting items 102–103
- Shooting modes
 - in general 56
- Shooting still images during video recording 276, 280
 - limitation on 280
- Shooting still images in Movie mode
 - limitation on 275
- Shooting Tip List 194, 207
- Shutter button 199
 - using to switch to shooting mode 204
- Shutter Priority mode
 - in general 69–72
 - range of shutter speeds available 69
 - setting 72
- Shutter Priority mode for movies 285
- Shutter speed
 - limitations on selecting 61
 - range of available settings 69, 75
 - using to stop action 69
- Single shooting menu option 116
 - use to turn off continuous shooting 116
- Single-shot Autofocus menu option 130
- Slide show
 - ending with center button 216
- Slide Show 231
- Slow Sync flash mode 90, 126
 - using with Shutter Priority or Manual mode 128
- Smile/Face Detection menu option 141, 254

- Smile Shutter 143
- Soft Focus setting 181
- Soft High-key setting 179
- Soft Skin Effect menu option 141
- Sony DSC-RX100 camera
 - drawbacks of 16
 - items shipped with 18
 - positive features of 15
- Sony support web site 269
- Specify Printing menu option 234
- Speed Priority continuous shooting 118
 - shooting rate 118
- Sports Action setting 81
- Spot metering 150
 - similarity of metering circle to focus frame 151
- Standard setting for Creative Style 172
- SteadyShot (Movie menu option) 281
- SteadyShot (Shooting menu option) 194
- Still image files
 - locating on computer 299
- Still images
 - shooting during video recording. *See* Shooting still images during video recording
- Still/Movie Select menu option 53, 228
- Street photography 314–316
 - suggested settings 315
 - using zone focusing 214
- Sunset setting for Creative Style 173
- Sunset setting for Scene mode 86
- Sunset setting of Creative Style option 87
- Superior Auto mode 37, 59
 - situations using multiple shots 60
 - using for macro photography 302
- Sweep Shooting mode
 - focus and exposure fixed at start of shot 96
 - in general 92
 - limitation on focal length setting 93
 - menu options available with 93, 95
 - suggested settings for 95
 - taking pictures 95

- use of electronic level with 96
- SYK-5 optical slave unit 342

T

- Table of Zoom Ranges and Image Sizes 192
- Taking still images
 - general overview 34
- Telescope
 - connecting to camera 321
- Television set
 - using as monitor in shooting mode 328
- Television set
 - connecting RX100 to 327
- Toy Camera setting 175
- Tracking Focus 49, 212
 - for tracking faces 254
 - using center button for 250
 - with video recording 293
- Trash button 207
- Tripod
 - problem of blocking control ring 345
- Tripod screw
 - using to elevate RX100 above tripod 345
- Tv indicator for Time value 72

U

- Upload Settings menu option 266
- USB cable
 - connecting to camera 33
 - using to connect camera to computer 266
- USB Connection menu option 266
- USB LUN Setting menu option 267
- USB port 33
- USB Power Supply option 267

V

- Version menu option 268
- VGA setting for Image Size 106
- VGA video format 279

- Video
 - memory card speed requirements 24
 - Video recording
 - effect of mode dial position 287
 - effect of Photo Creativity feature 292
 - effects of physical controls 291
 - effects of Shooting menu settings 288
 - focus and exposure adjustment 52
 - limitations on duration 274
 - sound recording level 52
 - suggested settings 295
 - summary of options 294
 - time limit for recording 24
 - time limits 52
 - use of Function menu 293
 - using exposure compensation 293
 - using to record audio 351
 - zooming during recording 52
 - Video recording overview 273
 - Viewfinders
 - using with RX100 343
 - Vividness setting 43
 - Vivid setting for Creative Style 172
 - Voigtlander 28mm viewfinder 343
 - Volume Settings menu option 237
- W**
- Watercolor setting 185
 - White balance 152–160
 - adjusting in RAW software processing 160
 - chart of sample images 160
 - making fine adjustments 159, 350
 - setting for infrared photography 327
 - White Balance bracketing 124
 - White Balance menu option 42, 153–157
 - making settings 154
 - using preset settings 155
 - Wind Noise Reduction menu option 282
 - Windows Movie Maker software 277
 - Wrist strap

attaching to camera 19
Write Date menu option 195

Y

Yongnuo Speedlite YN560 339

Z

Zeikos Digital Slave Flash 342
ZipShot tripod 345
Zone focusing 214, 353
Zoom lever 36, 199
 using to enlarge images 200
Zoom range of RX100 188