

Contents

Introduction	13
Chapter 1: Preliminary Setup	18
Setting Up the Camera	18
Charging and Inserting the Battery	19
Inserting the Memory Card	21
Introduction to Main Controls	28
Top of Camera	28
Back of Camera	29
Front and Sides of Camera	30
Bottom of Camera	32
Setting the Language, Date, and Time	33
Chapter 2: Basic Operations	36
Taking Still Pictures	36
Fully Automatic—Auto Mode	36
Basic Variations from Fully Automatic	39
Focus	40
Manual Focus	44
Exposure	46
Exposure Compensation	46
Flash	49
Motion Picture Recording	52
Viewing Pictures and Movies	55
Review While in Shooting Mode	55
Reviewing Images in Playback Mode	55
Playing Movies	56
Chapter 3: The Shooting Modes	59
Auto Mode	59
Program Mode	60
Shutter Priority Mode	63
Aperture Priority Mode	67
Manual Exposure Mode	73
Scene Modes	76
Night Landscape	77
Landscape	80
Backlighting/HDR	82
The SCENE Setting on the Mode Dial	88
Scene Auto Selector	90
Portrait	91
Sports	92
Night Portrait	92
Party/Indoor	93
Beach	94
Snow	95
Sunset	96
Dusk/Dawn	97
Close-up	98
Food	99
Museum	101

PHOTOGRAPHER'S GUIDE TO THE NIKON COOLPIX P520

Fireworks Show	102
Black and White Copy	102
Panorama	103
Easy Panorama	104
Panorama Assist	105
Pet Portrait	109
3D Photography	111
Special Effects Mode	114
Soft	116
Nostalgic Sepia	116
High-contrast Monochrome	117
High Key	118
Low Key	118
Selective Color	119
High ISO Monochrome	121
Silhouette	122
Cross Process	123
User Settings Mode	124
Chapter 4: The Shooting Menu	127
Image Quality	133
Image Size	134
Picture Control	139
Standard	139
Neutral	140
Vivid	141
Monochrome	141
Adjustments to Picture Control Settings	142
Custom Picture Control	145
White Balance	147
Metering	153
Continuous shooting	155
ISO Sensitivity	164
Minimum Shutter Speed	168
Exposure Bracketing	170
AF Area Mode	172
Face Priority	172
Auto	173
Manual	174
Center (Normal)	175
Center (Wide)	176
Subject Tracking	176
Target Finding AF	177
Autofocus Mode	178
Flash Exposure Compensation	179
Noise Reduction Filter	180
Active D-Lighting	181
Save User Settings	184
Reset User Settings	184
Zoom Memory and Startup Zoom Position	185
Chapter 5: Other Controls	189
Power Switch	189

Shutter Release Button	190
Mode Dial	191
Zoom Lever	191
Function Button	192
Flash Pop-up Button	195
Side Zoom Control	196
AF Assist/Self-timer Lamp	198
Playback Button	199
Diopter Adjustment Wheel	200
Display Button	200
Movie Button	202
Flash/Charge Lamp	203
Command Dial	203
Menu Button	205
Trash Button	205
Multi Selector and its Buttons and Dial	207
Multi Selector Dial	207
OK Button	208
Direction Buttons	209
Up Button: Flash Settings	210
Right Button: Exposure Compensation	211
Down Button: Focus Mode	212
Left Button: Self-timer; Smile Timer; Pet Portrait Release.	213
USB and HDMI Ports	216
Tilting LCD Screen	217
Chapter 6: Playback	220
Normal Playback	220
Index Views and Enlarging Images	221
Calendar View	223
Different Playback Screens	224
Viewing Shots Taken in a Sequence	228
The Playback Menu	231
Quick Retouch	232
D-Lighting	233
Skin Softening	234
Filter Effects	235
Print Order	241
Slide Show	243
Protect	244
Rotate Image	245
Small Picture	246
Voice Memo	247
Copy	249
Sequence Display Options	250
Choose Key Picture	251
Printing Images	252
Printing Directly from the Camera	253
Chapter 7: Setup and GPS Menus	256
The Setup Menu	256
Welcome Screen	257
Time Zone and Date	259

Monitor Settings	260
Print Date	264
Vibration Reduction	265
Motion Detection	267
AF Assist	269
Digital Zoom	269
Assign Side Zoom Control	273
Sound Settings	274
Auto Off	274
Format Card/Format Memory	275
Language	277
TV Settings	278
Charge by Computer	279
Toggle Av/Tv Selection	279
Reset File Numbering	281
Blink Warning	281
Eye-Fi Upload	282
Reverse Indicators	283
Reset All	284
Firmware Version	284
GPS Options Menu	286
GPS Options	287
Record GPS Data	287
Update A-GPS File	288
Points of Interest (POI)	289
Create Log	294
View Log	295
Synchronize	297
Chapter 8: Motion Pictures	298
Movie-making Overview	298
Quick Guide to Recording a Movie Clip	299
Other Settings for Movies	301
Still Photo Settings Available for Movies	301
Focus Mode	301
Exposure Compensation and Exposure Lock	302
Self-timer	304
Picture Control	304
White Balance	305
Metering	305
Vibration Reduction	306
Zoom	306
Using the Shutter Release Button for Taking Still Images	307
Fn Button: Does Not Operate During Video Recording	308
Settings That Are Not Adjustable for Video Recording	309
The Movie Menu	309
Movie Options	310
HS (High Speed) Movie Options	313
Autofocus Mode	317
Movie Playback and Editing	320
Playback	320
Editing	322

Chapter 9: Other Topics	326
Using the Superzoom Lens	326
Macro (Close-up) Shooting	339
Using Flash	343
Infrared Photography	351
Street Photography	353
Connecting to a Television Set	358
APPENDIX A: Accessories	361
Cases	361
Batteries	363
AC Adapter	364
Add-on Filters and Lenses	366
External Flash	368
Wireless Mobile Adapter	372
APPENDIX B: Quick Tips	378
APPENDIX C: Resources for Further Information	383
Photography Books	383
Web Sites	384
Digital Photography Review	384
Reviews of the Coolpix P520	384
The Official Nikon Site	385
Infrared Photography	385
Cambridge in Colour	385
Index	386