

Index

Symbols

- 4K option for motion picture recording 124
- incompatibility with other settings 124

A

- AC adapter
 - Nikon model EH-5b or 5d 151–152
 - Nikon Power Connector, model number EP-5C 151–152
 - inserting cord through channel in battery compartment door 152
- Accessory shoe 6
- Accessory terminal 8, 76, 152
- Active D-Lighting menu option 66–67
 - incompatibility with other settings 67
 - relationship to HDR setting 35
- Adobe Bridge CC software
 - reading location data with 139
- Adobe Camera Raw software 46
- AE/AF Lock Button menu option 7, 76, 111
- AE-L/AF-L button 7, 76
 - controlling action of 111
 - using to lock focus or exposure during motion picture recording 111, 158
 - using to refocus during motion picture recording 127
- AF Area Mode menu option 63–65
 - Face Priority option 63
 - Manual (Spot, Normal, or Wide) 63–64
 - Subject Tracking option 64
 - Target Finding option 64–65
- AF Assist menu option 88, 108
- Airplane Mode menu option 140
- Aperture
 - procedure for setting 24
 - relationship to depth of field 23
- Aperture Priority mode 22–24
- Aperture setting
 - effect on range of available shutter speeds 21
- Aperture values
 - available range of 8, 20, 22, 24, 26, 145
 - limited by focal length of lens 1, 24
- Aspect ratio 47–49
 - comparison images 48
 - relationship to Image Size setting 47
- Assign Side Dial menu option 7, 75, 110–111
- Assign Side Zoom Control menu option 7, 75, 110
- Atomos Shogun 4K video recorder 130

- Auto Flash setting 83
- Autofocus
 - selecting with focus mode selector 76
- Autofocus Mode menu option (movies) 16, 126–127
- Autofocus Mode menu option (still images) 65
 - not available with infinity focus setting 65
- Auto Link option in SnapBridge app 136, 139
- Auto mode 19
 - incompatibility with other settings 19
 - settings available for adjustment 19
- Auto Off menu option 112
- Auto with Red-eye Reduction flash setting 83

B

- Backlighting/HDR setting 34–36
- Battery charger
 - generic model for charging outside of camera 151
 - Mophie PowerStation XL portable USB battery 151
 - Nikon model number EH-73P 4
 - using to power camera 151
 - Nikon model number MH-29 150
 - RavPower 6-Port Desktop USB Charger 151
- Battery/memory compartment door
 - flap for inserting cord from AC adapter 8, 152
- Battery, Nikon EN-EL20a 3, 150
 - charging 3–4
 - length of time for full charge 4
 - using USB cable connected to computer 4, 113
 - inserting into camera 3
 - using generic replacement 151
- Beach setting 31
- Bird-watching mode
 - selecting focal length for framing option 28–29
 - using continuous shooting with 28
- Blinking aperture number on display
 - meaning of 22
- Bluetooth menu option 137, 141
- Blurred background 144
 - how to achieve 24
- Bokeh. See Blurred background
- Bulb setting for shutter speed 26
 - using remote control device for 159
- Button sound
 - silencing 111

C

- Calendar screen in playback mode 90–91
- Cases
 - Lowepro Inverse 100 AW beltpack 150
 - Lowepro Toploader 55 AW II Bag 150
- Charge by Computer menu option 4, 113–114
- Choose Connection menu option 134, 140, 153
- Clean HDMI Output menu option 113
 - using to record video to external recorder 113
- Close-up photograph. *See* Macro photography
- Close-up setting 33, 147
- Command dial 7, 79
 - icon on shooting screen 78, 79
 - switching functions of with multi selector dial 79
 - using to adjust Peaking level 78
 - using to change enlargement factor in playback mode 79, 91
 - using to set shutter speed 79
- Comments
 - creating and attaching to still images 114
- Conformity Marking menu option 116
- Connection to Remote menu option 140, 153
- Connect to Smart Device menu option 134–135, 140
- Continuous menu option 56–59
 - assigning to Function button 73
 - Continuous H: 60 fps 58
 - Continuous H: 120 fps 58
 - high-speed shooting 57
 - Interval timer setting 58–59
 - compared to Time-lapse Movie setting 59
 - folder names for images 59
 - low-speed shooting 57
 - Pre-shooting Cache setting 56, 57–58
 - single shots setting 57
 - turning off continuous shooting 57
 - using self-timer with 57, 86, 159
- Continuous shooting
 - advantages of using 56, 157
 - flashing display on screen when data being written 6
 - in general 56
 - playback of continuous shots 17, 57, 93–94, 101
- Contrast
 - adjusting for images as they are shot 50
 - unavailable when Active D-Lighting in effect 67
- Controls on back of camera 6–7
- Controls on front and sides of camera 7–8
- Controls on top of camera 6
- Copyright Information menu option 114
- Creative mode 39–41
 - comparison charts 41
 - incompatibility with other settings 40
 - list of settings 41
 - making adjustments to settings 40
 - resetting after adjustments 40, 80
 - selecting a setting for 39–40, 41
 - using for motion picture recording 158

- Cropping images in camera 80, 91
- Cross Screen setting for Filter Effects 97
- Custom Picture Control menu option 51
- Custom Picture Control menu option (movies) 129
- Custom white balance
 - how to set 53

D

- Date and time
 - imprinting on images 106
 - setting 9–10, 102–103
- Date format
 - setting 103
- Date Stamp menu option 106
 - incompatibility with other settings 106
- Daylight Saving Time
 - setting 102–103
- Delete/Trash button 7, 80
 - using to delete images and videos 80
 - using to reset Creative mode adjustments 40
- Depth of field 23
- Digital Zoom menu option 108–110
 - incompatibility with other settings 110
 - using with motion picture recording 121
 - using with smaller image sizes 108–109
- Dimmed items on menu screens 44
- Diopter adjustment wheel 8, 76
- Direction buttons 81–87
 - general uses of 81
 - in general 7
- Display button 7, 78–79
- Display screens
 - playback mode 78, 91–93
 - shooting mode 78–79
- D-Lighting menu option 96
 - distinguished from Active D-Lighting 96
- Dot Sight accessory
 - Nikon DF-M1 153–154
 - Olympus EE-1 154
- Down button
 - using to call up focus mode menu 85
 - using to toggle manual focus screen 86
- Dusk/Dawn setting 32
- Dynamic Fine Zoom feature 108–109

E

- Easy Panorama setting 36
 - dimensions of panoramic images 36
 - incompatibility with other settings 36
 - scrolling panorama with OK button 36
 - shooting taller panoramas 158
- Electronic VR menu option 16, 127
 - incompatibility with other settings 127
- Enlarging images in playback mode 17, 73, 91
- EVF Auto Toggle menu option 7, 76, 105–106
- EVF Options menu option 104

Exposure
 locking. See Locking exposure
 Exposure bracketing 62–63
 incompatibility with other settings 62–63
 using for HDR photography 36
 Exposure compensation
 activating with Right button 85
 display of histogram with 14, 105
 incompatibility with other settings 85
 procedure for using 13–14, 85
 using with motion picture recording 120
 Exposure Mode menu option (movies) 129
 External flash units
 Godox TT685N 154
 Nikon SB-500 154
 Nikon SB-700 154
 Nikon SB-5000 154
 External microphone jack 8, 75
 External microphones
 adjusting sensitivity of 128
 Nikon ME-1 154–155
 Nikon ME-W1 155
 Rode VideoMic Pro 155
 External Mic Sensitivity menu option 128
 External video recorder
 recording video to through HDMI port 130
 Eye sensor 7, 76

F

Faces
 setting autofocus to detect 63
 Fade-in effect for motion picture recording 158
 Fade-out effect for motion picture recording 129
 Fill Flash/Standard flash setting 83
 Filter effects
 adjusting for monochrome images as they are shot 50
 Filter Effects menu option 96–98
 using to add second effect to image 98, 158
 Filters
 using with P950 155–156
 Fireworks Show setting 34
 Firmware
 checking for updates 117
 Firmware Version menu option 117
 Flash, built-in 7
 can't fire unless manually popped up 14, 74, 82
 diffusing 157–158
 general procedure for using 14–15
 incompatibility with other settings 82
 Flash Exposure Compensation menu option 65–66, 85
 using to reduce harshness of flash 65, 158
 Flashing display of remaining images number
 meaning of 6
 Flashing parts of image in playback mode 93
 Flash mode menu 12, 15, 82–85
 Flash pop-up button 7, 74

Flexible program feature 20, 145
 Focal length range of lens 8
 Focal Length Selection option on Bird-watching mode menu 28
 Focal Length Selection option on Moon mode menu 28
 Focus
 basic procedures for adjusting 11–12
 controlling in Auto mode 13
 locking. See Locking focus
 manual. See Manual focus
 Focus frame
 moving on display 63–64
 Focus mode
 selecting 13, 86
 Focus mode menu 13, 85–86
 unavailability of some settings in some shooting modes 85
 Focus mode selector 7, 76–78
 using to select manual focus 13
 Food setting 33–34, 147
 Format Card menu option 112
 unavailable when wireless connection is active 112
 Frame Rate menu option 15, 123, 128
 Function button 6, 73–74
 cannot be used during motion picture recording 122
 changing option assigned to 74
 incompatibility with other settings 74
 on remote control device 153
 settings that can be assigned to 73

G

GPS location ability, built-in
 lacking in Coolpix P950 1
 Grid
 displaying in shooting mode 78–79, 104

H

HDMI cable
 using to connect camera to television set 149
 HDMI menu option 113
 HDMI Output menu option 113
 HDMI port 8, 88
 HDR (high dynamic range) photography
 in general 34
 using HDR setting of P950 camera for 34–36, 157
 Histogram
 displayed when using exposure compensation 14, 105
 playback mode 79, 92–93
 shooting mode 78–79, 105
 incompatibility with other settings 71, 105
 relationship to Manual Exposure Preview option 71, 105
 HS (high-speed) movie options 124–126
 unavailable when Clean HDMI Output is turned on 126

I

Image Comment menu option 114
 Image numbers

- resetting 115–116
 - Image Quality menu option 45–47
 - Image Review menu option 90, 104
 - Image Size menu option 47–49
 - relationship to zoom range 108–109
 - Index screens in playback mode 73, 90–91
 - Infinity focus modes 13, 86
 - differences between two infinity modes 34
 - Infrared filter
 - Hoya R72 147
 - Infrared photography 147–148
 - Interval timer setting 58–59
 - ISO Sensitivity menu option 59–61
 - Auto settings 60
 - using with Manual exposure mode 26, 159
 - deciding on value to choose 60
 - effect on range of available shutter speed settings 20, 21, 26
 - incompatibility with other settings 62
 - listing of available values 60
 - Minimum Shutter Speed setting 61–62
 - negative effects of very high setting 61
 - procedure for making setting 60
 - using to enable use of fast shutter speed 60, 145
 - using with Manual exposure mode 26
 - ISO Sensitivity menu option (movies) 130
 - adjusting during motion picture recording 130
- K**
- Kelvins 53–54
 - used to measure color temperature 52
 - Key Picture Selection menu option 101
- L**
- Landscape setting 30
 - Language
 - setting 10, 112
 - Language menu option 112
 - LCD monitor
 - adjusting brightness and color of 104
 - resolution of 89
 - switching view by folding in against camera 76, 106
 - switching view to and from 76, 105–106
 - tilting and swiveling features of 89–90
 - Left button
 - using to adjust manual focus magnification 87
 - using to call up self-timer/smile timer/ Pet Portrait Release menu 86
 - using to cause camera to focus when recording video 87, 120, 127
 - Lens
 - specifications of 8
 - using superzoom capability of 142–145
 - Lens hood 156
 - Level. See Virtual Horizon menu option
 - Location data
 - adding to images using SnapBridge app 138–139
 - Location Data menu option 114–115, 139
 - using Position option to display location data for image 114
 - Locking exposure 72, 111
 - with motion picture recording 120
 - Locking focus 72, 111
 - with motion picture recording 87, 119–120, 126–127
 - Long Exposure NR menu option 66
- M**
- Macro autofocus setting 13, 146
 - Macro photography 145–147
 - using manual focus for 147
 - Manual exposure mode 24–26
 - incompatibility with other settings 26
 - procedure for making settings 25
 - using Auto ISO setting with 26, 159
 - using to create HDR images 24, 35
 - Manual Exposure Preview menu option 71
 - Manual focus
 - adjusting magnification with 77
 - adjusting with side dial 7, 13
 - general use of 13, 77–78
 - reasons for using 77
 - selecting with focus mode selector 77
 - using autofocus with 77
 - using Down button to toggle magnified screen 77
 - using for macro photography 147
 - using Left button to toggle enlargement factor 77
 - Mark for Upload menu option 95, 139, 141
 - Memory card
 - formatting 112
 - inserting into camera 5
 - largest capacity usable in Coolpix P950 5
 - need for high-speed card for highest-quality video formats 5, 124
 - number of images that can be stored 5
 - operating camera without 4
 - types and capacities of 4
 - Menu button 7, 79
 - using to save cropped version of image in playback mode 80, 91
 - Menus
 - listing of 44
 - navigating through 43–44
 - unavailable items on 44
 - Metering menu option 54–56
 - incompatibility with Active D-Lighting setting 56
 - Microphone, built-in 74
 - Microphone, external
 - plugging in disables built-in microphone 74
 - port for plugging in 8, 75
 - ability to provide power for microphone 75
 - micro-SD card
 - using in Coolpix P950 5
 - Miniature setting for Filter Effects 97–98
 - Minimum focus distance of lens 146–147

Minimum Shutter Speed menu option 61–62

Mode dial 6, 73

Monitor button 76
using to switch between LCD and viewfinder 7, 76

Monitor Options menu option 104

Monitor Settings menu option 104–105
using to add histogram in shooting mode 78

Monochrome Picture Control setting
adjustments to 51

Moon mode 27–28
incompatibility with other settings 28
selecting focal length for framing option 28
using color filter options with 28

Motion picture recording
effects of mode dial position 119
exposure control in still-shooting modes 120
 autoexposure lock 120
 exposure compensation 120
focus options 119–120, 126–127
general procedure for 118–119
limitations on length of recording 122
locking focus 120, 126, 127–128
overview 118
pausing with OK button 122
slow-motion options 125
speeded-up motion option 125–126
still photo settings available 119–121
taking still images during recording 121–122
 incompatibility with other settings 121
 using Creative and Scene modes for 158
 using exposure compensation 120
 using optical and digital zoom 121

Motion pictures
editing in camera 131–133
 not available when battery level is low 132
editing with computer 17
identifying on index screens in playback mode 131
playback 17–18, 131–132
 adjusting sound volume 17
saving single frame from 122, 132–133
 using this feature as an alternative to continuous shooting 145

Movie button 7, 78

Movie Manual menu 128–130

Movie Manual mode 128–130

Movie menu 15, 123–128
list of items on 129–130

Movie Options menu option 15–16, 119, 124–126

Moving subject
tracking with autofocus 64

Multiple Exposure Lighten setting 38
using for images of light trails, star trails, or fireworks 38

Multiple Exposure menu option 68

Multi selector dial 7, 80–81
general uses 80
switching functions with command dial 81
using to set aperture value 80

N

Network menu 140–142

Neutral density filter 157

Night Landscape setting 32

Night Portrait setting 31

Nikon Capture NX-D software 46
using to process Raw images 46
where to download 3

Nikon Coolpix P950 camera
advantages of 1
drawbacks of 1
items that come in the box 3
new features of 1

Nikon Reference Manual for Coolpix P950
where to download 1

Nikon ViewNX-i software
where to download 3

Nikon ViewNX-Movie Editor software 3

No card present error message 4

Noise Reduction Filter menu option 66

NTSC video system 123

O

Off-center subject
setting exposure for 72
setting focus for 64, 72

OK button 7
functions of 81

P

Painting setting for Filter Effects 98

PAL video system 123

Panorama photography. See Easy Panorama setting

Party/Indoor setting 31

Peaking feature for manual focus 78, 116
adjusting level with command dial 116
not available with motion picture recording 116

Peaking menu option 116

Pet Portrait Auto Release feature 37, 87

Pet Portrait setting 37

Photo Illustration setting for Filter Effects 98

Picture Control menu option 49–51
adjustments to settings 50–51
incompatibility with other settings 50
comparison images 49–50
saving custom settings 51–52
using with motion picture recording 129

Picture Control menu option (movies) 129

Playback button 7, 17, 78
using to turn on camera 78

Playback menu 94–101
need to have camera in playback mode to get access 94

Playback of images and videos
calendar screen 90–91
checking tone levels of images 93

- continuous burst of shots 17, 57, 93–94
 - choosing key picture for 101
 - displaying as individual images 94, 101
 - cropping image with Menu button 91
 - enlarging image 91
 - general procedures 16–17, 90
 - index screens 90–91
 - motion pictures 17, 131–132
 - Portrait (Color + B&W) setting for Filter Effects 98–99
 - Portrait setting 30
 - Power saving mode. See Auto Off menu option
 - Power switch 72
 - Program mode 20
 - Program shift. See Flexible program
 - Protect menu option 99–100
 - Pull-focus effect for recording movies 158
- Q**
- Quick Retouch menu option 95–96
 - incompatibility with other settings 96
- R**
- Raw + Fine and Raw + Normal settings 46–47, 48
 - Raw format for images 45–47
 - advantages and disadvantages of 45–46
 - compared to JPEG format 45–46
 - incompatibility with other settings 46
 - using to adjust shooting settings after the fact 45–46
 - Rear-curtain Sync flash setting 84–85
 - Remote control of camera
 - Using Nikon Bluetooth remote, ML-L7 153
 - using SnapBridge app 138
 - Remote control units
 - Nikon MC-DC2 Remote Cord 152
 - Nikon ML-L7 Remote Control 140, 153
 - saving settings for its two function buttons 159
 - Nikon WR-R10 and WR-T10 Wireless Remote Controllers 152–153
 - port for plugging in wired remote 8
 - using with Time or Bulb setting for shutter speed 159
 - Reset All menu option 116
 - using to help resolve conflicts among camera settings 116
 - Reset File Numbering menu option 115–116
 - Reset User Settings menu option 69
 - Resolution of images 47
 - Restore Default Settings option on Network menu 142
 - Right button
 - using for autofocus in manual focus mode 85
 - using for exposure compensation 85
 - using to lock exposure when recording video 85, 120
 - Rotate Image menu option 100
- S**
- Saturation
 - adjusting for images as they are shot 50
 - Save User Settings menu option 42, 69
 - Scene modes
 - in general 26–27
 - limitations of 27
 - SCENE setting on mode dial 29–39
 - incompatibility with other settings 27
 - listing of scene types 26
 - SD cards. See Memory card
 - Selective Color setting 37
 - Selective Color setting for Filter Effects 97
 - Self-timer 86
 - controlling whether it remains set after use 106
 - general procedure for using 86
 - using to avoid camera shake 86, 158
 - using with continuous shooting options 57, 86, 159
 - using with motion picture recording 86, 120
 - Self-timer/AF Assist/Red-eye Reduction lamp 8, 87–88
 - disabling 88, 108
 - Self-timer: After Release menu option 106
 - Send While Off menu option 141
 - Send While Shooting menu option 136–137, 139, 141
 - Sequence Display menu option 94, 101
 - Setup menu
 - in general 102
 - Sharpening
 - adjusting for images as they are shot 50
 - Shooting menu
 - in general 43–44
 - Shooting modes
 - names of 19
 - Shutter Priority mode 20–22
 - Shutter release button 6, 72–73
 - operating when no memory card in camera 4, 103
 - using to start or stop movie recording 6, 73, 128
 - Shutter sound
 - silencing 111
 - Shutter speed
 - display of fractional values 21
 - procedure for setting 21–22
 - range of available settings 19, 20, 21, 22, 129
 - limitations when using Continuous menu option 22, 57
 - Shutter Speed Equivalents 21
 - Side dial 7, 75
 - assigning function to for use in autofocus mode 75, 110–111
 - using to adjust manual focus 75
 - Side zoom control 7, 75
 - not affected by Zoom Memory setting 75
 - setting speed of zoom with Assign Side Zoom Control menu option 75, 110
 - using for telephoto shots 145
 - Skin Softening menu option 96
 - Slide Show menu option 99
 - Slot Empty Release Lock menu item 4, 103
 - Slow motion video
 - how to record 124–126
 - Slow Sync flash setting 83
 - Small Picture menu option 100–101

Smile timer 87
 incompatibility with other settings 87

Snap-back zoom button 7, 75
 not available for use when recording movies 75
 setting degree to which it widens view of scene 110
 using for telephoto shots 75, 145

Snap-back Zoom menu option 75, 110

SnapBridge app 134–140
 overview of use 134
 procedure for connecting to camera 134–137
 summary of options for transferring images and videos 139–140
 using for image transfer and remote control of camera 134–138
 where to find online help 134

Snow setting 31

Soft Portrait setting for Filter Effects 96–97

Sound Settings menu option 111

Sounds made by camera
 automatically silenced in some situations 28, 111
 silencing 111

Speaker
 location of 6, 74

Speeded-up video
 how to record 125–126

Sports setting 30

Startup Zoom Position menu option 70, 73

Step-by-step tutorials
 adding location data to images using SnapBridge app 139
 basic picture-taking 11
 motion picture recording 15
 quick guide to motion picture recording 118
 recording to an external video recorder 130
 remote control of camera using SnapBridge app 138
 setting up SnapBridge connection and transferring images by Bluetooth 134
 transferring images to smartphone or tablet 134
 using SnapBridge to transfer images and videos by Wi-Fi 137–138

Still images
 taking during motion picture recording 121–122
 incompatibility with other settings 121

Street photography 148–149

Sunset setting 32

T

Tables
 fractional shutter speed equivalents 21
 limits on shutter speed settings 21

Television set
 connecting camera to 149

Time-lapse Movie setting 38–39
 compared to interval timer setting for Continuous shooting 38, 59
 list of available scenarios 39

Time-lapse photography 38–39, 58–59, 126

Time setting for shutter speed 26
 using remote control device for 159

Time zone
 changing for travel 103
 setting 103

Time Zone and Date menu option 9, 102–103

Toggle Av/Tv Selection menu option 21, 115
 using to switch functions of command dial and multi selector dial 115

Tone levels in image, checking 93

Toning
 adjusting for monochrome images as they are shot 50

Transferring images and videos from camera to smart device via W-Fi connection 137–138

Transferring images from camera to smart device via Bluetooth connection 134–137

Tripod socket 8

U

UHD (ultra-high definition) motion picture recording. See 4K option for motion picture recording

UHS-3 speed class for memory cards
 requirement to use card of that speed for high-quality video formats 124

Up button
 using to call up flash mode menu 82

USB port 8
 uses of 88

User Settings mode 41–42, 69, 145, 157

V

VGA resolution for images 58

Vibration Reduction menu option 106–108
 using with long telephoto shots 144
 using with motion picture recording 120

Video recording. See Motion picture recording

Viewfinder 6–7, 76
 adjusting brightness and color of 104
 adjusting for user's vision 8, 76
 switching view by folding LCD screen in against camera 6–7, 76, 106
 switching view to and from 6–7, 76, 105–106

View/Hide Framing Grid menu option 104

View/Hide Histograms menu option 71, 105

Vignette setting for Filter Effects 98

Virtual Horizon menu option 105

Volume
 adjusting for motion picture playback 17, 131

W

White balance comparison chart 54

White balance menu option 52–54
 Choose Color Temperature setting 53–54
 list of available settings 52–53
 making adjustments to preset settings 53
 Preset Manual setting

- using to set custom white balance 53
- using with motion picture recording 119
- White balance menu option (movies) 130
- Wi-Fi menu option 141
- Wind Noise Reduction menu option 127

Z

- Zone focusing 158
- Zoom lens
 - flattening of subjects into single plane 143
 - haze effect from compression of atmosphere 143
 - isolating subject through telephoto shot 143
 - rule of thumb for choosing shutter speed for telephoto shots 144
 - shallow depth of field at telephoto settings 143–144
 - using telephoto power of 142–143
 - ways to avoid image blur at telephoto settings 144–145
- Zoom lever 6, 73
 - using to display index screens 73, 90
 - using to enlarge image in playback mode 73
 - using to operate zoom lens 73
- Zoom Memory menu option 69–70, 73
 - not applicable to side zoom control 70–71
- Zoom Microphone menu option 16, 127
 - incompatibility with other settings 127
- Zoom range 8
- Zoom scale
 - display when using various zoom amounts 108–109
 - not displayed during motion picture recording 121
- Zoom speed
 - changing with Assign Side Zoom Control option 7