

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery	3
Inserting the Memory Card	4
Introduction to Main Controls	5
Top of Camera	6
Back of Camera	6
Front of Camera	7
Right Side of Camera	7
Bottom of Camera	7
Setting the Date, Time, and Language	7
CHAPTER 2: BASIC OPERATIONS	9
Taking Pictures	9
Fully Automatic: Intelligent Auto Mode	9
Variations from Fully Automatic	11
Focus	11
Manual Focus	12
Drive Mode	13
Intelligent Auto Plus Mode	14
Motion Picture Recording	15
Basic Playback	16
Playing Movies	18
CHAPTER 3: THE RECORDING MODES	20
Choosing a Recording Mode	20
Intelligent Auto Mode	20
Intelligent Auto Plus Mode	22
Using the Up Button: Defocus Control and Exposure Compensation	23
Using the Right Button: Color Control	24
Program Mode	24
Aperture Priority Mode	26
Shutter Priority Mode	28
Manual Exposure Mode	29
Panorama Mode	31
Scene Mode	32
Creative Control Mode	38
Custom Mode: C Position on Mode Dial	48
CHAPTER 4: THE RECORDING MENU AND THE QUICK MENU	49
The Recording Menu	49
Photo Style	51
Filter Settings	53
Aspect Ratio	55
Picture Size	56

- Extended Optical Zoom . . . . . 56
- Quality . . . . . 57
- Sensitivity (ISO) . . . . . 59
- AF Mode . . . . . 60
  - Face/Eye Detection . . . . . 60
  - AF Tracking . . . . . 61
  - 49-Area . . . . . 61
  - Custom Multi . . . . . 62
    - 1-Area . . . . . 64
    - Pinpoint . . . . . 64
  - Moving the Focus Frame or Focus Area . . . . . 65
- AFS/AFF/AFC . . . . . 65
- Metering Mode . . . . . 66
- 4K Photo . . . . . 67
- Bracket . . . . . 67
  - Exposure Bracket . . . . . 68
  - Aperture Bracket . . . . . 69
  - Focus Bracket . . . . . 70
  - White Balance Bracket . . . . . 71
- Self-timer . . . . . 72
- Highlight Shadow . . . . . 72
- Intelligent Dynamic . . . . . 73
- Intelligent Resolution . . . . . 74
- iHandheld Night Shot . . . . . 74
- iHDR . . . . . 74
- HDR . . . . . 75
- Multiple Exposure . . . . . 76
- Time Lapse Shot . . . . . 78
- Stop Motion Animation . . . . . 79
- Panorama Settings . . . . . 80
- Shutter Type . . . . . 80
- Flash . . . . . 81
  - Flash Mode . . . . . 81
  - Flash Synchro . . . . . 82
  - Flash Adjustment . . . . . 83
- Red-eye Removal . . . . . 83
- ISO Limit Set . . . . . 84
- ISO Increments . . . . . 84
- Extended ISO . . . . . 84
- Long Shutter Noise Reduction . . . . . 85
- Diffraction Compensation . . . . . 85
- Intelligent Zoom . . . . . 85
- Digital Zoom . . . . . 85
- Color Space . . . . . 86
- Stabilizer . . . . . 86
- Face Recognition . . . . . 87
- Profile Setup . . . . . 88
- Quick Menu . . . . . 88

## CHAPTER 5: PHYSICAL CONTROLS

- Controls on Top of Camera . . . . . 90
  - Shutter Button . . . . . 90
  - Zoom Lever . . . . . 90
  - On/Off Switch . . . . . 90
  - Mode Dial . . . . . 91
  - Motion Picture Button . . . . . 91

Rear Dial . . . . .	91
Built-in Flash Unit . . . . .	92
Microphone . . . . .	92
Controls on Back of Camera . . . . .	92
Playback Button . . . . .	92
Display Button . . . . .	92
Menu/Set Button and Direction Buttons . . . . .	94
Direction Buttons . . . . .	94
Up Button: Exposure Compensation . . . . .	94
Right Button: White Balance . . . . .	96
Left Button: Focus Mode . . . . .	99
Autofocus . . . . .	99
AF Macro . . . . .	99
Macro Zoom . . . . .	99
Manual Focus . . . . .	100
Down Button: Drive Mode . . . . .	100
Burst Shooting . . . . .	101
4K Photo . . . . .	103
4K Burst . . . . .	104
4K Burst (S/S) . . . . .	104
4K Pre-burst . . . . .	105
Extracting a 4K Photo Still Image . . . . .	105
Post Focus . . . . .	106
Focus Stacking . . . . .	108
Self-timer . . . . .	109
Center Button: Menu/Set . . . . .	111
Function Buttons . . . . .	111
Fn1/4K Photo Button . . . . .	111
Fn2/Post Focus Button . . . . .	111
Fn3/Delete/Q.Menu/Cancel Button . . . . .	112
Assigning Functions to Function Buttons . . . . .	113
AF/AE Lock . . . . .	114
Preview . . . . .	114
One Push AE . . . . .	115
Touch AE . . . . .	115
Cursor Button Lock . . . . .	116
Restore to Default . . . . .	116
Assigning Options to Function Buttons for Playback Mode . . . . .	116
LCD Monitor . . . . .	116
Using the Touch Screen . . . . .	117
Wi-Fi/Charging Lamp . . . . .	119
Items on Front of Camera . . . . .	119
Control Ring . . . . .	119
Step Zoom . . . . .	120
Aperture Ring . . . . .	120
AF Assist/Self-timer Lamp . . . . .	121
Lens . . . . .	121

## CHAPTER 6: PLAYBACK

122

Normal Playback . . . . .	122
Index View and Enlarging Images . . . . .	122
The Playback Menu . . . . .	123
Slide Show . . . . .	123
[Play] All . . . . .	124
[Play] Picture Only/Video Only . . . . .	124
4K Photo/Post Focus . . . . .	124

Category Selection . . . . .	124
Favorite. . . . .	125
Playback Mode . . . . .	125
Normal Play . . . . .	125
Other Playback Modes. . . . .	125
Location Logging . . . . .	126
Raw Processing . . . . .	127
4K Photo Bulk Saving . . . . .	129
Light Composition . . . . .	130
Clear Retouch. . . . .	131
Title Edit. . . . .	132
Text Stamp . . . . .	132
Video Divide . . . . .	133
Time Lapse Video . . . . .	134
Stop Motion Video . . . . .	134
Resize . . . . .	134
Cropping . . . . .	135
Rotate . . . . .	135
Rotate Display. . . . .	136
Favorite . . . . .	136
Print Set . . . . .	136
Protect. . . . .	137
Face Recognition Edit. . . . .	137
Picture Sort . . . . .	137

## CHAPTER 7: THE CUSTOM MENU AND THE SETUP MENU 139

The Custom Menu . . . . .	139
Custom Set Memory . . . . .	139
Silent Mode . . . . .	140
AF/AE Lock . . . . .	140
AF/AE Lock Hold . . . . .	141
Shutter AF. . . . .	141
Half Press Release. . . . .	142
Quick AF. . . . .	142
Pinpoint AF Time . . . . .	142
Pinpoint AF Display. . . . .	143
AF Assist Lamp . . . . .	143
Focus/Release Priority . . . . .	143
AF+MF. . . . .	144
Manual Focus (MF) Assist. . . . .	144
MF Assist Display . . . . .	144
MF Guide . . . . .	145
Peaking . . . . .	145
Histogram. . . . .	146
Guide Line. . . . .	147
Center Marker. . . . .	148
Highlight . . . . .	148
Zebra Pattern . . . . .	148
Monochrome Live View . . . . .	149
Constant Preview . . . . .	149
Exposure Meter . . . . .	150
Dial Guide. . . . .	150
Recording Area . . . . .	150
Remaining Display . . . . .	151
Auto Review. . . . .	151
Function Button Set . . . . .	151

Zoom Lever . . . . .	153
Lens Position Resume . . . . .	153
Lens Retraction . . . . .	153
Quick Menu (Q.Menu) . . . . .	153
Ring/Dial Set . . . . .	154
Self Shot . . . . .	154
Soft Skin . . . . .	155
Filter Select . . . . .	155
Slimming Mode . . . . .	155
Shutter . . . . .	155
Countdown/Shots . . . . .	156
Touch Settings . . . . .	156
Touch Screen . . . . .	157
Touch Tab . . . . .	157
Touch AF . . . . .	157
Touch Scroll . . . . .	157
Menu Guide . . . . .	157
The Setup Menu . . . . .	158
Online Manual . . . . .	158
Clock Set . . . . .	158
World Time . . . . .	159
Travel Date . . . . .	159
Wi-Fi . . . . .	159
Beep . . . . .	160
Live View Mode . . . . .	160
Monitor Display . . . . .	160
Monitor Luminance . . . . .	161
Economy . . . . .	161
Sleep Mode . . . . .	161
Sleep Mode (Wi-Fi) . . . . .	161
Auto Monitor Off . . . . .	161
USB Mode . . . . .	162
TV Connection . . . . .	162
m/ft . . . . .	162
Menu Resume . . . . .	162
Menu Background . . . . .	162
Menu Information . . . . .	163
Language . . . . .	163
Version Display . . . . .	163
Exposure Compensation Reset . . . . .	164
Self Timer Auto Off . . . . .	164
Number Reset . . . . .	164
Reset . . . . .	164
Reset Wi-Fi Settings . . . . .	164
Level Gauge Adjustment . . . . .	165
Demo Mode . . . . .	165
Format . . . . .	165

## CHAPTER 8: MOTION PICTURES

166

Basics of LX10 Videography . . . . .	166
High Speed Video Recording . . . . .	168
Making Other Settings When Recording Movies . . . . .	168
The Motion Picture Menu . . . . .	169
Photo Style . . . . .	169
Filter Settings . . . . .	169
4K Live Cropping . . . . .	169

Snap Movie . . . . .	170
Recording Format . . . . .	171
Recording Quality . . . . .	172
Exposure Mode . . . . .	173
High Speed Video . . . . .	173
Sensitivity (ISO) . . . . .	173
AF Mode . . . . .	173
AFS/AFF/AFC . . . . .	173
Continuous AF . . . . .	174
Level Shot . . . . .	174
Metering Mode . . . . .	174
Highlight Shadow . . . . .	174
Intelligent Dynamic . . . . .	175
Intelligent Resolution . . . . .	175
Diffraction Compensation . . . . .	175
Intelligent Zoom . . . . .	175
Digital Zoom . . . . .	175
Stabilizer . . . . .	175
Flicker Decrease . . . . .	175
Silent Operation . . . . .	175
Wind Noise Canceller . . . . .	176
Recording Still Images During Video Recording . . . . .	176
Using an External Audio Recorder . . . . .	177
Physical Controls . . . . .	177
Using the Touch Screen During Video Recording . . . . .	179
Recommendations for Recording Video . . . . .	179
Motion Picture Playback and Editing . . . . .	180
Editing with a Computer . . . . .	181

## CHAPTER 9: WI-FI AND OTHER TOPICS 183

Using Wi-Fi Features . . . . .	183
Connecting to a Smartphone or Tablet . . . . .	183
Controlling the Camera with a Smartphone or Tablet . . . . .	185
Sending Images and Videos to a Smartphone or Tablet . . . . .	186
Uploading Images by Wi-Fi to Social Networks . . . . .	188
Connecting to a Computer to Transfer Images Wirelessly . . . . .	189
Sending Images to Other Devices . . . . .	190
Viewing Images Wirelessly on TV . . . . .	190
Macro (Closeup) Shooting . . . . .	191
Street Photography . . . . .	192
Connecting Camera to HDTV with Cable . . . . .	192

## APPENDIX A: ACCESSORIES 193

Cases . . . . .	193
Batteries and Chargers . . . . .	194
AC Adapter . . . . .	194
External Flash Units . . . . .	195
External Audio Recorders . . . . .	196
Equipment for Pole Aerial Photography . . . . .	197
Tripods . . . . .	197
Gimbal . . . . .	198
Filter Adapter . . . . .	198

APPENDIX B: QUICK TIPS 199

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 201

Photography Books . . . . . 201  
Websites . . . . . 201  
Videos . . . . . 202  
Reviews of the LX10 . . . . . 202

**Index 203**