

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery . . . . .	3
Inserting the Memory Card . . . . .	4
Introduction to Main Controls . . . . .	6
Top of Camera . . . . .	6
Back of Camera . . . . .	6
Front of Camera . . . . .	7
Right Side of Camera . . . . .	7
Bottom of Camera . . . . .	8
The Menu Systems . . . . .	8
Setting the Date, Time, and Language . . . . .	9
CHAPTER 2: BASIC OPERATIONS	11
Taking Pictures . . . . .	11
Fully Automatic: Snapshot Mode . . . . .	11
Variations from Fully Automatic . . . . .	13
Focus . . . . .	13
Manual Focus . . . . .	14
Drive Mode . . . . .	15
Snapshot Plus Mode . . . . .	16
Motion Picture Recording . . . . .	17
Basic Playback . . . . .	18
Playing Movies . . . . .	19
CHAPTER 3: THE RECORDING MODES	21
Choosing a Recording Mode . . . . .	21
Snapshot Mode . . . . .	21
Options on Special Menu for Snapshot Mode . . . . .	23
Options on Other Menus . . . . .	24
Snapshot Plus Mode . . . . .	24
Using the Up Button: Exposure Compensation, Bracketing, and Defocus Control . . . . .	25
Using the Right Button: Color Tone Control . . . . .	26
Program Mode . . . . .	26
Aperture Priority Mode . . . . .	28
Shutter Priority Mode . . . . .	30
Manual Exposure Mode . . . . .	31
Panorama Mode . . . . .	33
Scene Mode . . . . .	34
Creative Control Mode . . . . .	40
Custom Mode: C Position on Mode Dial . . . . .	51
CHAPTER 4: THE RECORDING MENU AND THE QUICK MENU	52
The Recording Menu . . . . .	52
Aspect Ratio . . . . .	55

- Picture Size . . . . . 56
  - Extended Optical Zoom . . . . . 56
- Quality . . . . . 57
- AFS/AFF/AFC . . . . . 59
- Sensitivity (ISO) . . . . . 59
- AF Mode . . . . . 60
  - Face/Eye Detection . . . . . 61
  - AF Tracking . . . . . 61
  - 49-Area . . . . . 62
  - Custom Multi . . . . . 63
    - 1-Area . . . . . 64
    - Pinpoint . . . . . 65
  - Moving the Focus Frame or Focus Area . . . . . 66
- Photo Style . . . . . 66
- Filter Settings . . . . . 69
- Color Space . . . . . 70
- Metering Mode . . . . . 70
- Highlight Shadow . . . . . 71
- Intelligent Dynamic . . . . . 72
- Intelligent Resolution . . . . . 73
- Flash . . . . . 73
  - Flash Mode . . . . . 73
  - Flash Synchro . . . . . 75
  - Flash Adjustment . . . . . 76
- Red-eye Removal . . . . . 76
- ISO Auto Upper Limit (Photo) . . . . . 76
- Minimum Shutter Speed . . . . . 77
- Long Shutter Noise Reduction . . . . . 77
- Diffraction Compensation . . . . . 77
- Stabilizer . . . . . 77
- Intelligent Zoom . . . . . 78
- Digital Zoom . . . . . 78
- Burst Rate . . . . . 79
- 4K Photo . . . . . 79
- Self-timer . . . . . 79
- Time Lapse Shot . . . . . 79
- Stop Motion Animation . . . . . 80
- Silent Mode . . . . . 81
- Shutter Type . . . . . 81
- Bracket . . . . . 82
  - Exposure Bracket . . . . . 82
  - Aperture Bracket . . . . . 84
  - Focus Bracket . . . . . 84
  - White Balance Bracket . . . . . 85
- HDR . . . . . 86
- Multiple Exposure . . . . . 88
- Quick Menu . . . . . 89

## CHAPTER 5: PHYSICAL CONTROLS

- Items on Top of Camera . . . . . 91
  - Shutter Button . . . . . 91
  - Zoom Lever . . . . . 91
  - On/Off Switch . . . . . 91
  - Mode Dial . . . . . 92
  - Video Button . . . . . 92
  - Thumb dial . . . . . 92

Built-in Flash Unit . . . . .	93
Microphone . . . . .	93
Controls on Back of Camera . . . . .	93
Viewfinder, Eye Sensor, EVF Button, and Diopter Adjustment Wheel . . . . .	93
Flash Release Lever . . . . .	94
AF/AE Lock Button . . . . .	94
Playback Button . . . . .	94
Display Button . . . . .	94
Menu/Set Button and Direction Buttons . . . . .	97
Direction Buttons . . . . .	97
Up Button: Exposure Compensation . . . . .	97
Right Button: White Balance . . . . .	99
Left Button: Focus Mode . . . . .	102
Autofocus . . . . .	102
AF Macro . . . . .	102
Macro Zoom . . . . .	102
Manual Focus . . . . .	102
Down Button: Drive Mode . . . . .	103
Burst Shooting . . . . .	104
4K Photo . . . . .	105
4K Burst . . . . .	106
4K Burst S/S . . . . .	106
4K Pre-burst . . . . .	106
Extracting a 4K Photo Still Image . . . . .	107
Post Focus . . . . .	109
Focus Stacking . . . . .	111
Self-timer . . . . .	112
Center Button: Menu/Set . . . . .	113
Function Buttons . . . . .	113
Fn1/4K Photo Button . . . . .	114
Fn2/Post Focus Button . . . . .	114
Fn3/Delete/Q.Menu/Cancel Button . . . . .	114
Fn4/EVF Button . . . . .	115
Assigning Functions to Function Buttons . . . . .	115
Preview . . . . .	117
One Push AE . . . . .	118
Touch AE . . . . .	118
Focus Area Set . . . . .	118
Operation Lock . . . . .	118
Record/Playback Switch . . . . .	119
Restore to Default . . . . .	119
Assigning Options to Function Buttons for Playback Mode . . . . .	119
LCD Monitor . . . . .	119
Using the Touch Screen . . . . .	119
Items on Front of Camera . . . . .	121
Control Ring . . . . .	121
Step Zoom . . . . .	122
AF Assist/Self-timer Lamp . . . . .	122

## CHAPTER 6: PLAYBACK

123

Normal Playback . . . . .	123
Index View and Enlarging Images . . . . .	123
The Playback Menu . . . . .	124
Slide Show . . . . .	124
[Play] All . . . . .	125
[Play] Picture Only/Video Only . . . . .	125

Playback Mode . . . . . 125

Protect. . . . . 126

Rating . . . . . 126

Title Edit. . . . . 127

Face Recognition Edit. . . . . 127

Raw Processing . . . . . 127

4K Photo Bulk Saving . . . . . 130

Light Composition . . . . . 130

Sequence Composition . . . . . 131

Clear Retouch. . . . . 132

Text Stamp . . . . . 133

Resize . . . . . 133

Cropping . . . . . 134

Rotate . . . . . 134

Video Divide . . . . . 134

Time Lapse Video . . . . . 136

Stop Motion Video . . . . . 136

Rotate Display. . . . . 136

Picture Sort . . . . . 136

## CHAPTER 7: CUSTOM MENU, SETUP MENU, AND MY MENU 137

The Custom Menu . . . . . 137

ISO Increments . . . . . 138

Extended ISO . . . . . 138

Exposure Compensation Reset. . . . . 138

AF/AE Lock . . . . . 138

AF/AE Lock Hold . . . . . 139

Shutter AF. . . . . 139

Half Press Release. . . . . 140

Quick AF. . . . . 140

Eye Sensor AF. . . . . 140

Pinpoint AF Setting. . . . . 141

    Pinpoint AF Time. . . . . 141

    Pinpoint AF Display . . . . . 141

AF Assist Lamp . . . . . 141

Direct Focus Area . . . . . 141

Focus/Release Priority . . . . . 142

Focus Switching for Vertical/Horizontal . . . . . 142

Loop Movement Focus Frame . . . . . 143

AF Area Display . . . . . 143

AF+MF. . . . . 143

Manual Focus (MF) Assist. . . . . 144

MF Assist Display . . . . . 144

Function Button Set . . . . . 144

Quick Menu (Q.Menu) . . . . . 145

Ring/Dial Set . . . . . 146

Operation Lock Setting. . . . . 147

Touch Settings . . . . . 147

    Touch Screen. . . . . 147

    Touch Tab . . . . . 147

    Touch AF . . . . . 147

    Touch Pad AF. . . . . 148

Dial Guide. . . . . 148

Zoom Lever . . . . . 149

Auto Review. . . . . 149

Monochrome Live View . . . . . 150

Constant Preview . . . . .	150
Peaking . . . . .	150
Histogram . . . . .	151
Guide Line . . . . .	152
Center Marker . . . . .	153
Highlight . . . . .	153
Zebra Pattern . . . . .	154
Exposure Meter . . . . .	154
MF Guide . . . . .	155
EVF/Monitor Display Settings . . . . .	155
EVF Display Setting . . . . .	155
Monitor Display Setting . . . . .	156
Recording Area . . . . .	156
Remaining Display . . . . .	156
Menu Guide . . . . .	156
Lens Position Resume . . . . .	157
Lens Retraction . . . . .	157
Self Timer Auto Off . . . . .	157
Face Recognition . . . . .	157
Profile Setup . . . . .	159
The Setup Menu . . . . .	159
Custom Set Memory . . . . .	159
Clock Set . . . . .	160
World Time . . . . .	160
Travel Date . . . . .	161
Wi-Fi . . . . .	161
Bluetooth . . . . .	161
Wireless Connection Lamp . . . . .	161
Beep . . . . .	161
Economy . . . . .	162
Sleep Mode . . . . .	162
Sleep Mode (Wi-Fi) . . . . .	162
Auto EVF/Monitor Off . . . . .	162
Monitor Display Speed . . . . .	162
EVF Display Speed . . . . .	162
Monitor Display/Viewfinder . . . . .	163
Monitor Luminance . . . . .	163
m/ft . . . . .	163
Eye Sensor . . . . .	164
USB Mode . . . . .	164
TV Connection . . . . .	165
Language . . . . .	165
Version Display . . . . .	165
Folder/File Settings . . . . .	166
Select Folder . . . . .	166
Create a New Folder . . . . .	166
File Name Setting . . . . .	166
Number Reset . . . . .	167
Reset . . . . .	167
Reset Network Settings . . . . .	167
Level Gauge Adjustment . . . . .	167
Format . . . . .	168
My Menu . . . . .	168

## CHAPTER 8: MOTION PICTURES

170

Basics of C-Lux Videography . . . . .	170
---------------------------------------	-----

High Speed Video Recording . . . . . 172

Making Other Settings When Recording Movies. . . . . 173

    The Motion Picture Menu . . . . . 173

        Recording Quality . . . . . 174

        Snap Movie. . . . . 175

        AFS/AFF/AFC. . . . . 175

        Continuous AF. . . . . 175

        Sensitivity . . . . . 176

        AF Mode . . . . . 176

        Photo Style. . . . . 176

        Filter Settings . . . . . 176

        Metering Mode . . . . . 176

        Highlight Shadow . . . . . 176

        Intelligent Dynamic . . . . . 176

        Intelligent Resolution . . . . . 176

        ISO Auto Upper Limit (Video) . . . . . 176

        Diffraction Compensation. . . . . 177

        Stabilizer . . . . . 177

        Flicker Decrease . . . . . 177

        Level Shot . . . . . 177

        Intelligent Zoom. . . . . 177

        Digital Zoom. . . . . 177

        Wind Noise Canceller . . . . . 177

        Zoom Mic . . . . . 178

    The Creative Video Menu. . . . . 178

        Exposure Mode . . . . . 178

        High Speed Video . . . . . 178

        4K Live Cropping. . . . . 178

Recording Still Images During Video Recording . . . . . 179

Using External Audio Recorder . . . . . 180

Using Physical Controls for Video Recording. . . . . 180

Using the Touch Screen During Video Recording . . . . . 182

    Silent Operation . . . . . 183

Recommendations for Recording Video . . . . . 183

Motion Picture Playback and Editing . . . . . 183

    Editing with a Computer . . . . . 185

CHAPTER 9: WI-FI, BLUETOOTH, AND OTHER TOPICS 186

Note About Leica Fotos App . . . . . 186

Using Wi-Fi and Bluetooth Features. . . . . 186

    Controlling the Camera with a Smartphone or Tablet . . . . . 188

    Sending Images and Videos to a Smartphone or Tablet . . . . . 190

    Adding Location Data to Images. . . . . 191

    Turning the Camera On or Off Using Bluetooth. . . . . 192

    Controlling the Camera’s Shutter Button Using a Bluetooth Connection Only . . . . . 193

Other Menu Options for Wi-Fi and Bluetooth . . . . . 193

    Wi-Fi . . . . . 193

        Priority of Remote Device . . . . . 194

        Wi-Fi Password. . . . . 194

        Device Name. . . . . 194

        Wi-Fi Function Lock . . . . . 194

        Network Address. . . . . 194

        Approved Regulations. . . . . 194

    Bluetooth . . . . . 194

        Bluetooth. . . . . 195

        Remote Wakeup . . . . . 195

Returning from Sleep Mode . . . . . 195

Auto Transfer . . . . . 195

Location Logging . . . . . 196

Auto Clock Set . . . . . 196

Wi-Fi Network Settings . . . . . 196

Wireless Connection Lamp . . . . . 196

Macro (Closeup) Shooting . . . . . 196

Street Photography . . . . . 197

Connecting Camera to HDTV with Cable . . . . . 198

**APPENDIX A: ACCESSORIES 199**

Cases . . . . . 199

Batteries and Chargers . . . . . 200

AC Adapter . . . . . 201

External Flash Units . . . . . 201

External Audio Recorders . . . . . 202

Gimbal . . . . . 202

Tripods . . . . . 202

**APPENDIX B: QUICK TIPS 204**

**APPENDIX C: RESOURCES FOR FURTHER INFORMATION 207**

Photography Books . . . . . 207

Websites . . . . . 207

    Digital Photography Review . . . . . 207

    Official Leica Site . . . . . 207

    Official Panasonic and Related Sites . . . . . 207

Videos . . . . . 208

Reviews of the C-Lux . . . . . 208

Reviews of the Panasonic ZS200/TZ200 . . . . . 208

**Index 209**