

# Index

## Symbols

- 1-Area setting for AF Mode 76–77
- 4K Burst setting for 4K Photo option 81
- 4K Burst S/S setting for 4K Photo option 81
  - recording of audio with 81
- 4K Photo Bulk Saving menu option 105
- 4K Photo menu option 51
- 4K Photo options 80–83, 180
  - combining 4K Photo bursts into a light composition 105–106
  - combining 4K Photo bursts into a sequence composition 106–107
  - extracting a still image from 4K burst 81–83
  - requirement of high-speed memory card 80
- 4K Pre-burst setting for 4K Photo option 81
- 4K video recording 148–149
  - requirement of high-speed memory card for 149
- 24 fps video formats 148
- 30 fps video formats 148–149
- 49-Area setting for AF Mode 74–75
- 60 fps video formats 148

## A

- AC adapter 6
  - Panasonic model no. DMW-AC10 176
- Adobe Premiere Pro software 152, 156
- AF/AE Lock button 5, 89
- AF/AE Lock Hold menu option 89, 115
  - unavailable with AF-On setting 115
- AF/AE Lock menu option 89, 114–115
  - inability to lock exposure in Manual exposure mode 89
- AF Area Display menu option 118
- AF Assist Lamp menu option 98, 117
- AF assist/self-timer lamp 6, 98
  - disabling operation of 98, 117
- AF Macro option for focus mode 170
- AF+MF menu option 119
- AF Mode/MF option for function button 95
- AF mode option 73–78
  - listing of settings available 73
  - moving focus frame on display 78
- AF-On option for AF/AE Lock button 114–115
- AFS/AFF/AFC menu option 29
- AFS/AFF/AFC option on Motion Picture menu 149
- AF Tracking setting for AF mode 74
- Anker 40-watt desktop USB charger 175

- Aperture
  - range of available settings 19, 64
  - dependent on zoom level of lens 20
  - relationship to depth of field 19
- Aperture bracket 56
- Aperture Priority mode 19–20
- Aperture ring 5, 20, 64
- Approved Regulations menu option 168
- Aspect bracket 58
- Aspect ratio 63–64
  - relationship to image size 26
- Aspect ratio switch 5, 63–64
  - checking before shooting 180
- Astrophotography 171–172
- Auto Clock Set menu option 169
- Auto Exposure Compensation menu option 46
- Autofocus option for focus mode 9, 65
- Auto ISO
  - using with Manual exposure mode 23, 180
  - using with Manual exposure mode with video recording 146
- Auto LVF/Monitor Off menu option 138
- Automatic lens cap 179
- Auto Review menu option 99, 125
- Auto Transfer menu option 168
- Auto White Balance setting 71
- AVCHD files
  - locating on memory card 156
- AVCHD video format 147–148

## B

- Back button focus 89, 114
- Backlight compensation 14
- Battery
  - Panasonic model no. DMW-BLG10PP 3, 175
    - charging 3
    - inserting into camera 3
  - Wasabi Power replacement battery 175
- Battery charger, external
  - Panasonic model no. DMW-BTC9 175
  - Wasabi Power model no. LCH-BLE9 175
- Beep menu option 137
- Bit rate for video recording 148
- Bleach Bypass setting for Filter Settings option 37
- Bluetooth features of camera
  - using to turn camera on or off 163–164
- Bluetooth menu option 137, 162, 168–169
- Blurred background
  - achieving with aperture setting 19
  - using wide aperture to achieve 19
- Bracket menu option 54–58
- Bulb setting for shutter speed 23, 164
- Burst Rate menu option 51
- Burst shooting 79–80
  - autofocus with 79
  - incompatibility with other settings 80

selecting speed of 79

## C

Calendar screen in playback mode 10, 99

Camera sounds

silencing 54, 137

Cancel/Delete button 6, 91

Cases

Eagle Creek waist pack 174

LowePro Rezo 110 AW 174

MetaGear case for LX100 II 174

Center Marker menu option 129

Charging/wireless connection lamp 5, 90

disabling operation of 137

Clear Retouch menu option 107–108

Clock Set menu option 7, 136

Color Space menu option 40

Color temperature

in general 71

Color temperature ratings of various light sources 71

Color tone

adjusting in Intelligent Auto Plus mode 16–17

Color tone adjustment for Monochrome Photo Style settings 31

Communication Light menu option for flash 47

Compression of JPEG images 29

Constant Preview menu option 126

Continuous AF option on Motion Picture menu 147, 149

Contrast

adjusting 30

Control dial 5, 69

Controlling camera from smartphone or tablet 159–160

Control ring 5, 64–65

assigning a function to 122

default functions of 64, 122

possible assignments for 122

using to adjust manual focus 64, 122

Control Ring menu option 122

Controls on back of camera 5

Controls on front of camera 6

Controls on top of camera 5

Create a New Folder menu option 140

Cropping menu option 109

Cross Process setting for Filter Settings option 36

Custom menu 113–134

navigating in 113

Custom Multi setting of AF Mode 75–76

using to create focus area with all focus zones 76, 180

Custom Set Memory menu option 134–135

Custom white balance

procedure for setting 71–72

## D

Date and time

displaying on screen 90

setting 7, 136

Daylight Saving Time

setting for 136

DC Coupler

Panasonic model no. DMW-DCC11 176

Defocus control option

using in Intelligent Auto Plus mode 16

Delete Confirmation menu option 111

Deleting images 91

Demo Mode menu option 142

Depth of field

relationship to aperture setting 19

Device Name menu option 168

Dial Guide menu option 124–125

Diffraction Compensation menu option 49–50

Diffraction Compensation option on Motion Picture menu 150

Digiscoping 171–172

Digital Zoom menu option 51

Digital Zoom option on Motion Picture menu 150

Dimmed items on menu screens 26

Diopter adjustment dial 5, 68

Direct Focus Area menu option 75, 78, 117

Direction buttons 5–6, 69–88

Display button 6, 89–90

miscellaneous functions of 90

using to display date and time 90

using to display help screens 25–26, 90

using to switch among display screens 89–90

DLNA streaming media server 166

Down button

functions of 78–88

Drive Mode options 78–88

turning off burst shooting and other settings 78

Dynamic Monochrome setting for Filter Settings option 35

## E

Economy menu option 137

Enlarging image in playback mode 10–11, 100

returning image to normal size 10

Exposure bracket 55–56

selecting individual or burst shots 56

setting from exposure compensation screen 56

setting order of exposures 56

using to create HDR images 55

Exposure compensation 181

adjusting in Intelligent Auto Plus mode 16

and video recording 146

limited adjustment range for movies 146

Exposure compensation dial 5, 67–68

disabled when exposure compensation assigned to other control 67

Exposure Compensation Reset menu option 114

Exposure Meter menu option 20, 130

Expressive setting for Filter Settings option 34

Extended ISO menu option 114

Extended Optical Zoom 27, 51

incompatibility with other settings 27  
relationship to Picture Size setting 27

#### External audio recorders

Shure VP83 179  
Tascam DR-40 179  
Tascam DR-100MkII 179  
using for video recording 151, 179  
Zoom H1 179  
Zoom H6 179

#### External flash units

LumoPro LP180 178  
Metz 36 AF-4 O 178  
Panasonic DMW-FL220 43  
Panasonic DMW-FL360L 43, 48, 178  
Panasonic FL200L 177  
Panasonic FL580L 178  
Yongnuo YN-560 IV 178

#### Eye sensor 5

setting sensitivity of 139

Eye Sensor AF menu option 68, 116

Eye Sensor menu option 68, 139

## F

Face/Eye Detection setting for AF Mode 73–74

changing eye camera focuses on 73–74

changing face camera focuses on 74

Face Recognition Edit menu option 103

Face Recognition menu option 133–134

Fade-in and fade-out effects for video recording 146

Fantasy setting for Filter Settings option 38

File Name Setting menu option 141

Fill-flash setting for Flash Mode. See Forced On setting for Flash Mode

Filter effect adjustment for Monochrome Photo Style settings 31

#### Filters

using with LX100 II camera 177

Filter Settings menu option 32–40

incompatibility with other settings 34

making adjustments to settings 33

using with Quality set to Raw 34, 180

Filter Settings option on Motion Picture menu

list of settings not available for video recording 149

Final Cut Pro software 152

Firing Mode menu option 43

#### Firmware

displaying current version 140

updating 140

Flash Adjustment menu option 46

Flash, built-in unit 43

diffusing 180

using in Intelligent Auto mode 9

Flashing highlights in playback mode 129

Flash menu option 43–48

incompatibility with other settings 43

Flash Mode menu option 44–45

Flash Synchro setting for Flash Mode 45–46

incompatibility with other settings 46

Fn1 button 5, 68, 90–91

Fn2 button 5, 91

Fn3 button 6, 91

Fn4 button 5, 91–92

Fn5 button 5, 92

#### Focus

general techniques 65–66

Focus Area Set option for function button 78, 94

Focus bracket 57

compared to Post Focus feature 57

playback of images 57

#### Focus frame

moving around on display 78

Focus mode options 65–66

Focus/Release Priority menu option 117–118

effect on burst shooting 79, 118

Focus Stacking option 85–86

incompatibility with other settings 86

Focus switch 6, 65–66

checking before shooting 180

Focus Switching for Vertical/Horizontal menu option 118

Folder/File Settings menu option 140

Forced On setting for Flash Mode 44

Forced On with Red Eye setting for Flash Mode 44

Format menu option 142

Function buttons 90–96

assigning functions to for playback mode 95–96

assigning functions to for recording mode 92–95

changing assignment by pressing and holding 120

Function Button Set menu option 90, 120–121

## G

GPS data. See Location data

Grain effect adjustment for Monochrome Photo Style settings 31

Guide Line menu option 128–129

## H

Half Press Release menu option 115

HDMI Mode (Play) menu option 139

HDMI port 6

HDR (high dynamic range) photography 14, 58–60

using Manual exposure mode for 22

HDR menu option 58–60

incompatibility with other settings 60

#### HDTV

connecting camera to with HDMI cable 139

Help screens in camera 90

High Dynamic setting for Filter Settings option 36

High Key setting for Filter Settings option 35

Highlight menu option 129

Highlight Shadow menu option 41–42

Highlight Shadow option on Motion Picture menu 149

Histogram

- moving on display 128
- playback mode 128
- shooting mode 128
- Histogram menu option 127–128
- Hot shoe 5

**I**

- iA Button Switch menu option 122
- iA (Intelligent Auto) button 5, 68
- i.Dynamic menu option 42
- i.Dynamic option on Motion Picture menu 150
- i.Handheld Night Shot menu option 14
- iHDR menu option 14
- Image sensor plane marker 5
- Impressive Art setting for Filter Settings option 36
- Index screens in playback mode 10, 99–100
- Infrared photography 170–171
- Intelligent Auto mode 13–15
  - general procedure for using 13
  - incompatibility with other settings 13
- Intelligent Auto Mode menu option 14
- Intelligent Auto Plus mode 15–17
  - features of 16
  - selecting 15
  - settings unavailable with 17
  - using exposure compensation in 16
  - using flash with 17
- Intelligent Dynamic. See i.Dynamic
- Intelligent ISO setting 70
- Intelligent Resolution. See i.Resolution
- Intelligent Zoom. See i.Zoom
- Interlaced video formats 148
- i.Resolution menu option 42
- i.Resolution option on Motion Picture menu 150
- Irfanview software program 34, 181
- ISO 69–70
  - native values 114
  - range of values available 69, 70
- ISO Auto Upper Limit (Photo) menu option 49, 70
- ISO Auto Upper Limit (Video) option on Motion Picture menu 150
- ISO Increments menu option 113–114
- Items on bottom of camera 6
- Items on front of camera 6
- i.Zoom 50
- i.Zoom option on Motion Picture menu 150

**J**

- JPEG files 29
- Jump Snap feature 160

**K**

- Kelvin units of color temperature 71
- Key icon in playback mode for protected image or video 102

**L**

- Language menu option 7, 140
- LCD monitor 96–98
  - adjusting brightness of 138
  - adjusting display settings for 138
  - switching between viewfinder and 139
- Left button
  - functions of 73–78
  - using to activate MF Assist focus frame 78
- Leica D-Lux 7 camera
  - similarity to LX100 II camera 1
- Lens
  - minimum focus distance 65, 170
  - retraction in playback mode 89
  - specifications of 6
- Lens cap
  - attaching to camera with lens cap string 3
  - automatic 3, 179
- Lens Position Resume menu option 132
- Lens Retraction menu option 89, 132
- Level Gauge Adjustment menu option 142
- Level Gauge display screens 89
- Light Composition menu option 105–106
- Live View Boost menu option 126
- Location data
  - adding to images using smartphone 162
- Location Logging option on Setup menu 162, 169
- Locking exposure 89
- Locking focus 89
- Locking operation of cursor buttons and touch screen 95
- LoiLoScope software
  - where to download 3
- Long Shutter Noise Reduction menu option 49
- Loop Movement Focus Frame menu option 118
- Low Key setting for Filter Settings option 35
- Lumix Club menu option 165, 168
- LVF. See Viewfinder (LVF)
- LVF button 5, 68, 92, 139
- LVF Display Setting menu option 131
- LVF Display Speed menu option 138
  - conflict between Eco30fps setting and Digital Zoom option 138
- LVF/Monitor Display Settings menu option 131
- LVF/Monitor Switch menu option 68, 92, 139

**M**

- Macro photography 170
- Manual exposure mode 22–23
  - displaying effects of settings 23
  - icons on screen 22
  - reasons for using 22
  - using Auto ISO with 23, 180
  - using exposure compensation in 23
  - using for HDR images 22
- Manual Exposure mode (movies)
  - range of available shutter speeds 146

- Manual Flash Adjustment menu option 43, 47
  - Manual focus
    - aids to focusing 65, 78
    - general procedure for using 65–66
    - using in conjunction with autofocus 119
  - Mechanical shutter
    - advantages of 54
  - Memory card
    - formatting 142
    - inserting into camera 4
    - operating camera without 4
    - requirement of UHS speed class 3 for some types of recording 4
    - types of 4
  - Menu/Set button 6, 88
    - functions of 88
  - Menu systems
    - listing of 24
    - navigating among 24–26
  - Metering Mode menu option 40–41
    - incompatibility with other settings 41
  - Metering Mode option on Motion Picture menu 149
  - MF Assist Display menu option 119–120
  - MF Assist frame
    - activating 78
  - MF Assist menu option 78, 119
    - incompatibility with other settings 119
    - not available for movie recording 146
  - MF Guide menu option 130
  - M/FT menu option 139
  - Microphone
    - built-in 5
  - Miniature setting for Filter Settings option 37–38
  - Minimum shutter speed menu option 49
  - Monitor Display menu option 138
  - Monitor Display Setting menu option 131
  - Monitor Display Speed menu option 138
    - conflict between Eco30fps setting and Digital Zoom option 138
  - Monitor Information Display menu option 98, 131, 181
  - Monitor Information Display screen 89, 98, 120
    - using to adjust settings during video recording 154
  - Monitor Luminance menu option 138
  - Monochrome Live View menu option 126
  - Monochrome setting for Filter Settings option 35
  - Mophie PowerStation XL portable USB power supply 175
  - Motion Picture menu 147–151
    - list of items in common with Recording menu 147
  - Motion picture recording
    - adjusting exposure compensation 146
    - adjusting ISO 154
    - autofocus options 147
    - duration limits for 144
    - general procedure for 9–10, 144–145
    - general recommendations for 155
    - range of shutter speed settings available 146
    - taking still pictures during 150
      - using Aperture Priority mode 145
      - using automatic modes 145
      - using exposure compensation 146
      - using Manual exposure mode 146
      - using manual focus 146
      - using physical controls of camera during 152–154
      - using Shutter Priority mode 146
      - using the touch screen 154–155
  - Motion pictures
    - editing in camera 110, 155
    - editing with computer 11, 156–157
    - saving still frames from 11, 156
  - Movie button 89, 123
    - disabling operation of 123
  - Movie recording. See Motion picture recording
  - Movies and TV app for Windows 10 156
  - MP4 video format 147–148
    - locating MP4 files on memory card 156
  - MTS files for AVCHD video 156–157
  - Multiple Exposure menu option 60–61
    - using Overlay option with existing Raw image 61
  - My Menu custom menu system 142–143
- ## N
- Network Address menu option 168
  - Noise reduction
    - adjusting 30
  - NTSC video system 144, 149
  - Number Reset menu option 141
- ## O
- Old Days setting for Filter Settings option 34
  - One Point Color setting for Filter Settings option 39
  - Online Manual menu option 3, 134
  - On/off switch 5, 66–67
  - Operation Lock option for function button 94
  - Operation Lock Setting menu option 95, 122–123
- ## P
- PAL video system
    - difference from NTSC system 149
  - Panasonic Image App 157–165
  - Panasonic Lumix DC-LX100 II camera
    - features lacking 1
    - features of 1
  - Panasonic users manual
    - where to download 3, 134
  - Panoramas 87
    - creating 87–88
    - playback in camera 88
    - setting direction and size of 53
    - shooting with filter effects 34, 87
  - Panorama Settings menu option 53, 87
  - PC Connection menu option 168
  - Peaking
    - using to assist with manual focus 66



Peaking menu option 126–127  
 Photo Collage feature 163  
 PHOTOfunSTUDIO software 103, 134, 165  
   where to download 3  
 Photo Style menu option 30–32  
   adjusting parameters for 30–31  
   comparison chart 31  
   incompatibility with other settings 31  
   saving a custom setting 32  
   using with Raw setting for Quality 31  
 Photo Style option on Motion Picture menu 149  
 PictBridge protocol 6, 112, 139  
 Picture Mode in Recording option on Motion Picture menu 150  
 Picture Size menu option 26–27  
   incompatibility with other settings 27  
   relationship to aspect ratio 26  
 Picture Sort menu option 111  
 Pinpoint AF Display menu option 116–117  
 Pinpoint AF Setting menu option 116–117  
 Pinpoint AF Time menu option 116  
 Pinpoint setting for AF Mode 77  
 Playback  
   movies  
     adjusting volume 11  
     general procedure 11, 155  
   still images  
     general procedures 10, 99  
     sorting chronologically 111  
 Playback button 5, 89  
   using to turn on camera in playback mode 89  
 Playback menu 100–112  
 Playback Mode menu option 101  
 Playback on TV menu option 166  
 Plural Eyes software 152  
 Portraits  
   settings for taking 173  
 Post Focus option 83–85  
   incompatibility with other settings 86  
 Preview option for function button 93–94  
   incompatibility with other settings 94  
 Printing images directly from camera 6, 112  
 Priority of Remote Device menu option 159–160, 167  
 Profile Setup menu option 134  
 Program mode 17–19  
 Program Shift 18  
   incompatibility with other settings 18  
 Progressive video formats 148  
 Protect menu option 101–102

## Q

Q.Menu button 5, 91  
 Q.Menu menu option 121–122  
 Quality menu option 27–29  
   distinguished from Picture Size option 27  
 Quick AF menu option 115–116

Quick Menu 5, 61–62

## R

Rating menu option 102  
 Rating option for function button 96  
 Raw & Fine or Raw & Standard setting for Quality 29  
 Raw format 28–29  
   ability to alter settings after images captured 28  
   compressed and uncompressed files 29  
   incompatibility with other settings 28  
   using with Filter Settings options 28  
 Raw images  
   processing in camera 103–105  
 Raw Processing menu option 103–105, 181  
 Recording Area menu option 132  
 Recording Format option on Motion Picture menu 147–148  
 Recording menu  
   in general 24–26  
 Recording modes  
   list of 12  
 Recording modes of the Panasonic Lumix LX100 II camera 12  
 Recording Quality option on Motion Picture menu 148–149  
 Record/Playback Switch option for function button 95, 96  
 Red-eye Removal menu option 49  
 Remaining Display menu option 132  
 Remote Wakeup menu option 163, 168  
 Reset menu option 141  
 Reset Network Settings menu option 142  
 Resetting camera settings 141  
 Resize menu option 108–109  
 Restore to Default option for function button 95  
 Retro setting for Filter Settings option 34  
 Returning from Sleep Mode menu option 168  
 Right button  
   functions of 71–73  
 Rotate Display menu option 109, 111  
 Rotate menu option 109  
 Rough Monochrome setting for Filter Settings option 36

## S

Saturation  
   adjusting 30  
 Saving custom settings for menu options 134–135  
 Scene detection 13  
 Second-curtain flash 45–46  
 Select Folder menu option 140  
 Self-timer 86–87  
   general procedure for using 180  
   incompatibility with other settings 87  
   taking multiple shots with 86  
 Self Timer Auto Off menu option 86, 132  
 Self-timer menu option 51  
 Sensitivity (ISO)  
   settings available for video recording 146  
 Sepia setting for Filter Settings option 35

Sequence Composition menu option 106–107

Setup menu 134–143

Sharpness  
adjusting 30

Shooting modes. See Recording modes

Shutter AF menu option 115

Shutter button 66  
using to start and stop video recording 146

Shutter Priority mode 20–22  
incompatibility with other settings 22

Shutter Remote Control feature of Image App 164

Shutter speed  
procedure for setting speeds not on dial 67  
range of available settings 19, 20, 23, 54  
for movies 146  
using setting to freeze or blur motion 21

Shutter speed dial 5, 67

Shutter Type menu option 21, 54–55

Silent Mode menu option 54

Silent Operation option for video recording 154–155

Silky Monochrome setting for Filter Settings option 36

Silkipix software  
where to download 3

Simultaneous Record Without Filter menu option 32

Sleep Mode menu option 137

Sleep Mode (Wi-Fi) menu option 137

Slide Show menu option 100–101

Slow-motion video  
creating using 60p video format 148

Slow Sync setting for Flash Mode 44–45

Soft Focus setting for Filter Settings option 38

Software for use with LX100 II camera  
where to download 3

Sound Recording Display option on Motion Picture menu 151

Sound Recording Level Adjustment option on Motion Picture menu 151

Speaker 6

Spot setting for Metering Mode menu option  
moving spot metering area on display 41, 180

Stabilizer menu option 50

Stabilizer option on Motion Picture menu 150

Star Filter setting for Filter Settings option 38

Step-by-step guides  
adding location data to images 162  
connecting camera to smartphone or tablet 157  
preliminary steps before taking pictures 12  
quick start for motion picture recording 144  
saving still frame from motion picture 156  
sending images to a computer 165–166  
sending images to computer by Wi-Fi 165–166  
taking pictures in Intelligent Auto mode 8  
turning camera on or off using Bluetooth connection 163–164  
uploading images to social networks 165  
using external audio recorder when recording video 152  
using the Video Divide option 155

Step zoom function for control ring 65, 125

Step zoom function for zoom lever 125

Stop Motion Animation menu option 52–53

Stop Motion Video menu option 111

Street photography 172

Sunshine setting for Filter Settings option 39–40

## T

Tables  
function button assignments for recording mode 92  
shutter speed equivalents 22  
use of camera controls for video recording 152

Text Stamp menu option 108  
using with Profile Setup option 134  
using with Title Edit option 102–103, 108

Time exposure setting for shutter speed 23, 67

Time Lapse Shot menu option 51–52

Time Lapse Video menu option 110

Time zone  
setting 136

Title Edit menu option 102–103

Touch AE icon 97

Touch AE option for function button 94

Touch AF menu option 117, 124

Touch AF/Touch Shutter icon 97

Touch Pad AF menu option 124

Touch screen features 96–98, 123–124  
in general 96  
using during video recording 154–155  
using with viewfinder 124

Touch screen icons 96–98

Touch Screen menu option 123

Touch Settings menu option 123–124, 181

Touch Shutter option 97, 124  
using during video recording 154

Touch tab icons 97

Touch Tab menu option 124

Touch Zoom icon 97, 155

Toy Effect setting for Filter Settings option 37

Toy Pop setting for Filter Settings option 37

Tracking focus 74  
selecting in Intelligent Auto mode 74

Travel Date menu option 136

Tripod socket 6

TV Connection menu option 139

## U

Ultra-HD video format. See 4K video format

Up button  
functions of 69–71

USB Mode menu option 139

USB port 6

Utilize Custom Set Feature menu option 134–135

## V

Version Display menu option 140

- Video button. See Movie button
  - Video button menu option 89, 123
  - Video Divide menu option 110, 155
  - Video files
    - locations on memory cards 156
  - Video recording. See Motion picture recording
  - Viera Link menu option 139
  - Viewfinder (LVF) 5, 68
    - adjusting display settings for 138
    - adjusting for vision 69
    - automatic switching to LCD screen 68
    - switching between LCD monitor and 5, 68, 139
    - using touch screen with 124
  - Viewfinder menu option 138
  - Viewfinder, optical
    - Panasonic model no. DMW-VF1 176
    - Voigtlander 28mm 176
  - Virtual function buttons 92, 97–98
    - functions that cannot be assigned to 93
- W**
- WD TV Live media device 166
  - White balance 71–73
    - adjusting for Raw files 73
    - adjusting using color axes 72
    - list of preset options 71
    - setting by color temperature 72
    - setting custom value manually 71
  - White balance bracket 57–58
    - activating from white balance adjustment screen 58, 72–73
    - incompatibility with other settings 58
  - Wi-Fi and Bluetooth features of camera 157–170
    - adding location data to images 162
    - assigning ratings to images and videos within Image App 162
    - connecting to smartphone or tablet 157–158
    - controlling camera's shutter button with Bluetooth 164
    - controlling camera with smartphone or tablet 159–160, 181
    - Jump Snap feature 160
    - sending images and videos to smartphone or tablet 160–162
    - sending images to a computer 165–166
    - sending images to printers and other devices 165
    - turning camera on or off with Bluetooth 163–164
    - uploading images to social media sites 162, 164–165
    - viewing images on TV 166
  - Wi-Fi Function Lock menu option 168
  - Wi-Fi Function menu option 167
  - Wi-Fi menu option 137, 167–168
  - Wi-Fi Network Settings menu option 169
  - Wi-Fi Password menu option 157, 167–168
  - Wi-Fi Setup menu option 167–168
  - Wind Noise Canceller option on Motion Picture menu 151
  - Wireless Channel menu option for flash 47
  - Wireless Connection Lamp menu option 90, 137, 169–170
  - Wireless flash options 47–48
  - Wireless menu option for flash 47
  - Wireless Setup menu option for flash 47–48
  - World Time menu option 136
- Z**
- Zebra Pattern menu option 129–130
  - Zoom lever 5, 66
    - using to navigate quickly through menus 66, 180
  - Zoom Lever menu option 125