

Index

Symbols

4K Output Select menu item 188–189

4K video

using as a type of continuous shooting 253

24p, 30p, 60p, and 120p video frame rates 205–206

24p/60p Output menu option 187

35mm-equivalent zoom range 116

A

AC adapter

Sony AC-UUD12 3, 245

Access lamp 10, 53, 162

Access Point Settings menu option 238

Adobe Camera Raw software 93

AEL Hold option for control button 133–134

AEL Toggle option for control button 133

AEL w/Shutter menu item 80, 146

using with continuous shooting 52, 80

AF Area Auto Clear menu item 72

AF Area Registration menu item 71, 131, 154

AF Drive Speed menu item 112, 208–209

using to control speed of pull focus effect 161, 208

AF Illuminator menu item 70, 147

AF Illuminator/Self-timer Lamp 9, 147

controlling operation of 70

AF/MF Control Hold option for control button 131

using for back button focus 131

AF/MF Control Toggle option for control button 64, 131–132

AF Tracking Sensitivity menu item 112, 208

Airplane Mode menu item 228, 237

Animal Eye Display menu item 70

Animal eyes

setting for detecting and focusing on 70–71

Anker 40-watt desktop USB charger 246

Anti Motion Blur scene type setting 36

compared to Hand-held Twilight setting 36

Aperture

range of available settings 9, 23, 26, 30

effect of focal length on 26

relationship to depth of field 24

Aperture Priority exposure mode for movies 202

Aperture Priority mode 24–26

Area Setting menu item 192–193

Aspect Ratio menu item 48–50

incompatibility with other settings 50

relationship to JPEG Image Size menu item 48

Asterisk indicating autoexposure lock 23

Astrophotography 240

Atomos Shogun video recorder 250–251

controlling from RX100 VII camera 188

recording video to 189, 221–222

Audio Level Display menu item 210

Audio Recording Level menu item 113, 209–210

Audio Recording menu item 113, 209

Audio Signals menu item 145

Auto Area Adjustment menu option 239

Auto Dual Recording menu item 207, 223

Autoflash setting 15, 82

Autofocus

using while in manual focus mode 131

Autofocus point

zooming in on in playback mode 164, 172

Auto ISO setting

setting minimum and maximum values for 75

using with Manual exposure mode 29–30, 76, 253

using with Manual Exposure Mode setting for movies 204

Automatic AF setting 14, 61

Auto Mode menu item 15, 21, 51

Auto Monitor Off menu item 181

Auto Object Framing menu item 109–110

incompatibility with other settings 110

using in Scene mode with Portrait setting 32

Auto Power Off Temperature menu item 182

Auto Review menu item 18, 127, 163

deleting an image in Auto Review 127

Auto Slow Shutter menu item 112, 208

works only when Auto ISO is in effect 208

Auto Time Correction menu option 239

Auto White Balance Lock Hold/Toggle options for control button 133

AVCHD format for movies 205

Av notation for aperture value 28

Av/Tv Rotate menu item 142

B

Back button focus feature 131

Battery

charging 2–3

indicator light 3

time for full charge 3

generic replacement 245

Sony NP-BX1 2, 245

Battery charger

generic external charger 245

Sony AC-UUD12 3, 245

Sony BC-TRX external charger 245

using as external power source 2

Battery/memory card compartment 162

Beauty Effect menu item 170–171

Bit rates of video formats 205, 206

Black and white

Picture Profile setting for 104

- shooting in 94
 - Black Gamma 102
 - Black Level 102
 - Blackmagic Design Intensity Pro video capture device
 - using to save image taken with no memory card 4
 - Blank screen
 - selecting for LCD monitor 122
 - Bluetooth remote control
 - Sony RMT-P1BT 248–249
 - Bluetooth Remote Control menu item 239, 249
 - incompatibility with other settings 239
 - Bluetooth Settings menu item 234, 239
 - Blurred background
 - how to achieve 24–25
 - Bokeh 25
 - Bounce flash 150
 - Bracket Order menu option 58
 - Bracket Settings menu item 57–58
 - BULB setting for shutter speed 30, 114
- C**
- Calendar display of images 163–164
 - Camera Settings1 menu
 - effects on settings on recording movies 216–218
 - Capture One Express software 2
 - Cases for RX100 VII camera
 - Eagle Creek Waist Pack 245
 - Lowepro Rezo 110 AW 244
 - Sony LCJ-RXK 243
 - Sony LCM-CSVH 244
 - Center button 9, 156
 - assigning a function to 136, 156
 - using to determine reason for setting conflict 254
 - using to magnify focus area 63
 - using to mark or unmark images for Playback menu options 156
 - using to play a panorama at larger size 156
 - using to play a video 156
 - using to return enlarged image to normal size 156
 - Center option for Focus Area 66
 - distinguishing focus frame from Spot metering circle 78–79
 - using to focus on off-center subject 66
 - Center option for Metering Mode 78
 - Circulation of Focus Point menu item 73
 - Clean HDMI signal output 10, 162, 188, 189, 243
 - Clear Image Zoom 116–118
 - incompatibility with other settings 118
 - using with movie recording 213
 - Color Depth 104
 - Color Mode 103
 - Color Phase 104
 - Color Space menu item 51
 - Color temperature
 - using to set white balance 86
 - Color temperatures of various light sources 85
 - Compression of JPEG files 47
 - Continuous AF setting 14
 - only autofocus option available for recording movies 62
 - Continuous exposure bracketing setting of drive mode 55
 - Continuous Playback for Interval menu item 59, 173
 - Continuous shooting option of drive mode 52–54
 - displaying images taken in burst 53
 - incompatibility with other settings 52, 54
 - selecting speed of 52
 - using autoexposure with 52
 - using autofocus with 52–53
 - using with flash 53
 - Continuous shooting option of Drive Mode
 - displaying images taken in burst 173, 175
 - Contrast
 - adjusting 92
 - Control ring 8, 147–148
 - assigning functions to 136–137, 148
 - icon indicating its current function 137
 - speeding up zoom operation 119
 - Standard option for settings 137, 148
 - using to adjust exposure compensation 136
 - using to adjust manual focus 63, 147, 149
 - using to select panorama direction 39
 - using to select scene type setting 32, 51
 - using to set aperture 25, 27
 - using to set shutter speed 27
 - using to zoom the lens 119, 147
 - Control Ring option of Custom Key menu items 148–149
 - Control wheel 9, 155
 - icon on display screen 28, 155
 - locking operation of 144, 153–154
 - using for Program Shift 155
 - using to control both aperture and shutter speed 28
 - using to move to other enlarged images 156, 165
 - using to select scene setting 32, 51, 155
 - using to set aperture 25, 155
 - using to set panorama direction 39, 155
 - using to set shutter speed 27, 155
 - Control with Smartphone menu item 233, 237
 - interference with other settings 237
 - Copyright Info menu item 193
 - Counter option for movie recording 185
 - Creative Style comparison charts 93
 - Creative Style menu item 91–95
 - adjusting contrast, saturation, and sharpness 92–93
 - comparison of settings to Scene mode settings 94–95
 - incompatibility with other settings 93
 - saving custom settings 92–93
 - using with Raw images 93
 - CTRL for HDMI menu item 188
 - Custom/Delete button 8, 154
 - assigning function to 129–135, 154
 - using to delete images or videos 154, 166
 - using to return movable focus frame to center 67
 - Custom Key (Movies) menu item 137–138
 - assignments for Center button 139
 - assignments for control ring 139

- assignments for Custom button 138–139
- assignments for Left button 139
- assignments for Right button 139
- Custom Key (Playback) menu item 139–140, 154
- Custom Key (Still Images) menu item 128–135
 - list of items that can be assigned to a button 129–130

D

- Date and Time
 - setting with Setup menu 6, 192
- Date/Time Setup menu item 6, 192
- DaVinci Resolve software 255
- Day for night movie recording 204
- Daylight Savings Time
 - adjusting 192
- Delete Confirmation menu item 180
- Delete menu item 168
- Delete Registered AF Area menu item 72
- Deleting images or videos 154, 166, 168
- Demo Mode menu item 184–185
- Depth of field
 - relationship to aperture setting 24
- Detail (Picture Profile parameter) 104
- Diffraction effect 26
- Digiscoping 240–241
- Digital Zoom 116–118
 - incompatibility with other settings 118
 - using with movie recording 213
- Dimmed menu items 44–45
- Diopter adjustment lever 149
- Display as Group menu item 175
- Display button
 - using to cycle through display screens 150, 156
- Display Button menu item 120–122, 149
- Display Continuous AF Area menu item 72
- Display MAC Address menu option 238–239
- Display Media Information menu item 197
- Display My Menu option for control button 136
- Display Quality menu item 180–181
- Display Rotation menu item 176–177
- Display screens
 - playback mode 165
 - shooting mode 149
 - selecting with Display button menu item 120–122
- DMF (direct manual focus)
 - requirement to hold shutter button down halfway with MF Assist 63, 149, 255
- Down button 157–158
 - inability to be reassigned to other functions 158
 - using to adjust exposure compensation 157–158
 - using to open movie playback control panel 158
 - using to switch functions of control wheel 28, 156
- DPOF (Digital Print Order Format) printing 169–170
- Drive Mode 51–56
- DRO/Auto HDR menu item 88–91
 - incompatibility with other settings 91

- DRO bracketing setting of drive mode 57
 - order not affected by Bracket Order menu setting 57
- DRO (dynamic range optimizer) setting 88–89
- Drop-frame time code
 - selecting 186

E

- Edit Device Name menu item 240
- Electronic shutter
 - fastest setting available when using flash 26, 30
- Electronic viewfinder 8, 149
 - adjusting brightness of 178
 - adjusting color temperature 178
 - setting camera to power off when EVF closed 10, 181
 - setting information display screens for 120–122, 149
 - switching between EVF and LCD screen 8, 122–123, 149
 - turning on camera by popping up EVF 10, 147, 149, 162
- Enlarge Image menu item 171
- Enlarge Initial Magnification menu item 172
- Enlarge Initial Position menu item 171
- Enlarging images by tapping touch screen 18, 161, 165
- Enlarging images with zoom lever 18, 164–165
- Entire Screen Average option for Metering Mode 79
- Expand Flexible Spot setting for Focus Area 67–68
- Exposure bracketing 55–56
 - continuous 55
 - incompatibility with other settings 56
 - order of bracketed exposures 56
 - changing 58
 - single 56–57
 - using exposure compensation with 56
 - using flash with 56
 - using self-timer with 57
- Exposure compensation 157–158
 - limited adjustment range for movies 74
 - setting adjustments for various shooting modes 81–82
 - unavailable in Auto and Scene modes 74
 - using with Manual exposure mode 29, 74
 - using with Sweep Panorama mode 39
- Exposure Compensation menu item 29, 74
- Exposure Mode (HFR) menu item 111, 204, 219
- Exposure Mode (Movies) menu item 111, 201–204
- Exposure Settings Guide menu item 23, 25, 27, 125
- Exposure Standard Adjustment menu item 81
- External flash
 - LumoPro LP180 250–251
 - using with RX100 VII camera 250–251
 - Yongnuo YN560-IV 250
- External LCD monitor
 - Sony model no. CLM-FHD5 252–253
- External microphones
 - attaching to RX100 VII 251
 - PowerDeWise lavalier model 251
 - Rode VideoMic Pro 251
- External video recorder 250–251
- Eye AF option for control button 132

Eye sensor 8, 149

F

Face detection 109

Face Detection Frame Display menu option 70

Face/Eye AF Settings menu item 70–71

Face/Eye Priority in AF menu option 70
incompatibility with other settings 71

Face Priority in Multi Metering menu item 79

Face Registration menu item 109

Fadeout

in-camera effect for movies 202, 203

Fade to white

in-camera effect for movies 204

File Format (Movies) menu option 17, 111, 204–205

File Format (Still Images) menu option 45–47

File Number menu item 194

Fill-flash setting 15, 82

Filter adapter

Lensmate 52mm version 246

Magfilter 52mm version 240, 246–247, 247

Finder Color Temperature menu item 178

Finder/Monitor menu item 122–123, 149

Finder switch 10, 149, 162

Fireworks scene type setting 37

Firmware 197–198

checking for updates 197

displaying version 197

Flash 8

basic procedure for using 15–16, 150

diffusing 254

incompatibility with other settings 15

need to pop up with Flash pop-up button before using 157

pulling back unit for bounce flash 150

using with burst shooting 15, 53

Flash Compensation menu item 84

incompatibility with other settings 84

Flashing highlights in playback mode

indicating areas of overexposure 166

Flash Mode menu item 15, 82–85, 150

Flash Off setting 82

Flash pop-up switch 8, 150

Flash synchronization speed 26, 30, 114

Flash unit

cannot be used until manually popped up 15, 150

moving for bounce flash 150

using diffuser with 254

Flexible Spot option for Focus Area 66–67

Focus Area Limit menu item 69

Focus Area menu item 64–68

Focus frame

changing size and location of 67, 253

quickest ways to make changes 67

Focus Frame Color menu option 72

Focusing

general procedures for 13–14

using touch screen 14, 64–65, 160–161

Focus Magnification Time menu item 63, 107

Focus Magnifier menu item 63, 106–108

assigning to a control button 63, 107

compared to MF Assist option 63, 106

using for recording movies 225

using touch screen features with 106

Focus Mode menu item 13–14, 61–65

Focus point

checking in playback mode 164, 172

Focus Standard option for control button 67, 131

Folder Name menu item 195

Follow Custom (Still Images) option for assignment to control
button or control ring 137, 148

Format menu item 5–6, 193–194

For Viewfinder display screen 121–122, 152

not available for video recording or in Movie mode 225

used with Quick Navi system 152

Function button 8, 151–154

assigning option to for playback mode 154

using to activate Send to Smartphone option 154

using to register AF area 154

using with Quick Navi system 152–153

using with Wheel Lock menu item 153–154

Function for VF Close menu item 10, 150, 162, 181

Function menu 151–152

assigning options to 151

using during video recording 218

using to adjust settings 151

using to select Exposure Mode (Movies) settings 202

using to select Superior Auto mode 22

Function Menu Settings menu item 139–140

Function of Touch Operation menu item 64, 68, 143–144

G

Gamma 102

Gamma Display Assist menu item 178–179, 216

Gourmet scene type setting 37–38

GPS information. See Location information

Grid Line menu item 124–125

Grip, accessory

Lensmate model for RX100 VII 247

Sony shooting grip, VCT-SGR1 249

H

Hand-held Twilight scene type setting 35

compared to Anti Motion Blur setting 35

HDMI cable

using to connect camera to television set 242

HDMI Information Display menu option 187–188

HDMI Only menu items 189–190

HDMI port 10, 162

HDMI Resolution menu option 187

HDMI Settings menu item 187–188

HDR (high dynamic range) photography 88

HDR setting in camera 89–91

- incompatibility with Raw format 91
- HDR video
 - using HLG gamma curves to create 101, 103
- Help system 254
- HFR Settings menu item 112, 207, 220–221
- High Frame Rate (HFR) recording 219–221
 - location of movie file on memory card 221
 - range of available frame rates 220
- High ISO Noise Reduction menu item 50
- Highlight option for Metering Mode 79
- High Sensitivity scene type setting 37–38
 - compared to Anti Motion Blur and Hand-held Twilight settings 37
- Histogram
 - activating in shooting mode 121
 - playback mode 165–166
 - not available for movies 225
- HLG (hybrid log-gamma) setting for gamma curve 103

I

- Icon on display when location information being obtained by camera 235
- Icons for menu items for still images or movies 44
- Illustrations
 - access lamp 162
 - controls on back of camera 149
 - controls on top of camera 146
 - diopter adjustment lever 149
 - items on bottom of camera 162
 - items on front of camera 147
 - items on left side of camera 162
 - LCD screen rotated for self-portraits 159
 - ports on right side of camera 162
 - tilting LCD screen 159
- Image Index menu item 175
- Image size
 - relationship to aspect ratio 47
- Image Size (Dual Recording) menu item 112, 207, 223
- Imaging Edge Mobile app 230–236
- Imaging Edge Software 2, 59, 93
 - using to control camera from computer 189–190
 - where to download 253
- In-Camera Guide option for control button 134, 254
- Index screens of images 19, 163–164, 175
- Information display screens
 - playback mode 165
 - shooting mode
 - selecting screens to be displayed 149
- Infrared photography 242
- Initial Focus Magnification menu item 107
- Initial Focus Magnification (Movies) menu item 113
- Intelligent Auto Mode 20–21
 - settings unavailable with 20
- Interlaced video formats 205
- Internal memory
 - lack of for Sony RX100 VII 3

- Interval Shooting Function menu item 58–59
 - creating time-lapse movie from shots 59
 - playback of images 59, 173, 175
- ISO
 - basic procedure for setting 28, 75–76
 - minimum setting of 500 for some Picture Profile settings 76
 - minimum setting of 800 for some Picture Profile settings 101
 - Multi Frame Noise Reduction (MFNR) setting 75–76
 - incompatibility with other settings 76
 - native settings 76
 - range of available settings 75
 - range of available settings for movies 217
 - setting minimum and maximum values for Auto ISO 75
- ISO Auto Minimum Shutter Speed menu item 77
- ISO menu item 75–77
 - incompatibility with other settings 76
- ISO Range Limit menu item 77
- ISO Setting menu item 74–77
- ISO setting of 25600 38, 76

J

- JPEG images 45
- JPEG Image Size menu item 47–49
- JPEG Quality menu item 47

K

- Kelvin units of color temperature 85
- Knee 103

L

- Landscape scene type setting 34
- Language
 - selecting on Setup menu 7
- Language menu item 7, 192
- Large focus frame
 - indicating focusing difficulty or non-optical zoom 118
- LCD screen 159–161
 - ability to tilt up, down, or 180 degrees forward 9, 159–160
 - adjusting brightness of 177–178
 - blacking out to save power 181
 - setting information display screens for 120–122
 - switching between LCD screen and EVF 122–123, 149
 - touch features of 9, 160–161, 182
 - using when lighting is dim 135
- Left button 159
 - assigning a function to 136, 159
 - using to activate Drive Mode 159
- Lens
 - focal length range of 9, 116
 - focusing distance for closeup shots 33
- Level display screen 121
 - using for panorama shooting 40
- Live View Display menu item 26, 27, 29, 126–127
 - forced to Setting Effect On in some shooting modes 127, 225

- using when using external flash units 250
- Location information
 - adding to images using Bluetooth connection 234–235
 - viewing 235
- Location Information Link Setting menu option 239
- Location Information Link Settings menu item 235, 239
- Locations of still images and videos on memory card 254
- Locking exposure 133–134
 - in Sweep Panorama mode 40
- Long Exposure Noise Reduction menu item 30, 50–51
 - incompatibility with other settings 50

M

- Macro scene type setting 33
- Manual exposure mode 27–31
 - using Auto ISO setting with 29–30, 76
 - using for HDR photography 31
 - using for silhouettes 31
- Manual Exposure mode for movies 203–204
 - using Auto ISO with 204
- Manual focus 14, 63–65
 - focusing aids 63–65
- Manual Shift feature 30, 133
- Marker Display menu item 113, 211
- Marker Settings menu item 113, 211–212
- Mechanical shutter 114
- Megapixels
 - used in measuring image size 47
- Memory buffer
 - icon on display with continuous shooting 53
- Memory Card + HDMI menu option 188
- Memory cards
 - capacity for storing images and videos 5
 - formatting in camera 5–6
 - inserting into camera 5
 - micro SD cards 4
 - operating camera without card 3
 - SD, SDHC, and SDXC cards 4
 - Sony Memory Stick cards 4
 - special requirement for HFR video recording 219
 - special requirements for XAVC S video formats 4, 200, 205, 206
 - types of 4
- Memory menu item 41, 60
- Memory Recall mode 40–42, 254
 - recalling saved settings 60–61
- Menu button 151
 - using to return enlarged image to normal size 151
- Menu items
 - dimmed because of conflicting settings 44–45
 - preceded by icons: Stills, Movies, HFR 44
- Menus
 - listing of 11, 43
 - navigating through 11, 43–45
- Metering Mode menu item 78–79
 - incompatibility with other settings 79

- MF Assist menu item 63–64, 107–108, 149
 - compared to Focus Magnifier option 108
 - not available for movies 108, 225
 - using with DMF 108, 149
- MFNR (Multi Frame Noise Reduction) setting for ISO
 - incompatibility with other settings 76
- Microphone, built-in 8
- Minimum focus distance 33
- Minimum shutter speed
 - setting for use with Auto ISO 77
- M.M. icon for metered manual value 28–29
- Mode dial 8, 146
 - effects of shooting mode on recording movies 213–215
- Mode Dial Guide menu item 31, 51, 180
- Monitor Brightness menu item 177–178
 - lower setting when Wi-Fi in use 178
- Mophie PowerStation XL portable USB battery 245
- Motion Interval Adjustment menu item 172
- Motion Shot feature for movie playback 172, 226
- Movie button 150
 - limiting operation to Movie mode 144, 150, 213
- Movie Button menu item 144, 146, 150, 213
- Movie files
 - locations of on memory card 254
- Movie option for assignment to control button 134
- Movie position on Mode dial
 - reasons for using 214
- Movies
 - adjusting playback volume 19, 179
 - editing 19, 227
 - recording
 - adjusting sound level 209–210
 - basic procedure 17–18, 200–201, 223–224
 - focus modes available for 217
 - functions that work from control buttons during video recording 217–219
 - time limits 5, 200–201
 - to external video recorder 221–222
- Movie w/Shutter menu item 114, 147, 212–213
- Multi option for Metering Mode 78
- Multi port 161
 - uses of 10, 161
- My Dial options for control buttons 135–136
- My Dial Settings menu option 141–142
- My Menu 198–199
 - adding items to 198–199

N

- Network menu 236–239
- New Folder menu item 195
- NFC area on left side of camera 10, 162, 232
- NFC (near field communication) protocol
 - using to connect camera to Android device 162, 232, 234
- Night Portrait scene type setting 35–36
- Night Scene scene type setting 35
- NO CARD warning message 3, 115

Noise Reduction Effect setting for MFNR 76
 Non-drop-frame time code
 selecting 186
 Not Set option for assignment to control button 136
 NTSC/PAL Selector menu item 182–183
 effect on Record Setting menu option 182

O

Optical slave flash 250
 Optical zoom 116–119
 Overheating of camera 182
 Overlay icon
 indicator of burst of shots in Superior Auto mode 22

P

Panorama
 setting direction for 39
 Panorama Direction menu item 39, 50
 Panorama Size menu item 38–39, 50
 Panoramas, playback 40
 Panoramas, shooting 39–40
 PC Remote setting for USB Connection 189–190
 PC Remote Settings menu item 115, 190, 191
 Peaking Color menu item 64, 108–109
 Peaking Level menu item 64–65, 108–109
 Peaking Setting menu item 64–65, 108–109
 using with DMF 108
 Pet scene type setting 36
 Phase Detection Area menu item 73
 Phase detection autofocus points 73
 Phase detection autofocus system 73
 limits on compatible aperture settings 52
 Photo Capture menu item 171–172, 223
 Photomatrix software 90
 Picture Effect menu item 95–100
 HDR Painting setting 98
 High Contrast Monochrome setting 97
 Illustration setting 99–100
 incompatibility with other settings 95, 100
 Miniature Effect setting 98
 Off setting 95
 Partial Color setting 97
 adjusting range of colors recognized 97
 Pop Color setting 96
 Posterization setting 96
 Retro Photo setting 96
 Rich-tone Monochrome setting 98
 Soft Focus setting 98
 Soft High-key setting 97
 Toy Camera setting 95–96
 using for movies 100
 Watercolor setting 99
 Picture Profile menu item 100–104
 adjusting parameters for a Picture Profile 102–104
 assigning to a control button for movie recording 216
 characteristics of 10 preset options 101

 effect of setting on Raw images 104
 incompatibility with other settings 104
 minimum ISO setting of 1000 for some settings 101
 using for still images 255
 using S-Log or HLG settings for increased dynamic range in
 movie recording 216
 Picture Profiles comparison chart 102
 Playback
 images shot with continuous shooting 53
 movies
 basic procedure 19, 225–226
 changing volume 19
 selecting still images or videos to view 174
 still images
 basic procedures 18, 163
 Playback button 150
 using to turn on camera 8, 147, 150, 255
 Playback menu 166–176
 Playback option for assignment to control button 136
 Playback speed for Interval Shooting menu item 173
 PlayMemories Home software 2, 59, 228
 Portrait scene type setting 32–33
 Power button 8, 147
 indicator light 8, 147
 Power Save Start Time menu item 181
 Pre-AF menu item 71
 Printing images directly to printer 169–170
 Priority Set in Auto White Balance menu item 88
 Program Auto exposure mode for Movies 202
 Program mode 23–24
 Program Shift feature 23–24
 not available for movie recording 225
 Progressive video formats 205
 Protect menu item 167
 Proxy Recording menu item 112, 207
 Pull focus effect for movie recording 160, 218

Q

Quality (Dual Recording) menu option 112, 207, 223
 Quick Navi system 152–153

R

Rating menu item 168–169
 Rating Set (Custom Key) menu item 169
 Raw format 45–47
 correcting images taken with bad camera settings 45
 incompatibility with other settings 46, 47
 in general 45
 Raw & JPEG option for File Format (Still Images) 46–47
 Raw+JPEG Save Image menu option 191
 Rear Sync flash setting 83–84
 Rec Control menu option 188, 189
 Record Setting menu item 111, 205–206
 Recover Image Database menu item 196
 Red Eye Reduction menu item 85
 Registered AF Area Hold option for control button 131, 154

- Registered AF Area Toggle option for control button 72, 131, 154
- Registered Faces Priority menu item 109
- Release without Card menu item 3, 115
- Remaining Images or Video Recording time displaying 197
- Remote control devices
 - Sony RM-SPR1 wired remote 248
 - Sony RMT-P1BT 239, 248–249
 - Sony RMT-VP1K infrared remote 248
 - Sony RM-VPR1 wired remote 247–248
 - Sony shooting grip, VCT-SGR1 249
 - Vello Wireless ShutterBoss Intervalometer 249–250
- Remote control of camera from computer 189–190
- Remote control of camera from smartphone or tablet 233–234
- Reset Network Settings menu item 240
- Resetting camera settings 197
- Resolution of still images 47
- Right button 157–158
 - assigning a function to 136, 157
 - using to activate Flash Mode menu 157
- Right/Left Eye Select menu item 70
- Rotate menu item 167
- S**
- Saturation
 - adjusting 92
 - Picture Profile adjustment for 104
- Saturation (Picture Profile parameter) 104
- Saving frame from movie in camera 171–172
- Saving settings with Memory Recall mode 40–41
- Scene mode 31–38
 - incompatibility with other settings 31
 - methods of selecting a scene type 31–32
- Scene recognition feature 20–21
- Scene Selection menu item 32, 51
- Sekonic C-700 color meter 86
- Select REC Folder menu item 195–196
- Self-portrait Timer menu item 110, 159
- Self-timer (Continuous) setting of drive mode 55–56
 - incompatibility with other settings 55
 - using to take multiple shots 55
- Self-timer During Bracket menu option 57
- Self-timer setting of drive mode 54–55
 - basic procedure for using 16, 54
 - using with exposure bracketing 57
- Send to Computer menu item 230, 236
- Send to Smartphone Function menu item 230, 236
- Send to Smartphone menu option 230
 - activating with Function button 232
- Set File Name menu item 194
- Setting Reset menu item 197
- Setup menu 177–197
- Sharpness
 - adjusting 92
- Shooting grip
 - Sony VCT-SGR1 249
- Shooting modes
 - list of 20
- Shooting Start Display menu option 127
- Shooting still images during movie recording 207–208, 223–224
- Shooting Timing Display menu option 127
- Shutter Auto White Balance Lock menu item 105
- Shutter Priority exposure mode for movies 202–203
- Shutter Priority mode 26–27
- Shutter release button 8, 146–147
- Shutter speed
 - range of available settings 21, 23, 25, 26–27, 30, 114
 - range of available settings for movies 202, 203
- Shutter Type menu option 114
- Silhouettes
 - using Manual exposure mode for 31
- Single Burst Self-timer menu option 54
- Single burst shooting 54
- Single exposure bracketing setting of drive mode 56–57
- Single shooting setting for Drive Mode 52
- Single-shot AF setting 14–15
- Slide Show menu item 173–174
- Slow-motion video
 - creating using 60p or 120p setting 206
- Slow Sync flash setting 83–84
- Smart Teleconverter option for control button 118, 134
- Smart Zoom 116–117
 - not available for movie recording 213
- Smile Shutter menu item 109
- Soft Skin Effect menu item 15, 104–105
 - requirement to have face detection turned on 105–106
- Software for use with RX100 VII camera
 - where to download 2
- Sony RX100 VII camera
 - features of 1
 - items supplied with in box 2
- Sounds made by camera
 - silencing 145
- Speaker 162
 - location of 10
- Specify Printing menu item 169–170
- Sports Action scene type setting 33
- Spot AEL Hold option for control button 133
- Spot AEL Toggle option for control button 133
- Spot focus for movie recording 143, 160, 218
- Spot Metering Point menu item 79, 80
- Spot option for Metering Mode 78
 - distinguishing spot circle from focus frame 78–79
 - linking spot circle to movable focus frame 79, 80
- Spotting scope, connecting camera to 241
- SSID/PW Reset menu option 238
- SteadyShot (Movies) menu item 113, 210–211
 - cropping of video frame with 210
- SteadyShot (Still Images) menu item 115
- Step-by-step guides

- adding location information to images 234–235
- connecting with NFC 232
- creating time-lapse movie from Interval Shooting Function shots 59
- high frame rate video recording 219
- sending images to a computer 228
- sending images to a smartphone 230
- taking pictures in Auto mode 10
- using Interval Shooting Function option 58–59
- using smartphone as remote control for RX100 VII 233
- using Sony's Bluetooth remote control device 239
- Step Zoom option 119, 147
 - not available for movies 119, 213, 225
 - not available with zoom lever 147
- Still images
 - capturing during movie recording 207, 223–224
- Still Image Save Destination menu option 115, 191
- Street photography 241
 - extracting still frames from 4K video for 241
- Subject Detection menu item 70
 - incompatibility of animal eye detection with other settings 70
- Subject Detection option for control button 132
- Sunset scene type setting 34
- Superior Auto mode 15, 21–22
 - difference from Intelligent Auto mode 15, 22
- Sweep Panorama mode 38–40
 - incompatibility with other settings 38
 - using exposure compensation in 39
- Switch Right/Left Eye option for control button 132
- Switch Vertical/Horizontal AF Area menu item 69–70

T

Tables

- behavior of RX100 VII for video recording in various modes 215
- Camera Settings1 menu items that affect movies and can be adjusted for movie recording 216
- functions of Control ring with Standard setting 137, 148
- number of images that fit on 64 GB memory card 48
- settings on RX100 VII for recording video to Shogun recorder 222
- suggested control assignments for movie recording 224
- suggested menu settings for recording movies in Movie mode 224
- suggested settings for Auto Mode still images 12
- suggested settings for movies in Intelligent Auto mode 17
- suggested settings for panoramas 39
- zoom ranges at various settings for JPEG Image Size 118
- TC Format menu option 186
- TC Make menu option 186
- TC Output menu option 188
- TC Preset menu option 186–187
- TC Run menu option 186
- TC/UB Display Setting menu option 185–186
- TC/UB Settings menu item 184–186

- Telescope, connecting camera to 240
- Television set, playing images and videos on 242
- Tethered shooting 189–190, 253
- Tile Menu menu option 179
- Time code
 - in general 184
 - options for displaying and recording 185
 - procedure for resetting 248
 - setting for output through HDMI port 188
- Time-lapse photography 255
 - using Interval Shooting Function menu item for 58
 - using PC Remote option with Imaging Edge software for 190
- Time zone
 - selecting 192
- Touch focus 14, 160–161
- Touch Focus menu item 64, 143
 - incompatibility with other settings 143
- Touch Operation menu item 14
- Touch Pad Settings menu item 161, 183
- Touch Panel/Pad Menu Item 182–183
- Touch Shutter menu item 143
 - incompatibility with other settings 143
- Touch Shutter menu option 160
- Touch Tracking menu item 68, 143–144
 - differences from Tracking option for Focus Area 68
 - incompatibility with other settings 69, 144
- Tracking On option for control button 68, 132
- Tracking option for Focus Area 68–69
 - incompatibility with other settings 69
- Tripod socket 10, 162
- Tv notation for shutter speed 27, 28

U

- UB Preset menu option 186
- UB Time Record menu option 187
- Up button. See Display button
- USB Connection menu item 189–190
- USB LUN Setting menu item 191
- USB Power Supply menu item 191
- User Bit option for movie recording 185
- UURig R017 Camera Microphone Extension Bottom Bracket
 - using to attach microphone to RX100 VII 251

V

- Version menu item 197–198
- VGA setting for Image Size
 - available only with 4:3 aspect ratio 48
- Viewfinder. See Electronic viewfinder
- Viewfinder Brightness menu item 149, 178
- VIEW icon on screen to indicate Setting Effect Off 127
- View Mode menu item 18, 174–175
- View on TV menu item 236
- Volume Settings menu item 179

W

- Wheel Lock menu item 144, 153–154
- White balance bracketing setting of drive mode
 - changing order of exposures 57
- White balance comparison chart 88
- White Balance menu item 85–88
 - adjusting setting using Raw software 87
 - adjusting setting with color axes 87–88
 - available settings 85
- Wide option for Focus Area 65
- Wi-Fi Settings menu item 229–230, 238–239
- Wind Noise Reduction menu item 113, 210
- WPS Push menu option 229–230, 238
- Wrist strap
 - attaching to camera 2
- Write Date menu item 145–146
 - incompatibility with other settings 145

X

- XAVC S 4K format for movies 204
- XAVC S HD format for movies 205
- XAVC S video formats
 - special memory card requirements for 4, 200

Z

- Zebra Setting menu item 123–124
 - saving custom settings 123–124
- Zone focusing 131
- Zone option for Focus Area 65–66
- Zoom Function on Ring menu item 119–120
 - using with movie recording 213
- Zoom lever 8, 147
 - using to display index screen 147
 - using to enlarge images 147
- Zoom Setting menu item 116–119
 - incompatibility with other settings 118
 - using with movie recording 213
- Zoom Speed menu item 119
 - using with movie recording 213