

Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	2
Charging and Inserting the Battery	2
Choosing and Inserting a Memory Card	3
Setting the Language, Date, and Time	6
CHAPTER 2: BASIC OPERATIONS	8
Introduction to Main Controls	8
Top of Camera	8
Back of Camera	8
Front of Camera	9
Right Side of Camera	9
Left Side of Camera	10
Bottom of Camera	10
Taking Pictures in Intelligent Auto Mode	10
Variations from Fully Automatic	13
Focus	13
Focus Modes	13
Other Settings	14
Flash	15
Drive Mode: Self-Timer and Continuous Shooting	16
Overview of Movie Recording	17
Viewing Pictures	18
Review While in Shooting Mode	18
Reviewing Images in Playback Mode	18
Playing Movies	19
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	20
Intelligent Auto Mode	20
Superior Auto Mode	21
Program Mode	23
Aperture Priority Mode	24
Shutter Priority Mode	26
Manual Exposure Mode	27
Scene Mode	31

Portrait	32
Sports Action	33
Macro	33
Landscape.	34
Sunset	34
Night Scene	35
Hand-Held Twilight	35
Night Portrait	35
Anti Motion Blur	36
Pet	36
Gourmet.	37
Fireworks	37
High Sensitivity	37
Sweep Panorama Mode	38
Memory Recall Mode	40

CHAPTER 4: THE CAMERA SETTINGS1 MENU

43

File Format (Still Images)	45
JPEG Quality	47
JPEG Image Size	47
Aspect Ratio	48
Panorama Size and Panorama Direction	50
Long Exposure Noise Reduction	50
High ISO Noise Reduction.	50
Color Space	51
Auto Mode	51
Scene Selection	51
Drive Mode.	51
Single Shooting.	52
Continuous Shooting.	52
Single Burst Shooting.	54
Self-Timer	54
Self-Timer (Continuous)	55
Continuous Exposure Bracketing	55
Single Exposure Bracketing	56
White Balance Bracketing	56
DRO Bracketing	57
Single Burst Self-timer	57
Bracket Settings	57
Interval Shooting Function	58
Recall	60
Memory	60
Focus Mode	61
Single-Shot AF	61
Automatic AF	61
Continuous AF	62
DMF	62
Manual Focus	63
Focus Area	64
Wide	65
Zone	65
Center	66
Flexible Spot	66
Expand Flexible Spot	67
Tracking	68
Focus Area Limit	69

Switch Vertical/Horizontal AF Area	69
AF Illuminator	70
Face/Eye AF Settings.	70
Pre-AF	71
AF Area Registration.	71
Delete Registered AF Area.	72
Focus Frame Color.	72
AF Area Auto Clear.	72
Display Continuous AF Area.	72
Phase Detection Area	73
Circulation of Focus Point	73
Exposure Compensation	74
ISO Setting	74
ISO.	75
Multi Frame Noise Reduction	75
ISO Range Limit.	77
ISO Auto Minimum Shutter Speed.	77
Metering Mode	78
Face Priority in Multi Metering	79
Spot Metering Point	80
AEL with Shutter.	80
Exposure Standard Adjustment.	81
Flash Mode.	82
Flash Off.	82
Autoflash	82
Fill-Flash.	82
Slow Sync	83
Rear Sync	83
Flash Compensation.	84
Red Eye Reduction.	85
White Balance	85
Priority Set in Auto White Balance	88
DRO/Auto HDR	88
Creative Style	91
Adjusting Contrast, Saturation, and Sharpness	92
Standard	94
Vivid	94
Neutral	94
Clear.	94
Deep.	94
Light.	94
Portrait	94
Landscape.	94
Sunset.	94
Night Scene	94
Autumn Leaves	94
B/W	94
Sepia.	94
Picture Effect.	95
Off.	95
Toy Camera	95
Pop Color	96
Posterization	96
Retro Photo	96
Soft High-Key	97
Partial Color.	97
High Contrast Monochrome	97

Soft Focus	98
HDR Painting	98
Rich-Tone Monochrome	98
Miniature Effect	99
Watercolor	99
Illustration.	99
Picture Profile	100
Soft Skin Effect.	104
Shutter Auto White Balance Lock	105
Focus Magnifier	106
Focus Magnification Time	107
Initial Focus Magnification	107
MF Assist	107
Peaking Setting	108
Face Registration.	109
Registered Faces Priority	109
Smile Shutter.	109
Auto Object Framing	109
Self-portrait Timer	110

CHAPTER 5: THE CAMERA SETTINGS2 MENU

111

Exposure Mode (Movies)	111
Exposure Mode (HFR)	111
File Format (Movies)	111
Record Setting	111
HFR Settings	112
Quality (Dual Recording)	112
Image Size (Dual Recording)	112
Auto Dual Recording	112
Proxy Recording	112
AF Drive Speed	112
AF Tracking Sensitivity.	112
Auto Slow Shutter	112
Initial Focus Magnification (Movies)	113
Audio Recording.	113
Audio Recording Level	113
Wind Noise Reduction.	113
SteadyShot (Movies).	113
Marker Display	113
Marker Settings	113
Movie w/Shutter.	114
Shutter Type	114
Release without Card	115
SteadyShot (Still Images)	115
Zoom Setting	116
Zoom Speed	119
Zoom Function on Ring	119
Display Button	120
Finder/Monitor.	122
Zebra Setting	123
Grid Line	124
Rule of Thirds Grid	125
Square Grid	125
Diagonal Plus Square Grid	125
Exposure Settings Guide	125
Live View Display	126

Shooting Start Display 127

Shooting Timing Display 127

Auto Review 127

Custom Key (Still Images/Movies/Playback) 128

 Custom Key (Still Images) 128

 C (Custom) Button 129

 AF/MF Control Hold 131

 AF/MF Control Toggle 131

 Focus Standard 131

 Registered AF Area Hold/Registered AF Area Toggle 131

 Tracking On 132

 Eye AF 132

 Subject Detection 132

 Switch Right/Left Eye 132

 AEL Hold 133

 AEL Toggle 133

 Spot AEL Hold 133

 Spot AEL Toggle 133

 AWB Lock Hold/AWB Lock Toggle 133

 In-Camera Guide 134

 Movie 134

 Smart Teleconverter 134

 Bright Monitoring 135

 My Dial 1/2/3 During Hold 135

 My Dial 1—2—3 135

 Toggle My Dial 1/2/3 136

 Playback 136

 Display My Menu 136

 Not Set 136

 Center Button 136

 Left Button 136

 Right Button 136

 Control Ring 136

 Custom Key (Movies) 137

 Custom Button 138

 Center Button 139

 Left Button 139

 Right Button 139

 Control Ring 139

 Custom Key (Playback) 139

 Function Menu Settings 139

 My Dial Settings 141

 Av/Tv Rotate 142

 Function of Touch Operation 143

 Touch Shutter 143

 Touch Focus 143

 Touch Tracking 143

 Movie Button 144

 Wheel Lock 144

 Audio Signals 145

 Write Date 145

CHAPTER 6: PHYSICAL CONTROLS

Mode Dial 146

Shutter Release Button 146

Zoom Lever 147

Power Button	147
AF Illuminator/Self-Timer Lamp	147
Control Ring	147
Electronic Viewfinder	149
Built-in Flash and Flash Pop-up Switch	150
Playback Button	150
Movie Button	150
Menu Button	151
Function Button	151
Shooting Mode: Function Menu	151
Quick Navi System	152
Wheel Lock	153
AF Area Registration	154
Playback Mode: Send to Smartphone	154
Custom/Delete Button	154
Control Wheel and Its Buttons	155
Control Wheel	155
Center Button	156
Direction Buttons	156
Up Button: Display	156
Right Button: Flash Mode	157
Down Button: Exposure Compensation	157
Left Button: Self-Timer/Drive Mode	159
LCD Screen: Tilting Features	159
LCD Screen: Touch Screen Features	160
Ports and Other Items on Right and Left Sides of Camera	161

CHAPTER 7: PLAYBACK

163

Normal Playback	163
Index View and Enlarging Images	163
Playback Display Screens	165
Deleting Images with the Delete Button	166
Playback Menu	166
Protect	167
Rotate	167
Delete	168
Rating	168
Rating Set (Custom Key)	169
Specify Printing	169
Beauty Effect	170
Photo Capture	171
Enlarge Image	171
Enlarge Initial Magnification	172
Enlarge Initial Position	172
Motion Interval Adjustment	172
Continuous Playback for Interval Shooting/Playback Speed for Interval Shooting	173
Slide Show	173
View Mode	174
Image Index	175
Display as Group	175
Display Rotation	176

CHAPTER 8: THE SETUP MENU AND MY MENU

177

Setup Menu	177
Monitor Brightness	177

Viewfinder Brightness	178
Finder Color Temperature	178
Gamma Display Assist	178
Volume Settings	179
Tile Menu	179
Mode Dial Guide	180
Delete Confirmation	180
Display Quality	180
Auto Monitor Off	181
Power Save Start Time	181
Function for VF Close	181
Auto Power Off Temperature	182
NTSC/PAL Selector	182
Touch Operation	182
Touch Panel/Pad	182
Touch Pad Settings	183
Demo Mode	184
TC/UB (Time Code/User Bit) Settings	184
TC/UB Display Setting	185
TC Preset	186
UB Preset	186
TC Format	186
TC Run	186
TC Make	186
UB Time Record	187
HDMI Settings	187
HDMI Resolution	187
24p/60p Output	187
HDMI Information Display	187
TC Output	188
Rec Control	188
CTRL for HDMI	188
4K Output Select	188
Memory Card + HDMI	189
HDMI Only (30p)	189
HDMI Only (24p)	189
HDMI Only (25p)	189
USB Connection	189
USB LUN Setting	191
USB Power Supply	191
PC Remote Settings	191
Language	192
Date/Time Setup	192
Area Setting	192
Copyright Info	193
Format	193
File/Folder Settings (Still Images)	194
File Number	194
Set File Name	194
Select REC Folder	195
New Folder	195
Folder Name	195
File Settings (Movies)	196
File Number	196
Series Counter Reset	196
File Name Format	196
Title Name Settings	196

Recover Image Database	196
Display Media Info	197
Version	197
Setting Reset	197
My Menu	198

CHAPTER 9: MOTION PICTURES

200

Movie-Making Overview	200
Details of Settings for Shooting Movies	201
Movie-Related Menu Options	201
Exposure Mode (Movies)	201
Program Auto	202
Aperture Priority	202
Shutter Priority	202
Manual Exposure	203
Exposure Mode (HFR)	204
File Format (Movies)	204
XAVC S 4K	204
XAVC S HD	205
AVCHD	205
Record Setting	205
XAVC S 4K	205
XAVC S HD	206
AVCHD	206
HFR Settings	207
Quality (Dual Recording)	207
Image Size (Dual Recording)	207
Auto Dual Recording	207
Proxy Recording	207
AF Drive Speed	208
AF Tracking Sensitivity	208
Auto Slow Shutter	208
Initial Focus Magnification (Movies)	209
Audio Recording	209
Audio Recording Level	209
Audio Level Display	210
Wind Noise Reduction	210
SteadyShot (Movies)	210
Marker Display	211
Marker Settings	211
Movie w/Shutter	212
Zoom Setting	213
Zoom Speed	213
Zoom Function on Ring	213
Zebra Setting	213
Function Menu Settings	213
Movie Button	213
Effects of Mode Dial Position on Recording Movies	213
Effects of Camera Settings1 Menu Settings on Recording Movies	216
Effects of Physical Controls When Recording Movies	217
High Frame Rate Recording	219
Recording to an External Video Recorder	221
Shooting Still Images During Video Recording	223
Summary of Options for Recording Movies	223
Other Settings and Controls for Movies	225
Movie Playback	225

Motion Shot Feature 226
 Editing Movies 227

CHAPTER 10: WI-FI, BLUETOOTH, AND OTHER TOPICS 228

Wi-Fi Features 228
 Sending Images to a Computer 228
 Sending Images to a Smartphone 230
 Connecting with NFC. 232
 Using a Smartphone or Tablet as a Remote Control 233
 Bluetooth Features 234
 The Network Menu 236
 Send to Smartphone Function. 236
 Send to Computer 236
 View on TV 236
 Control with Smartphone 237
 Airplane Mode 237
 Wi-Fi Settings 238
 WPS Push. 238
 Access Point Settings 238
 Display MAC Address 238
 SSID/PW Reset 238
 Bluetooth Settings 239
 Location Information Link Setting 239
 Bluetooth Remote Control 239
 Edit Device Name. 240
 Reset Network Settings. 240
 Other Topics 240
 Astrophotography and Digiscoping 240
 Street Photography. 241
 Infrared Photography. 242
 Connecting to a Television Set. 242

APPENDIX A: ACCESSORIES 244

Cases 244
 Batteries and Chargers 245
 Add-On Filters and Lenses. 246
 Grips 247
 Remote Controls. 247
 External Flash 250
 External Video Recorder. 250
 External Microphones 251
 External LCD Monitor 252

APPENDIX B: QUICK TIPS 253

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 256

Websites and Videos. 256
 Digital Photography Review 256
 Reviews and Demonstrations of the RX100 VII 256
 White Knight Press 256
 The Official Sony Site 256
 Other Resources 257