

# Contents

INTRODUCTION	1
CHAPTER 1: PRELIMINARY SETUP	3
Charging and Inserting the Battery . . . . .	3
Choosing and Inserting a Memory Card . . . . .	4
Setting the Date, Time, and Language . . . . .	7
CHAPTER 2: BASIC OPERATIONS	9
Introduction to Main Controls . . . . .	9
Top of Camera . . . . .	9
Back of Camera . . . . .	10
Front of Camera . . . . .	11
Left Side of Camera . . . . .	11
Right Side of Camera . . . . .	12
Bottom of Camera . . . . .	12
Taking Pictures in Intelligent Auto Mode . . . . .	13
Variations from Fully Automatic . . . . .	15
FOCUS . . . . .	15
FOCUS MODES . . . . .	15
TRACKING AUTOFOCUS . . . . .	16
Other Settings . . . . .	16
FLASH . . . . .	16
Drive Mode: Self-Timer and Continuous Shooting . . . . .	17
Overview of Movie Recording . . . . .	18
Viewing Pictures . . . . .	19
Review While in Shooting Mode . . . . .	19
Reviewing Images in Playback Mode . . . . .	19
Playing Movies . . . . .	20
CHAPTER 3: SHOOTING MODES FOR STILL IMAGES	21
Intelligent Auto Mode . . . . .	21
Program Mode . . . . .	22

Aperture Priority Mode . . . . .	23
Shutter Priority Mode . . . . .	25
Manual Exposure Mode . . . . .	26
Memory Recall Mode . . . . .	29

## CHAPTER 4: THE CAMERA SETTINGS1 MENU

32

File Format (Still Images) . . . . .	34
Raw File Type. . . . .	36
JPEG Quality . . . . .	36
JPEG Image Size . . . . .	37
Aspect Ratio . . . . .	38
APS-C/Super 35mm . . . . .	39
Long Exposure Noise Reduction . . . . .	40
High ISO Noise Reduction. . . . .	41
Color Space . . . . .	41
Lens Compensation . . . . .	41
Shading Compensation . . . . .	41
Chromatic Aberration Compensation . . . . .	41
Distortion Compensation . . . . .	42
Drive Mode. . . . .	42
Single Shooting. . . . .	42
Continuous Shooting. . . . .	42
Self-Timer . . . . .	45
Self-Timer (Continuous) . . . . .	45
Continuous Exposure Bracketing . . . . .	46
Single Exposure Bracketing . . . . .	46
White Balance Bracketing . . . . .	47
DRO Bracketing . . . . .	47
Bracket Settings . . . . .	47
Interval Shooting Function . . . . .	48
Recall. . . . .	50
Memory . . . . .	51
Register Custom Shooting Settings. . . . .	51
Focus Mode . . . . .	53
Single-Shot AF . . . . .	53
Automatic AF . . . . .	54
Continuous AF . . . . .	54
DMF . . . . .	55
Manual Focus . . . . .	55
Priority Set in AF-S . . . . .	57
Priority Set in AF-C. . . . .	57
Focus Area . . . . .	58
Wide. . . . .	58
Zone. . . . .	59
Center. . . . .	59
Flexible Spot . . . . .	60
Expand Flexible Spot . . . . .	61
Tracking . . . . .	61
Focus Area Limit . . . . .	62
Switch Vertical/Horizontal AF Area . . . . .	63
AF Illuminator . . . . .	64
Face/Eye AF Settings. . . . .	64
AF Tracking Sensitivity (Still Images) . . . . .	65
Aperture Drive in AF (Still Images) . . . . .	65
AF w/Shutter (Still Images) . . . . .	66
Pre-AF (Still Images) . . . . .	66

Eye-Start AF (Still Images) . . . . .	66
AF Area Registration . . . . .	66
Delete Registered AF Area . . . . .	67
Focus Frame Color . . . . .	67
AF Area Auto Clear . . . . .	67
Display Continuous AF Area . . . . .	67
Circulation of Focus Point . . . . .	68
AF Frame Move Amount . . . . .	68
AF Micro Adjustment . . . . .	68
Exposure Compensation . . . . .	69
Reset EV Compensation . . . . .	70
ISO Setting . . . . .	71
ISO . . . . .	71
ISO Range Limit . . . . .	72
ISO Auto Minimum Shutter Speed . . . . .	72
Metering Mode . . . . .	73
Face Priority in Multi Metering . . . . .	75
Spot Metering Point . . . . .	75
Exposure Step . . . . .	75
AEL with Shutter . . . . .	76
Exposure Standard Adjustment . . . . .	76
Flash Mode . . . . .	77
Flash Off . . . . .	77
Autoflash . . . . .	77
Fill-Flash . . . . .	78
Slow Sync . . . . .	78
Rear Sync . . . . .	79
Flash Compensation . . . . .	80
Exposure Compensation Setting . . . . .	80
Wireless Flash . . . . .	80
Using Sony's Light-Based Wireless Protocol . . . . .	80
Using Sony's Radio-Based Flash System . . . . .	81
Red Eye Reduction . . . . .	82
External Flash Setting . . . . .	82
White Balance . . . . .	83
Priority Set in Auto White Balance . . . . .	86
DRO/Auto HDR . . . . .	86
Creative Style . . . . .	89
Adjusting Contrast, Saturation, and Sharpness . . . . .	90
Standard . . . . .	92
Vivid . . . . .	92
Neutral . . . . .	92
Clear . . . . .	92
Deep . . . . .	92
Light . . . . .	93
Portrait . . . . .	93
Landscape . . . . .	93
Sunset . . . . .	93
Night Scene . . . . .	93
Autumn Leaves . . . . .	93
B/W . . . . .	93
Sepia . . . . .	93
Picture Effect . . . . .	93
Off . . . . .	94
Toy Camera . . . . .	94
Pop Color . . . . .	94
Posterization . . . . .	94

Retro Photo . . . . .	94
Soft High-Key . . . . .	95
Partial Color . . . . .	95
High Contrast Monochrome . . . . .	95
Rich-Tone Monochrome . . . . .	95
Picture Profile . . . . .	96
Shutter Auto White Balance Lock . . . . .	100
Focus Magnifier . . . . .	100
Focus Magnification Time . . . . .	102
Initial Focus Magnification . . . . .	102
AF in Focus Magnifier . . . . .	102
MF Assist . . . . .	102
Peaking Setting . . . . .	103
Anti-Flicker Shooting . . . . .	104
Face Registration . . . . .	104
Registered Faces Priority . . . . .	104

## CHAPTER 5: THE CAMERA SETTINGS2 MENU

105

Exposure Mode (Movies) . . . . .	105
Exposure Mode (S & Q) . . . . .	105
File Format (Movies) . . . . .	105
Record Setting . . . . .	105
S & Q Settings . . . . .	106
Proxy Recording . . . . .	106
AF Transition Speed . . . . .	106
AF Subject Shift Sensitivity . . . . .	106
Auto Slow Shutter . . . . .	106
Initial Focus Magnification (Movies) . . . . .	106
Audio Recording . . . . .	106
Audio Recording Level . . . . .	106
Audio Level Display . . . . .	107
Audio Out Timing . . . . .	107
Wind Noise Reduction . . . . .	107
Marker Display . . . . .	107
Marker Settings . . . . .	107
Video Light Mode . . . . .	107
Movie w/Shutter . . . . .	108
Silent Shooting (Still Images) . . . . .	108
Release without Lens . . . . .	108
Release without Card . . . . .	108
SteadyShot . . . . .	109
SteadyShot Settings . . . . .	109
Zoom . . . . .	110
Zoom Setting . . . . .	111
Zoom Ring Rotate . . . . .	113
Display Button . . . . .	114
Finder/Monitor . . . . .	116
Finder Frame Rate . . . . .	116
Zebra Setting . . . . .	117
Grid Line . . . . .	118
Rule of Thirds Grid . . . . .	119
Square Grid . . . . .	119
Diagonal Plus Square Grid . . . . .	119
Exposure Settings Guide . . . . .	119
Live View Display . . . . .	120
Continuous Shooting Length . . . . .	121

Auto Review . . . . .	121
Custom Key (Still Images) . . . . .	122
AF-ON Button . . . . .	123
Recall Custom Hold 1, 2, and 3 . . . . .	125
AF/MF Control Hold . . . . .	125
AF/MF Control Toggle . . . . .	126
Focus Standard . . . . .	126
Registered AF Area Hold/Registered AF Area Toggle/Registered AF Area + AF On. . . . .	126
Tracking On . . . . .	126
Eye AF . . . . .	127
Subject Detection . . . . .	127
Switch Right/Left Eye . . . . .	128
Switch AF Frame Move Hold . . . . .	128
AF On. . . . .	128
Focus Hold . . . . .	128
AEL Hold . . . . .	128
AEL Toggle . . . . .	129
Spot AEL Hold . . . . .	129
Spot AEL Toggle . . . . .	129
Wireless Test Flash . . . . .	129
FEL Lock Hold/FEL Lock Toggle/FEL Lock/AEL Hold/FEL Lock/AEL Toggle . . . . .	129
AWB Lock Hold/AWB Lock Toggle. . . . .	130
In-Camera Guide. . . . .	130
Movie (Shooting) . . . . .	131
Aperture Preview . . . . .	131
Shot Result Preview . . . . .	131
Bright Monitoring . . . . .	131
My Dial 1/2/3 During Hold . . . . .	131
My Dial 1—2—3 . . . . .	132
Toggle My Dial 1/2/3. . . . .	132
Playback . . . . .	132
MENU. . . . .	132
Display My Menu . . . . .	133
Not Set . . . . .	133
Custom (C) Button . . . . .	133
Center Button. . . . .	133
Left Button . . . . .	133
Right Button . . . . .	134
Down Button . . . . .	134
Focus Hold Button . . . . .	134
Custom Key (Movies) . . . . .	134
AF-ON, Custom (C), Movie, and Focus Hold Buttons: . . . . .	134
Center Button. . . . .	135
Left, Right, and Down Buttons . . . . .	135
Custom Key (Playback) . . . . .	135
Function Menu Settings. . . . .	136
My Dial Settings . . . . .	138
Dial/Wheel Setup . . . . .	139
Av/Tv Rotate . . . . .	139
Dial/Wheel EV Compensation. . . . .	140
Function Ring (Lens). . . . .	140
Function of Touch Operation . . . . .	140
Touch Shutter. . . . .	140
Touch Focus. . . . .	141
Touch Tracking . . . . .	141
Dial/Wheel Lock . . . . .	141
Audio Signals . . . . .	142

## CHAPTER 6: PHYSICAL CONTROLS

143

Shutter Button . . . . .	143
On/Off Switch . . . . .	143
Mode Dial . . . . .	143
Movie Button . . . . .	144
Multi Interface Shoe . . . . .	144
Sensor Plane Indicator . . . . .	144
Speaker . . . . .	144
Viewfinder and Eye Sensor . . . . .	144
Diopter Adjustment Wheel . . . . .	145
Menu Button . . . . .	145
Control Dial . . . . .	145
AF-ON Button . . . . .	146
Function Button . . . . .	146
Menu System Navigation . . . . .	146
Function Menu . . . . .	146
Quick Navi System . . . . .	147
Dial/Wheel Lock . . . . .	148
Send to Smartphone . . . . .	149
Playback Button . . . . .	149
Custom/Delete Button . . . . .	149
Control Wheel and Its Buttons . . . . .	149
Control Wheel . . . . .	149
Center Button . . . . .	150
Direction Buttons . . . . .	151
Up Button: Display . . . . .	151
Left Button . . . . .	151
Right Button . . . . .	151
Down Button . . . . .	151
LCD Monitor . . . . .	151
Tilting and Swiveling Features . . . . .	151
Touch Screen Features . . . . .	152
Ports for Audio, HDMI, and Other Functions . . . . .	154
NFC Active Area . . . . .	154
Lens Mount and Lens Release Button . . . . .	155
AF Illuminator/Self-Timer Lamp . . . . .	155
Microphone . . . . .	155
Bottom of Camera . . . . .	155

## CHAPTER 7: PLAYBACK

156

Normal Playback . . . . .	156
Index View and Enlarging Images . . . . .	156
Playback Display Screens . . . . .	158
Deleting Images with the Delete Button . . . . .	159
Playback Menu . . . . .	159
Protect . . . . .	160
Rotate . . . . .	161
Delete . . . . .	161
Rating . . . . .	161
Rating Set (Custom Key) . . . . .	162
Specify Printing . . . . .	162
Photo Capture . . . . .	164
Enlarge Image . . . . .	164
Enlarge Initial Magnification . . . . .	165
Enlarge Initial Position . . . . .	165

Continuous Playback for Interval Shooting/Playback Speed for Interval Shooting . . . . . 165

Slide Show . . . . . 166

View Mode . . . . . 166

Image Index. . . . . 167

Display as Group . . . . . 168

Display Rotation . . . . . 169

Image Jump Setting . . . . . 169

CHAPTER 8: THE SETUP MENU AND MY MENU 171

Setup Menu . . . . . 171

    Monitor Brightness . . . . . 171

    Viewfinder Brightness . . . . . 172

    Finder Color Temperature . . . . . 172

    Gamma Display Assist . . . . . 172

    Volume Settings . . . . . 173

    Delete Confirmation . . . . . 173

    Display Quality . . . . . 174

    Power Save Start Time . . . . . 174

    Auto Power Off Temperature. . . . . 174

    NTSC/PAL Selector . . . . . 175

    Cleaning Mode . . . . . 175

    Touch Operation . . . . . 175

    Touch Panel/Pad . . . . . 176

    Touch Pad Settings . . . . . 176

    TC/UB (Time Code/User Bit) Settings . . . . . 177

        TC/UB Display Setting . . . . . 178

        TC Preset . . . . . 178

        UB Preset . . . . . 179

        TC Format . . . . . 179

        TC Run . . . . . 179

        TC Make . . . . . 179

        UB Time Record . . . . . 179

    HDMI Settings. . . . . 180

        HDMI Resolution. . . . . 180

        24p/60p Output . . . . . 180

        HDMI Information Display. . . . . 180

        TC Output . . . . . 181

        Rec Control. . . . . 181

        CTRL for HDMI . . . . . 181

    4K Output Select . . . . . 181

        Memory Card + HDMI . . . . . 181

        HDMI Only (30p) . . . . . 181

        HDMI Only (24p) . . . . . 182

        HDMI Only (25p) . . . . . 182

    USB Connection . . . . . 182

    USB LUN Setting . . . . . 182

    USB Power Supply . . . . . 182

    Language . . . . . 183

    Date/Time Setup . . . . . 183

    Area Setting. . . . . 183

    IPTC Information . . . . . 184

    Copyright Info . . . . . 184

    Write Serial Number . . . . . 185

    Format. . . . . 185

    Select REC Folder . . . . . 185

    New Folder . . . . . 186

File/Folder Settings (Still Images) . . . . .	186
File Number . . . . .	186
Set File Name . . . . .	186
Folder Name . . . . .	186
File Settings (Movies) . . . . .	187
File Number . . . . .	187
Series Counter Reset . . . . .	187
File Name Format . . . . .	187
Title Name Settings . . . . .	187
Recover Image Database . . . . .	188
Display Media Info . . . . .	188
Version . . . . .	188
Setting Reset . . . . .	189
My Menu . . . . .	189

## CHAPTER 9: MOTION PICTURES

191

Movie-Making Overview . . . . .	191
Details of Settings for Shooting Movies . . . . .	192
Movie-Related Menu Options . . . . .	192
Exposure Mode (Movies) . . . . .	192
Program Auto . . . . .	193
Aperture Priority . . . . .	193
Shutter Priority . . . . .	194
Manual Exposure . . . . .	194
Exposure Mode (S & Q) . . . . .	195
File Format (Movies) . . . . .	195
XAVC S 4K . . . . .	195
XAVC S HD . . . . .	196
Record Setting . . . . .	196
XAVC S 4K . . . . .	196
XAVC S HD . . . . .	196
S & Q Settings . . . . .	197
Proxy Recording . . . . .	197
AF Transition Speed . . . . .	198
AF Subject Shift Sensitivity . . . . .	198
Auto Slow Shutter . . . . .	198
Initial Focus Magnification (Movies) . . . . .	199
Audio Recording . . . . .	199
Audio Recording Level . . . . .	199
Audio Level Display . . . . .	200
Audio Out Timing . . . . .	200
Wind Noise Reduction . . . . .	200
Marker Display . . . . .	200
Marker Settings . . . . .	200
Video Light Mode . . . . .	201
Movie with Shutter . . . . .	202
Custom Key (Movies) . . . . .	202
Effects of Mode Dial Position on Recording Movies . . . . .	202
Effects of Camera Settings1 Menu Settings on Recording Movies . . . . .	204
Effects of Physical Controls When Recording Movies . . . . .	206
Slow and Quick Motion Recording . . . . .	208
Recording to an External Video Recorder . . . . .	209
Capturing Still Images from Video Recording . . . . .	211
Summary of Options for Recording Movies . . . . .	211
Other Settings and Controls for Movies . . . . .	213
Movie Playback . . . . .	213



Editing Movies . . . . . 214

Stabilizing Movies Using Software . . . . . 215

    Catalyst Browse . . . . . 215

    Movie Edit Add-on for Imaging Edge Mobile App . . . . . 215

## CHAPTER 10: WI-FI, BLUETOOTH, AND OTHER TOPICS 217

WI-FI AND BLUETOOTH FEATURES. . . . . 217

    Sending Images to a Smartphone . . . . . 217

    View and Transfer Images on Smartphone, Even When Camera Is Powered Off. . . . . 218

    Connecting with NFC. . . . . 219

    Sending Images to a Computer Using the FTP Transfer Function . . . . . 220

    Using a Smartphone or Tablet as a Remote Control . . . . . 222

    Remote Control of Camera from Computer (Tethered Shooting) . . . . . 223

    Adding Location Information to Images Using Bluetooth Connection from Smart Device. . . . . 225

    Using the a7C Camera as a Webcam. . . . . 227

The Network Menu . . . . . 227

    Send to Smartphone Function. . . . . 227

    FTP Transfer Function. . . . . 228

    Control with Smartphone . . . . . 228

    PC Remote Function . . . . . 229

        PC Remote . . . . . 229

        PC Remote Connect Method . . . . . 229

        Pairing . . . . . 229

    Airplane Mode . . . . . 229

    Wi-Fi Settings . . . . . 230

        WPS Push. . . . . 230

        Access Point Settings . . . . . 230

        Frequency Band . . . . . 230

        Display Wi-Fi Info. . . . . 230

        SSID/PW Reset . . . . . 230

    Bluetooth Settings . . . . . 231

    Location Information Link Setting . . . . . 231

    Bluetooth Remote Control . . . . . 231

    Edit Device Name. . . . . 232

    Import Root Certificate. . . . . 232

    Security (IPSEC) . . . . . 232

    Reset Network Settings. . . . . 232

Other Topics . . . . . 233

    Street Photography. . . . . 233

    Astrophotography and Digiscoping. . . . . 234

## APPENDIX A: LENSES AND ACCESSORIES 235

Lenses . . . . . 235

    E-mount Lenses for Full-frame Cameras . . . . . 235

    E-mount Lenses for APS-C Sensor Cameras . . . . . 235

    A-Mount Lenses. . . . . 237

Cases . . . . . 238

Batteries and Chargers . . . . . 238

AC Adapters and Other Power Sources. . . . . 239

External Flash Units and Flash Triggers . . . . . 241

Remote Controls. . . . . 244

External LCD Monitor . . . . . 244

External Microphones . . . . . 245

External Video Recorder. . . . . 247

APPENDIX B: QUICK TIPS 248

APPENDIX C: RESOURCES FOR FURTHER INFORMATION 252

- Websites and Videos . . . . . 252
- Digital Photography Review . . . . . 252
- Reviews and Demonstrations of the a7C . . . . . 252
- White Knight Press . . . . . 252
- Official Sony Sites . . . . . 252
- Other Resources . . . . . 253

**Index 254**